



665 2WD / 665 DTC 4WD

PART'S MANUAL

665 / 665 DTC


SECTION 1

ENGINE

FARMTRAC

DRIVING TRADITIONS TOMORROW

665 / 665 DTC

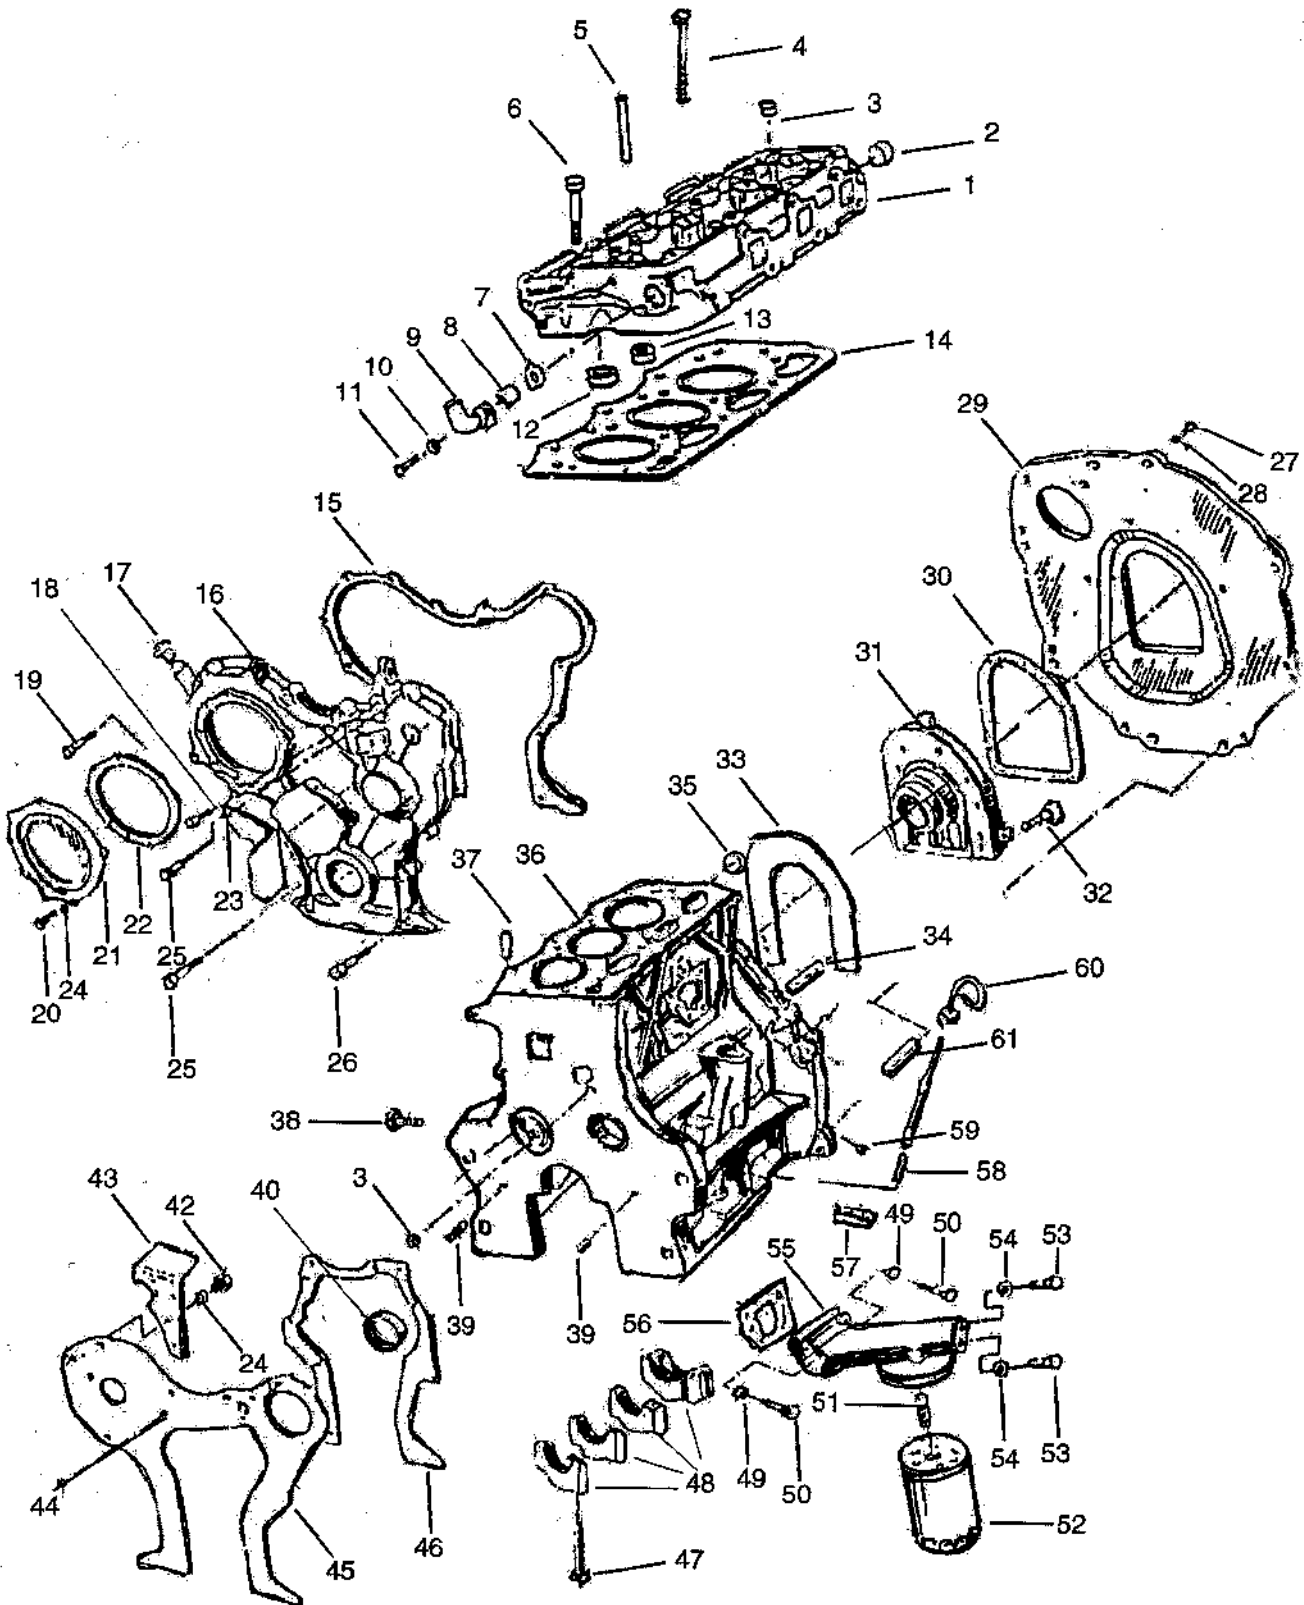

CYLINDER BLOCK & CYLINDER HEAD

1:1


Ⓢ - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL15194	Cylinder Head Assembly 665 (Includes items 2-4,12 and 13)	D10045340	1	1
2	390628S	Plug, (1.761) Cup	-	2	2
3	390624S	Plug, (1.12) Cup	-	4	4
4	ESL15204	Bolt, (M12x1.5x216) Cylinder Head	D10044570	4	4
5	ESL15225	Guide Valve	D10045010	6	6
6	ESL15203	Bolt, (M12x1.5x1.44) Cylinder Head	D10044580	10	10
7	ESL10502	Gasket Water Outlet	D10011760	1	1
8	ESL15207	Thermostart Assembly Water	-	1	1
9	ESL10503	Connection Water Outlet	D10011750	1	1
10	348065S	Washer, (5/16) Spring Lock	D10011770	2	2
11	ESL15208	Bolt, (M8x1.00x30-6.6) Hex Head	D10045190	2	2
12	ESL15196	Insert Intake Valve Seat	D10045040	3	3
13	ESL15199	Insert Exhaust Valve Seat	D10045030	-	-
14	ESL15205	Gasket Cylinder Head	D10044810	1	1
15	ESL13324	Gasket Cylinder Block Front Cover	D10010870	1	1
16	ESL15217	Cover Timing Gear	D10045020	1	1
17	ESL10060	Cap Engine Lube Oil Filter Tube	D10010930	1	1
18	304760S8	Bolt, (3/8-16x1.50) Hex Head	-	1	1
19	300878S8	Bolt, (5/16-18x2.50) Hex Head	-	3	3
20	304648S8	Bolt, (5/16-18x0.75) Hex Head	-	6	6
21	ESL13691	Cover Fuel Injection Pump Timing	D10044730	1	1
22	ESL15222	Gasket Timing Cover	D10044780	1	1
23	ESL10076	Deflector Fan Air LH	-	1	1
24	34806S8	Washer, (5/16) Spring Lock	-	12	12
25	300880S8	Bolt, (3/8-16x2.50) Hex Head	-	2	2
26	58639S8	Bolt, (3/8-16x2.25) Hex Head	-	8	8
27	304650S8	Bolt, (3/8-16x0.75) Hex Head	-	3	3
28	34807S8	Washer, (3/8) Spring Lock	-	3	3
29	ESL15220	Plate Engine Rear	D10044600	1	1
30	ESL15221	Gasket Rear Plate	D10044860	1	1
31	ESL15224	Carrier Seal Rear Oil Seal	D10061670	1	1
32	304682S8	Bolt, (5/16-18x1.00) Hex Head	-	8	8
33	ESL15223	Gasket Seal Carrier	D10044770	1	1
34	ESL15231	Pin Plain Dowel	D10044760	1	1
35	390626S	Plug, (1.50) Cup	-	5	5
-	390629S36	Plug, (1.814) Cup	-	AR	AR

CYLINDER BLOCK & CYLINDER HEAD

665 / 665 DTC

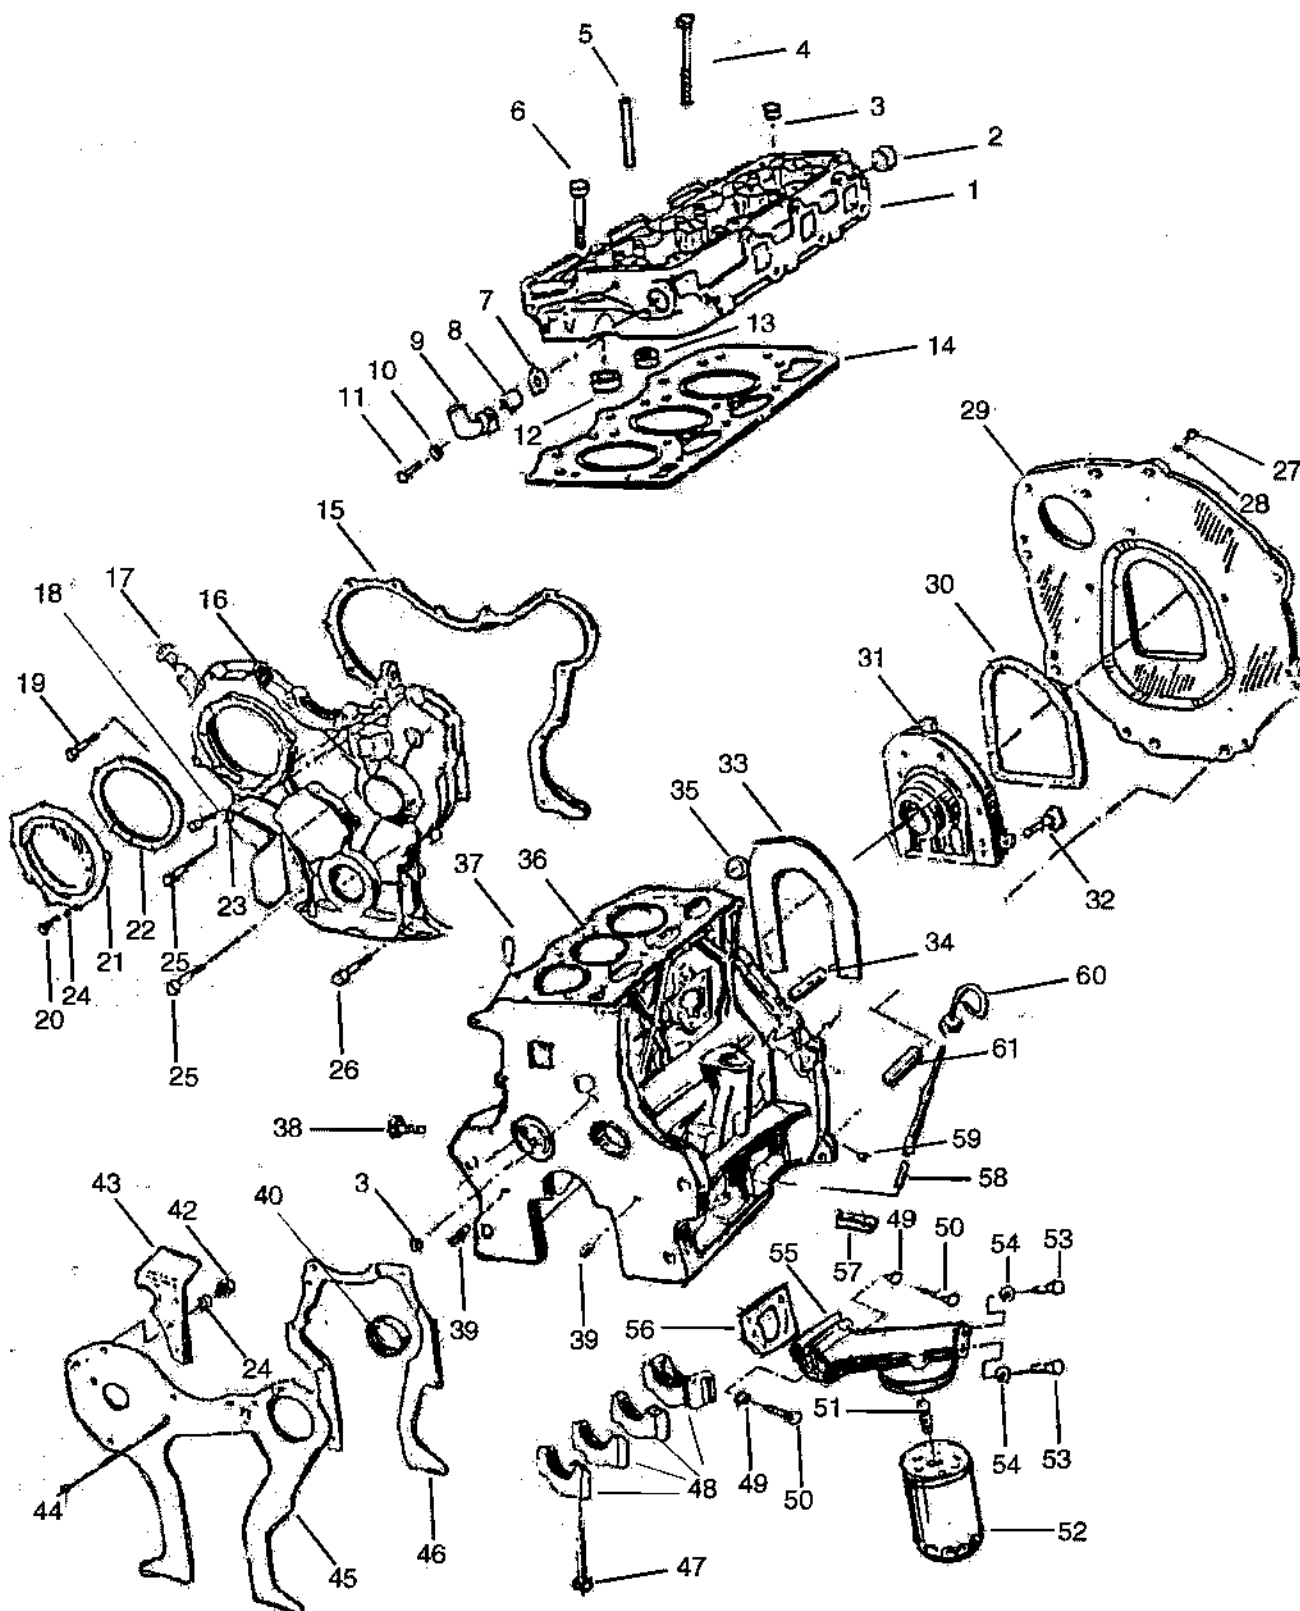

CYLINDER BLOCK & CYLINDER HEAD

1:3

Ⓢ - SERIAL NUMBER BREAK,  - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC


ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
36	ESL15244	Plug Oil Pan Drain	D10061670	1	1
37	ESL10120	Dowel Cyl. Head to Block Cyl.	D10010280	2	2
38	87651S8	Plug, (1/4-18) Pipe	-	1	1
39	73329S	Pin, (3/8x1.125) Plain Dowel	-	2	2
40	ESL15215	Bearings Camshaft	D10010150	1	1
41	ESL15222	Gasket Timing Cover	D10044780	1	1
42	337975S8	Nut, (5/16-18) Hex	-	3	3
43	ESL10079	Deflector Pan Air RH	D10010890	1	1
44	45964S8	Bolt, (5/16-18x.75) Hex Head	-	4	4
45	ESL15218	Plate Engine Front Cover	D10047860	1	1
46	ESL15219	Gasket Engine Front Cover	D10047860	1	1
47	ESL13691	Bolt, (9/16-12x4.45) Hex Head	D10044730	8	8
48	ESL15245	Gasket Water Pump	D10044720	1	1
49	387887S8	Nut, (3/8-16) Hex	-	-	-
50	ESL15234	Bolt, (M8x1.25x60-6.6) Hex Head	D10043930	4	4
51	ESL10082	Insert Oil Filter Mounting	-	1	1
52	ESL10083	Filter Assembly Lube Oil	D10017600	1	1
53	ESL15229	Plug Oil Filter Body	D10044970	2	2
54	ESL15230	Washer Oil Filter Body	D10044940	2	2
55	ESL15226	Bracket Oil Filter Mounting	D10044960	1	1
56	ESL15227	Gasket Oil Filter Mounting	D10044800	1	1
57	ESL10072	Cover Flywheel Access	D10044780	1	1
58	ESL10052	Tube Oil Level Indicator	D10048250	1	1
59	304682S8	Plug, (3/8-18) Hex Head	-	1	1
60	ESL15216	Indicator Assembly Oil Level	D10048250	1	1
61	300866S8	Bolt, (5/16-18x2.12) Hex Head	-	1	1

Service Kits:

A	ESL15369	Engine Assembly 665	D10047820	1	1
B	ESL15575	Engine Assembly w/elec: 665	-	1	1
C	ESL15523	Engine Overhauling Gasket Set	-	1	1
D	ESL15567	Decarbonizing Kit 665	-	1	1
E	ESL15520	Engine Plug Kit Std	-	1	1
F	ESL15521	Engine Plug Kit Oversized	-	-	-
G	ESL15564	Engine Overhauling Kit 665-010	-	1	1
H	ESL15565	Engine Overhauling Kit 665-020	-	1	1
I	ESL15566	Engine Overhauling Kit 665-030	-	1	1

CYLINDER BLOCK & CYLINDER HEAD

665 / 665 DTC

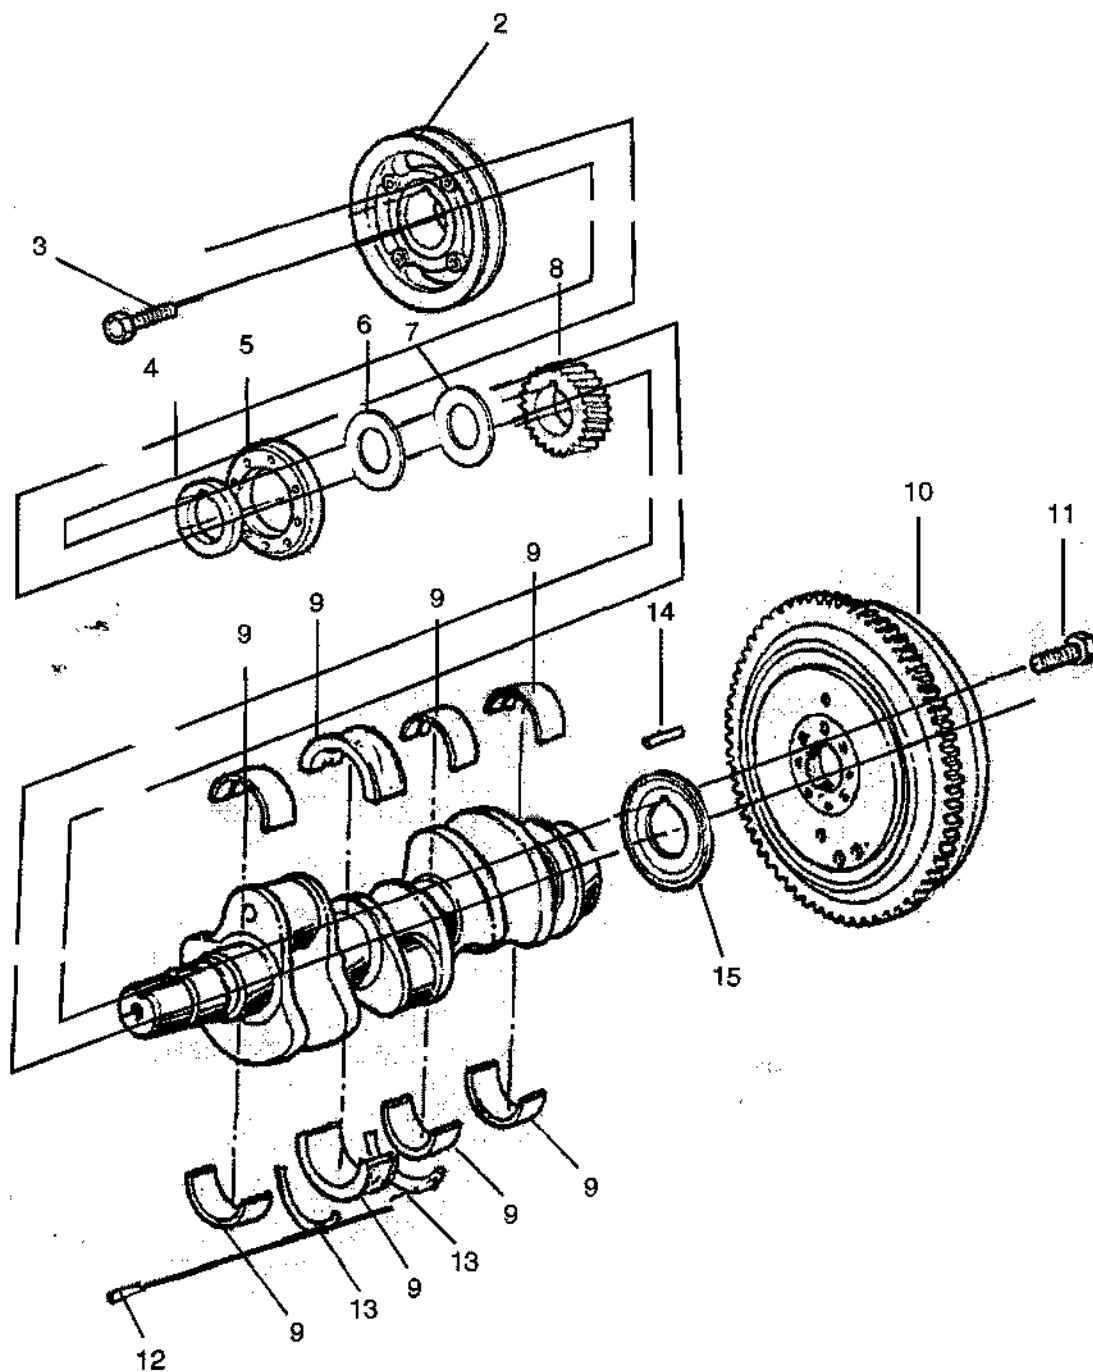

CRANKSHAFT & FLYWHEEL ASSEMBLY

1:5

© - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC


ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL15396	Crankshaft and Gear Assy. (Includes item # 8)	D10048090	1	1
2	ESL12623	Pulley Crankshaft	D10039630	1	1
3	ESL15248	Bolt, (M10x1.50x45-10.9)	D10044910	5	5
4	ESL15249	Spacer Crank Shaft Pulley	D10044880	1	1
5	ESL15237	Seal Crankshaft Front	D10044410	1	1
6	ESL15250	Seal 'O' Ring, (0.103x1.75)	D10010400	1	1
7	ESL15238	Seal Crankshaft Rear	D10044550	1	1
8	ESL15251	Gear Crankshaft	D10047880	1	1
9	ESL15385	Main Bearing Set (consists of 4 pairs of main bearings)	-	1	1
10	ESL15397	Flywheel Assembly	D10047870	1	1
11	ESL15255	Bolt Flywheel Mounting	D10044590	2	2
12	ESL15256	Dowel Thrust Washer	D10044750	2	2
13	ESL15257	Washer Thrust	D10044740	1	1
14	ESL15258	Dowel Flywheel	D10044920	1	1
15	ESL15238	Seal Crankshaft Rear	D10044550	1	1

Service Kits:

A	ESL15384	Engine Bearing Set 10 o/s (consists of Main Bearings and Rod Bearings for an engine)	-	1	1
B	ESL15540	Engine Bearing Set 20 o/s	-	1	1
C	ESL15541	Engine Bearing Set 30 o/s	-	1	1
D	ESL15542	Engine Bearing Set 40 o/s	-	1	1

CRANKSHAFT & FLYWHEEL ASSEMBLY

665 / 665 DTC

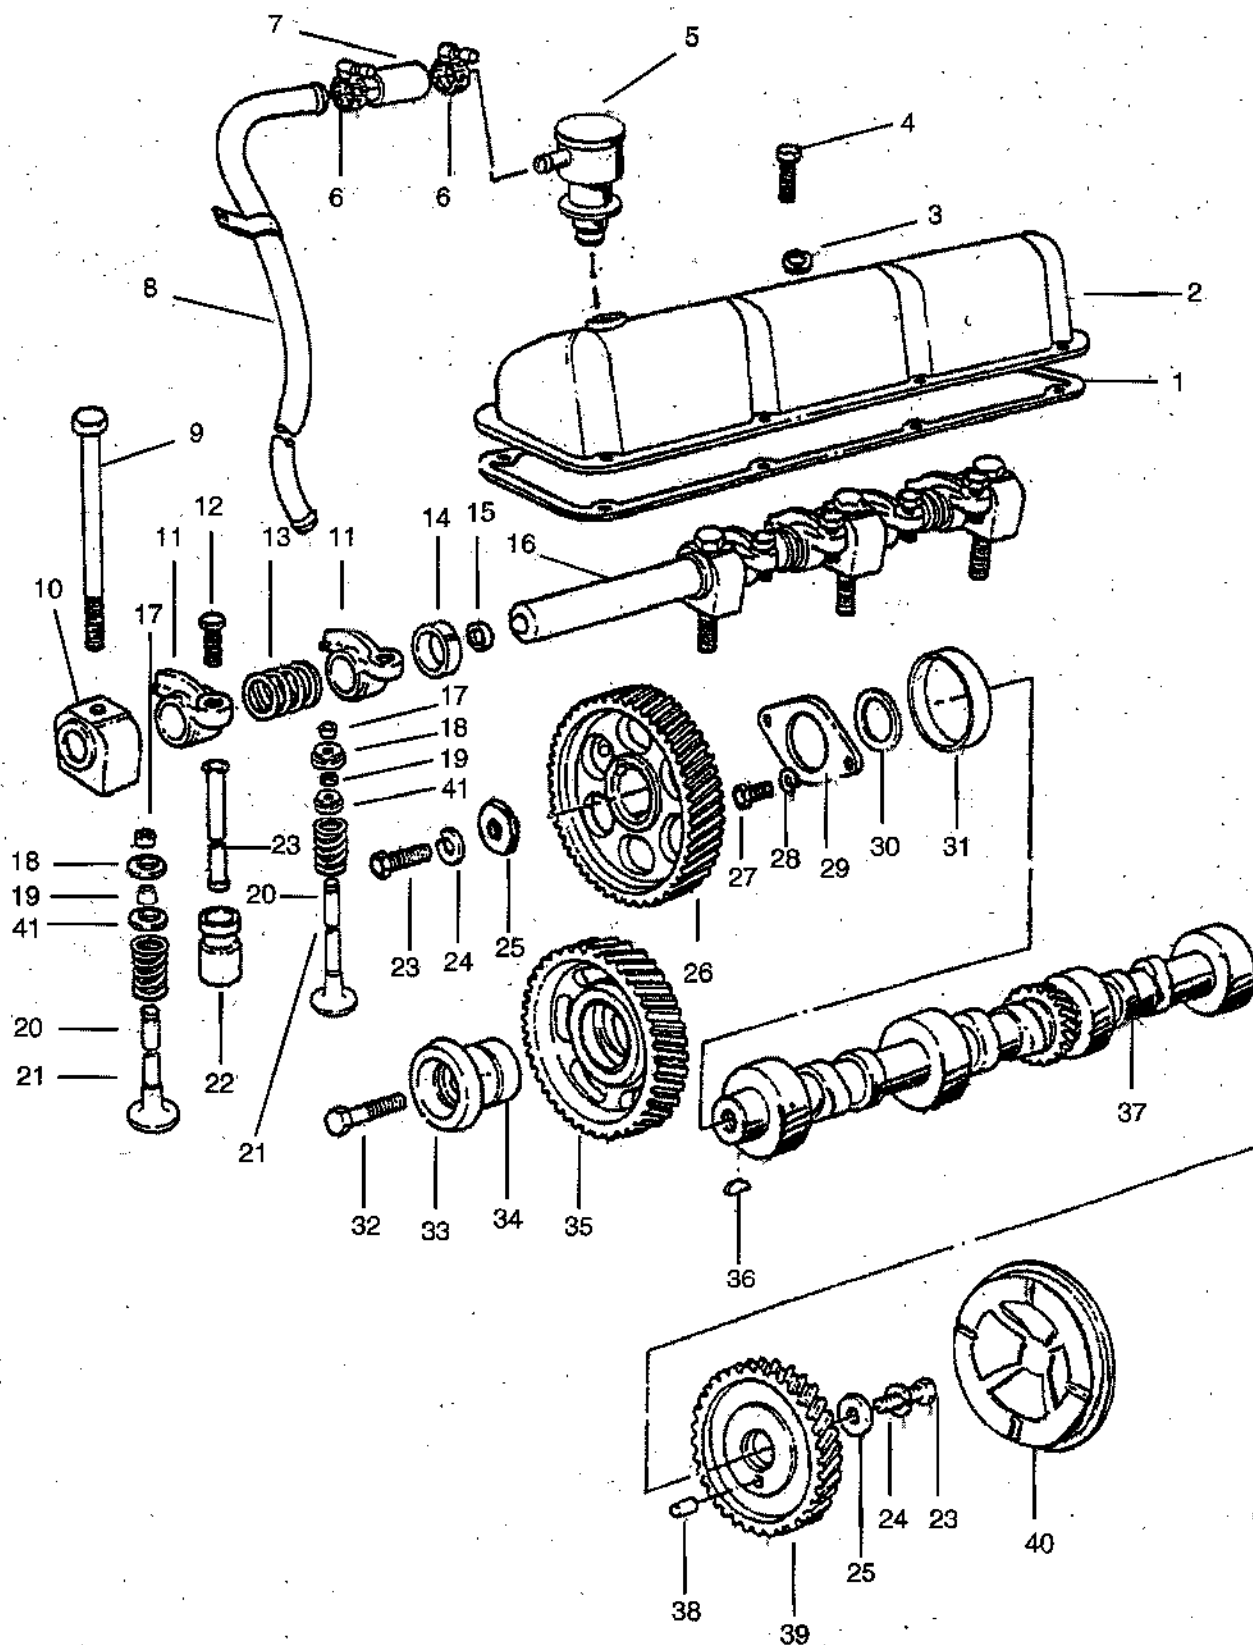

CAMSHAFT & ROCKER ARM

1:7

Ⓢ - SERIAL NUMBER BREAK ,




- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL15273	Gasket Valve Rocker Arm	D10044820	1	1
2	ESL15272	Cover Valve Rocker Arm	D10045090	1	1
3	N630173S8	Washer M8 Spring Lock	-	8	8
4	ESL15274	Bolt, (M8x1.25x20-8.8) Hex Head	D81500110	8	8
5	ESL15282	Breather Assembly Crank Case	D10045270	1	1
6	ESL15281	Clamp Hose	D10102430	2	2
7	ESL15518	Hose Breather Assembly	D10102400	1	1
8	ESL15519	Tube Assembly Crankcase Vent	D10045260	-	-
9	ESL15264	Bolt, M12x1.5x216) Cylinder Head	D10044570	4	4
10	ESL15263	Support Valve Rocker	D10045080	4	4
11	ESL10168	Kit Rocker Arm W/Screw	D10075030	6	6
12	ESL10131	Screw, (7/16-20) Valve Rocker Arm	D10011640	6	6
13	ESL10134	Spring Valve Rocker	D10011590	3	3
14	ESL10135	Spacer Valve Rocker	D10011600	3	3
15	ESL10046	Plug, (0.761) Cup	-	2	2
16	ESL10132	Shaft Valve Rocker	D10011560	1	1
17	ESL15270	Key Valve Spring Retainer	D10045200	-	-
18	ESL15269	Retainer Valve Spring Upper	D10045050	6	6
19	ESL15271	Seal Valve Stem	D10045060	6	6
20	ESL15268	Spring Valve	D10044890	3	3
21	ESL15346	Valve Set Exhaust 5 o/s	-	3	3
-	ESL15547	Valve Set Exhaust 10 o/s	-	3	3
-	ESL15548	Valve Set Exhaust 15 o/s	-	3	3
-	ESL15267	Valve Air Intake	-	3	3
-	ESL15549	Valve Air Intake 5 o/s	-	3	3
-	ESL15550	Valve Air Intake 10 o/s	-	3	3
-	ESL15551	Valve Air Intake 15 o/s	-	3	3
22	ESL15260	Tappet Valve	-	6	6
23	ESL15262	Rod Valve Push	D10044510	6	6
24	34808S8	Washer, (7/16) Spring Lock	D10045070	3	3
25	ESL11644	Washer Cam Shaft	D10010520	3	3
26	ESL15277	Gear Cam Shaft	D10047890	1	1
27	304648S8	Bolt, (5/16-18x0.75) Hex Head	D81000200	2	2
28	ESL11975	Washer, (5/16) Spring Lock	D86000040	2	2
29	ESL10152	Plate Camshaft Thrust	D10010490	1	1
30	ESL10150	Spacer Cam Washer	D10010480	1	1
31	ESL15213	Cam Bush Set	D93100020	1	1
32	ESL11922	Bolt, (5/8-11x2.125) Hex Head	D81000570	1	1
33	ESL10147	Adapter Cam Shaft	D10010560	1	1
34	ESL10146	Bush Cam Shaft Drive Gear	D10020980	1	1

CAMSHAFT & ROCKER ARM

665 / 665 DTC

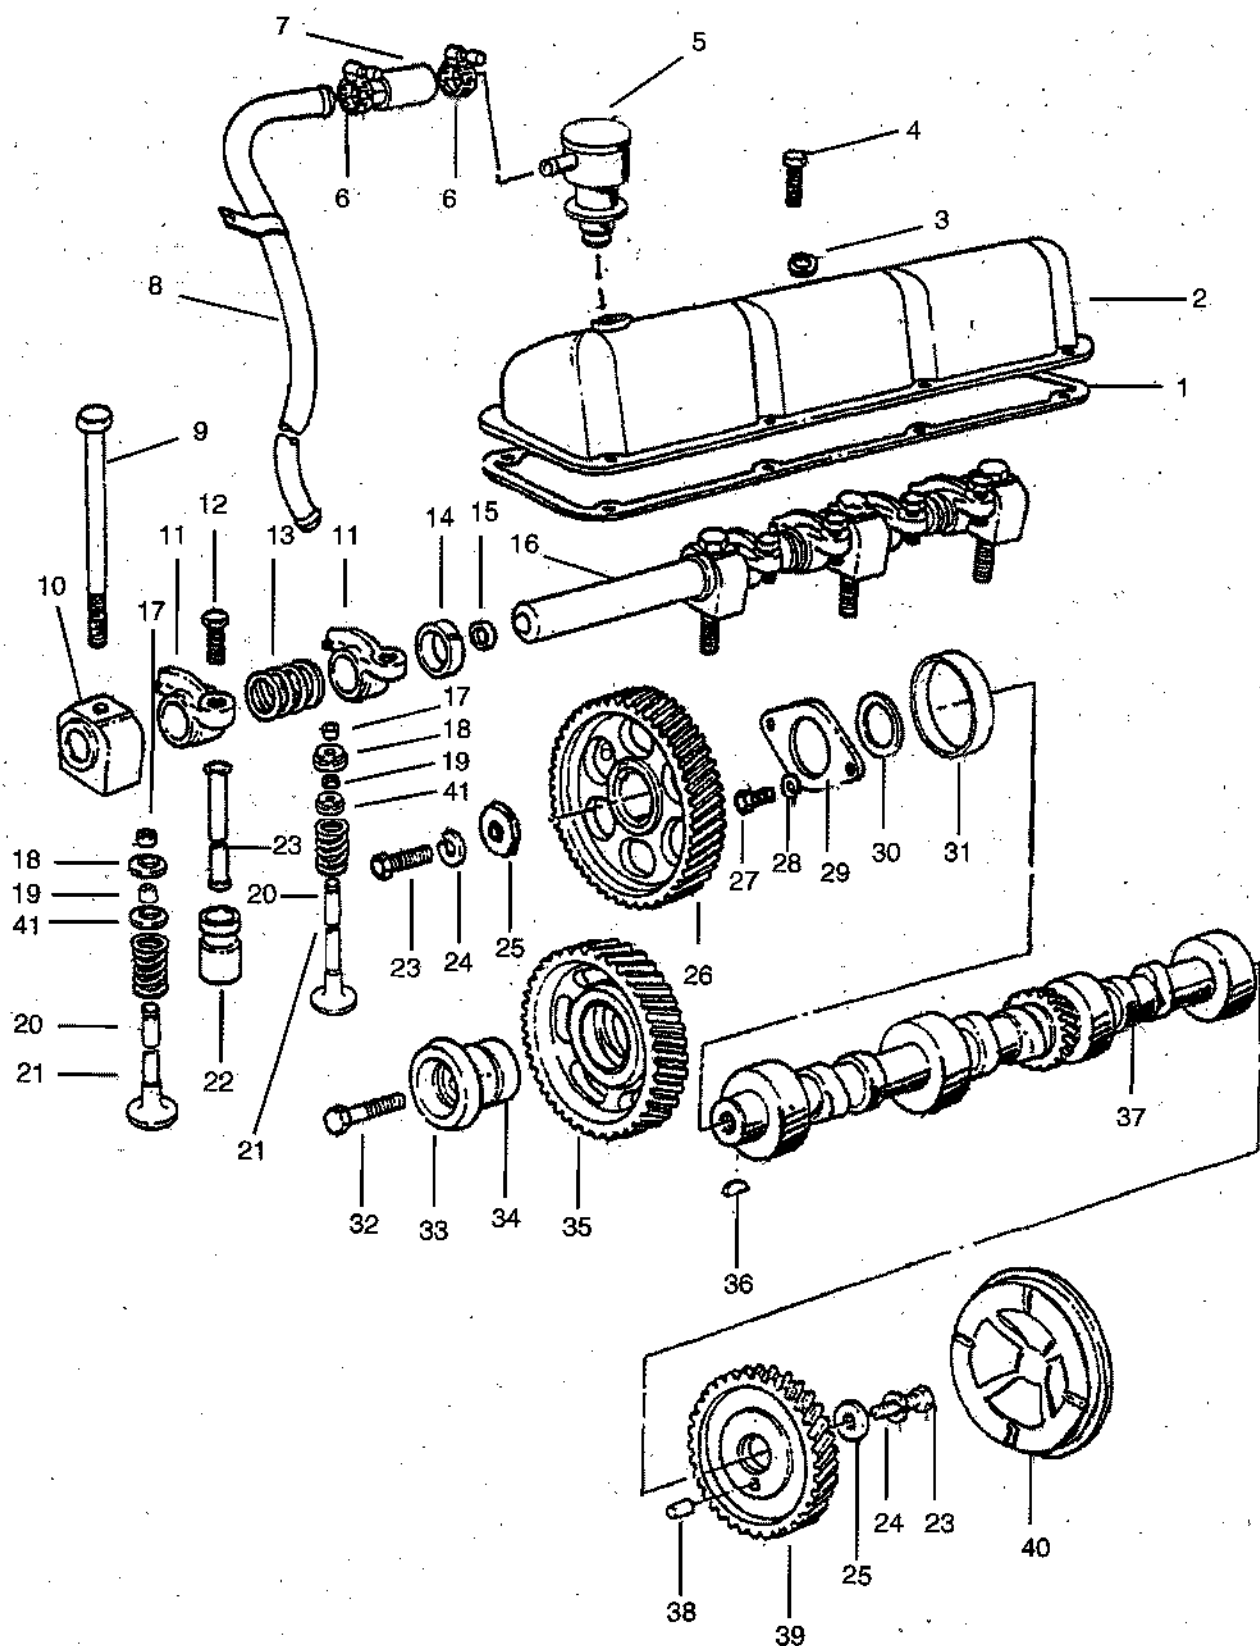

CAMSHAFT & ROCKER ARM

1:9


Ⓢ - SERIAL NUMBER BREAK, - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
35	ESL15276	Gear Crank Shaft Drive Assembly	D10047900	1	1
36	74178S8	Key, (3/16x3/4) Woodruff	-	3	3
37	ESL15275	Cam Shaft	D10044400	1	1
38	ESL10155	Pin, (5/16x0.625) Dowel	-	1	1
39	ESL15278	Gear Assembly Cam Shaft, Hydraulic Pump	D10059240	1	1
40	ESL10156	Cover Camshaft Hydraulic, Pump Drive	D10010340	1	1
-	ESL10145	Gear Assembly Camshaft Drive	D10020950	1	1
41	ESL15279	Retainer Valve Spring Lower	D10044900	6	6

CAMSHAFT & ROCKER ARM

665 / 665 DTC

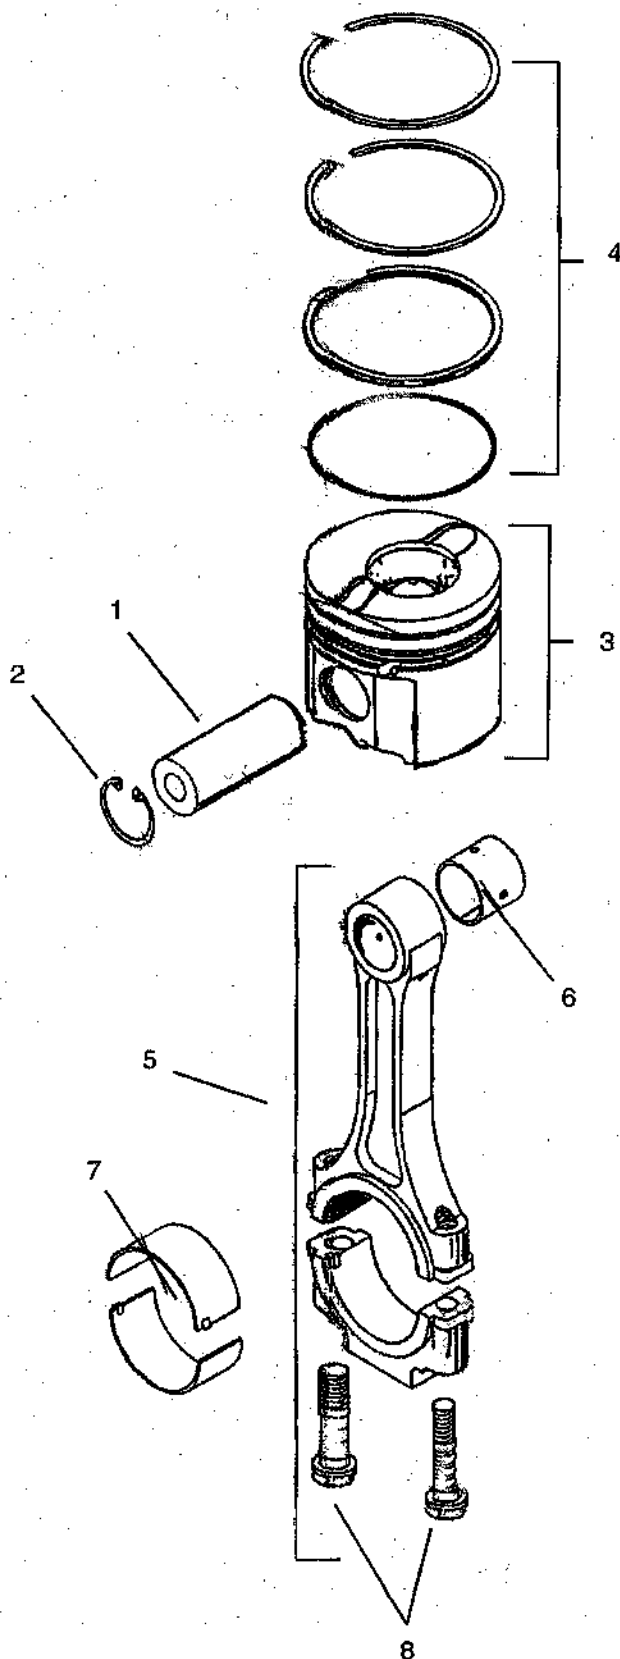


PISTON & CONNECTING ROD

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL15284	Pin Piston	D10044660	3	3
2	ESL15285	Ring Retaining	D10045100	6	6
3	ESL15602	Piston Set 665	D10028490A	1	1
4	ESL15552	Ring Set 665	D10047490	-	-
5	ESL15603	Rod Assy. Connecting	D10044430	3	3
6	ESL15296	Bush Set Connecting Rod	D10044990	1	1
7	ESL15297	Connecting Rod Bearing Set	D10045000	1	1
-	ESL15553	Connecting Rod Bearing Set 10 o/s	-	1	1
-	ESL15554	Connecting Rod Bearing Set 20 o/s	-	1	1
-	ESL15555	Connecting Rod Bearing Set 30 o/s	-	1	1
-	ESL15556	Connecting Rod Bearing Set 40 o/s	-	1	1
8	ESL15299	Bolt, (M12x69-10.9) Con. Rod	D10044560	6	6

PISTON & CONNECTING ROD

665 / 665 DTC

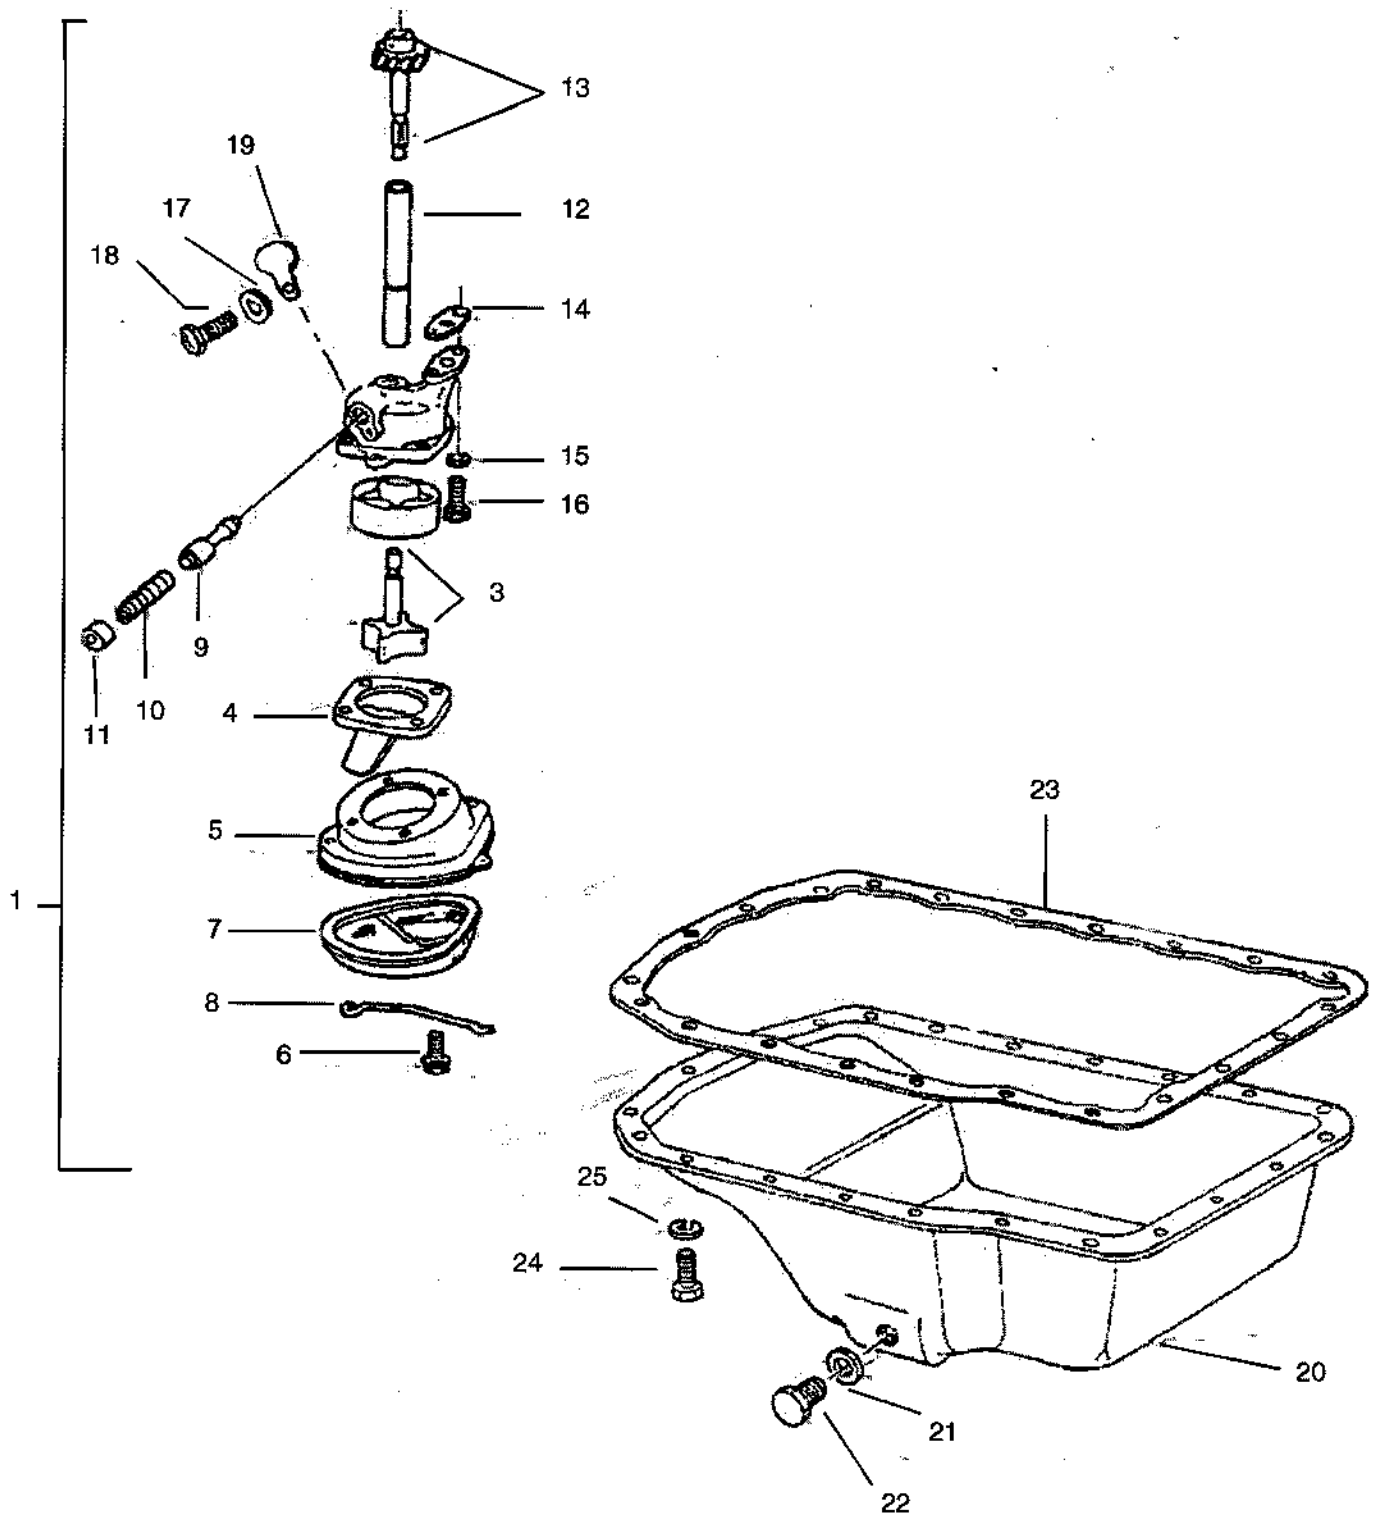

OIL PUMP & OIL PAN

1:13

Ⓢ - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL10203	Pump Assembly Engine Lube Oil	D10010970	1	1
2	-	Body Engine Lube Oil Pump	-	1	1
3	ESL12629	Rotor and Shaft Assy. Lube Oil, Pump Drive	D10104340	1	1
4	-	Cover Lube Oil Pump	-	1	1
5	-	Cover Lube Oil Pump Screen	-	1	1
6	ESL11779	Bolt M6x1.00x20-6.6 Hex Flanged (Lube Oil Pump)	-	4	4
7	ESL10191	Screen Lube Oil Pump	D10011030	4	4
8	ESL10193	Spring Lube Oil Pump Screen	D10011080	1	1
9	ESL10188	Valve Lube Oil Pressure Relief Valve	D10011050	1	1
10	ESL10189	Spring Lube Oil Pump Relief Valve	D10011010	1	1
11	ESL10190	Plug Lube Oil Pump Relief Valve	D10010990	1	1
12	ESL10195	Shaft Lube Oil Pump	D10011170	1	1
13	ESL10196	Shaft and Gear Assembly	D10011100	1	1
14	ESL10197	Gasket Lube Oil Pump	D10011140	1	1
15	ESL11645	Washer Lube Oil Pump Lock	D10011150	2	2
16	378310S36	Bolt,(3/8-16x1.38) Hex Head	-	2	2
17	N630173S8	Washer M8 Spring Lock	-	1	1
18	N605531S8	Bolt,(M8x1.25x20-9.8) Hex Head	-	1	1
19	ESL11646	Stop Lube Oil Pump Relief Valve	-	1	1
20	ESL15300	Pan Assembly Oil	D10044630	1	1
21	ESL10201	Gasket Drain Plug	D10044710	1	1
22	ESL15244	Plug Oil Pan Drain	D10061670	1	1
23	ESL15243	Gasket Oil Pan	D10044790	1	1
24	304666S8	Bolt, (3/8-16x0.875) Hex Head	-	22	22
25	34807S8	Washer, (3/8) Spring Lock	-	22	22

OIL PUMP & OIL PAN

Notes


AIR INTAKE & EXHAUST SYSTEM

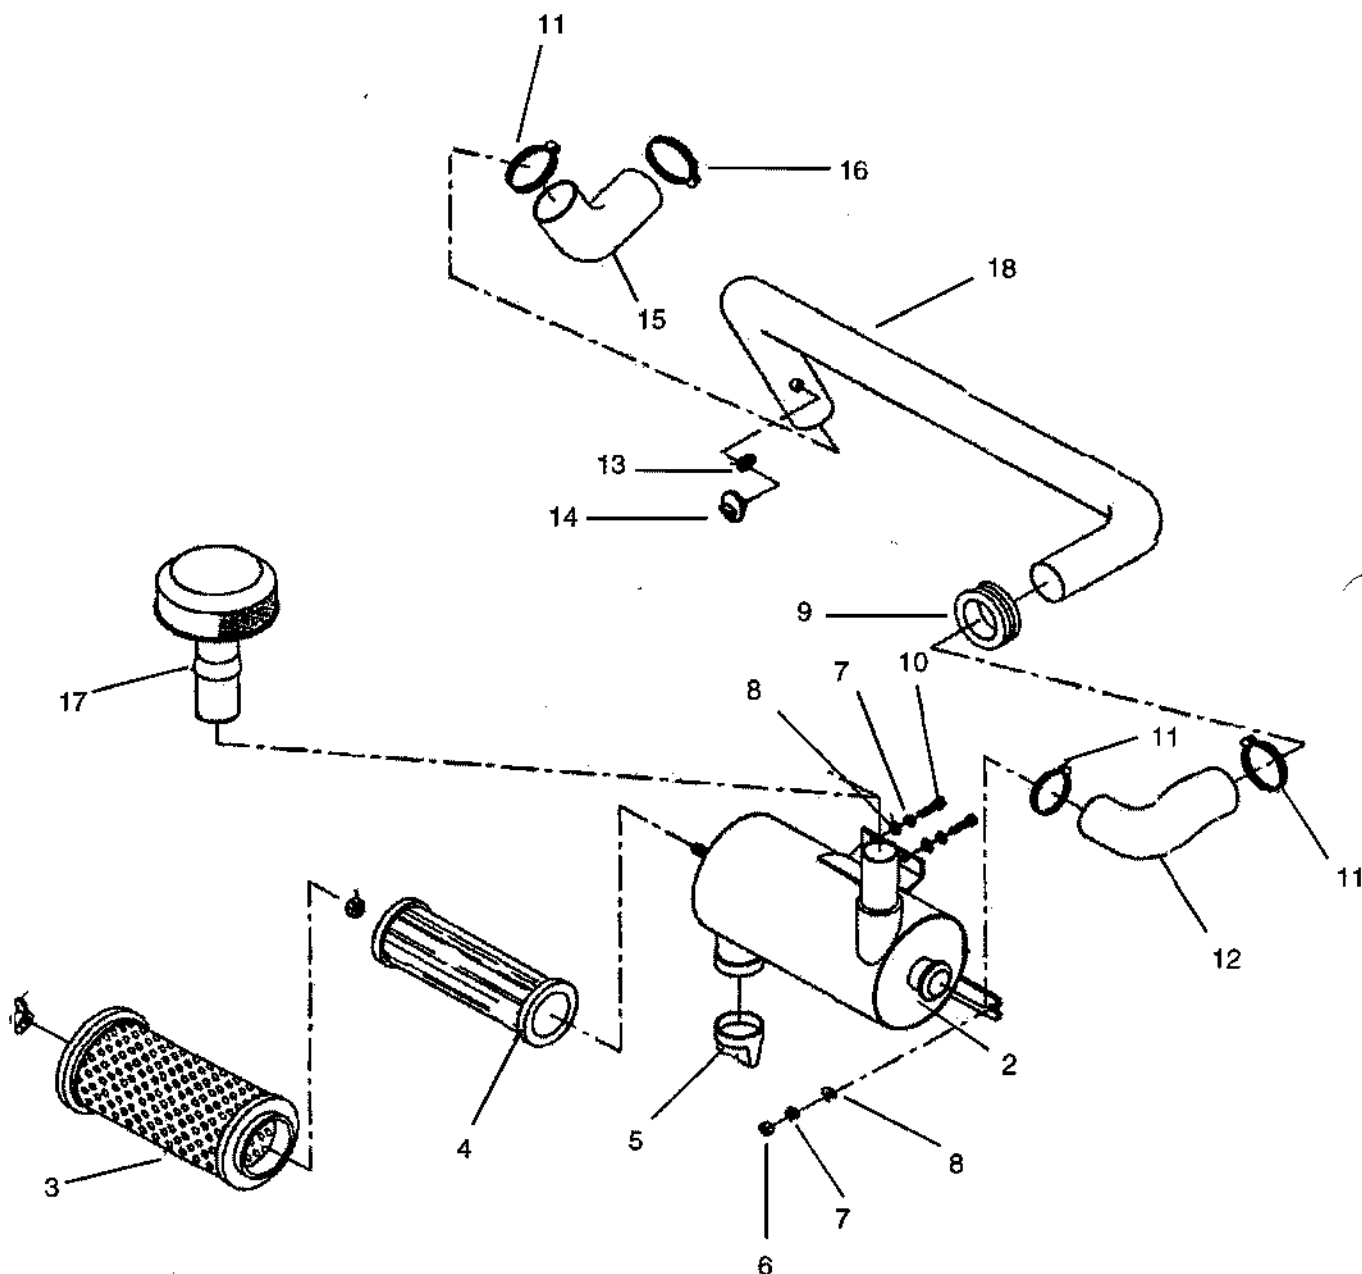

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL10232	Air Cleaner Assembly - Dry (includes items 2-5)	D10026730	1	1
2	-	Housing - Dry Air Cleaner	-	1	1
3	ESL10221	Element Primary Filter	D10093670	1	1
4	ESL10222	Filter Secondary Dry Air Cleaner	D10102340	1	1
5	ESL15302	Cap Dust Dry Air Cleaner	D10115740	1	1
6	N620014S8	Nut, (M10x1.50-5) Hex	-	2	2
7	N630174S8	Washer, (M10) Spring Lock	-	4	4
8	N630069S8	Washer, (M10) Flat	-	4	4
9	ESL10231	Grommet Air Cleaner	D10026760	2	2
10	304650S8	Bolt, (3/8-16x0.75) Hex Head	-	2	2
11	ESL12083	Clamp Assembly 70MM Diameter	D10017170	3	3
12	ESL11837	Hose Engine Air Cleaner Outlet	D10026720	1	1
13	ESL12616	Gasket	-	1	1
14	ESL12617	Indicator Dry Air Cleaner	D10026560	1	1
15	ESL15301	Hose Engine Air Cleaner, Outlet Lower	D10048130	1	1
16	ESL11977	Clamp Assembly Air Cleaner Hose	D10017630	1	1
17	ESL12070	Cap And Extension Assembly, Air Cleaner	D10026740	1	1
18	ESL12515	Tube Engine Air Cleaner Outlet	D10026750	1	1

665 / 665 DTC

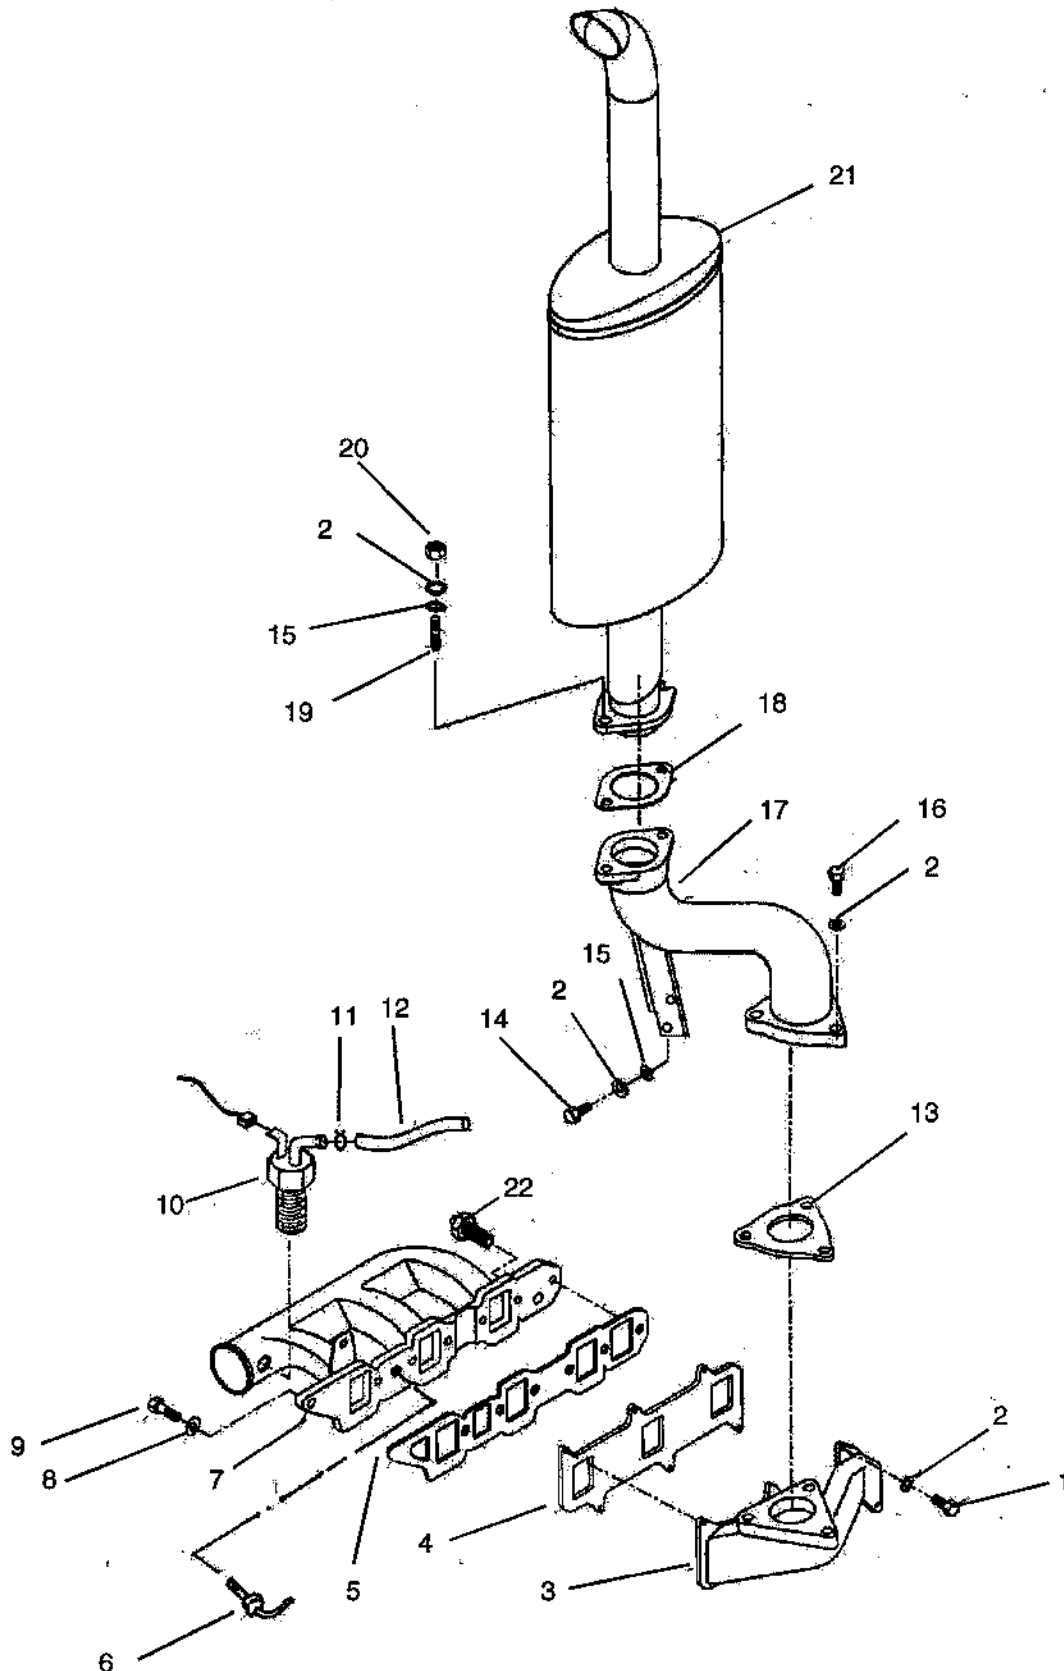

INTAKE MANIFOLD & EXHAUST SYSTEM

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	N600319S8	Bolt, (M10x1.50x70-8.8) Hex Head	-	6	6
2	N630069S8	Washer, (M10) Flat	-	13	13
3	ESL15306	Manifold Exhaust	D10044610	1	1
4	ESL15242	Gasket Exhaust Manifold	D10044830	3	3
5	ESL15305	Gasket Engine Air Intake Manifold	D10048010	1	1
6	ESL15318	Switch Thermostart	D10047980	1	1
7	ESL15304	Intake Manifold	D10047850	1	1
8	N605531S8	Bolt, (M8x1.25x20-9.8) Hex Head	-	7	7
9	ESL15208	Bolt, (M8x1.00x30-6.6) Head	-	3	3
10	ESL15314	Thermostart Engine TX12346	D10027380	1	1
11	ESL10284	Clamp Thermostat Tube	D10026200	2	2
12	ESL15315	Tube Nylon Thermostart	D10026170	1	1
13	ESL10245	Gasket Muffler Inlet	D10016120	1	1
14	ESL15310	Bolt M10x1.50x25-9.8 nn.	D81500280	2	2
15	ESL15309	Washer, (M10) Flat	D85500010	4	4
16	46008S8	Bolt, (3/8-16x1.00) Hex Head	-	3	3
17	ESL15308	Pipe Assembly Muffler Inlet	D10091160	1	1
18	ESL15313	Gasket Muffler Inlet	D10016120	1	1
19	ESL15307	Stud, (B M10x26-6.8) Zinc Passivated	D84500020	2	2
20	N620014S8	Nut, (M10x1.50-5) Hex	-	2	2
21	ESL15312	Muffler Assembly Vertical	D10035260	1	1
22	ESL10238	Sensor Unit Water Temperature Gauge	D10011480	4	4
-	ESL11958	Screw, (M8x1.25x30-8.8) Hex Head	D81500310	1	1

Notes

665 / 665 DTC


SECTION 3

FUEL SYSTEM

FARMTRAC

DRIVING TRADITIONS TOYORROW

665 / 665 DTC

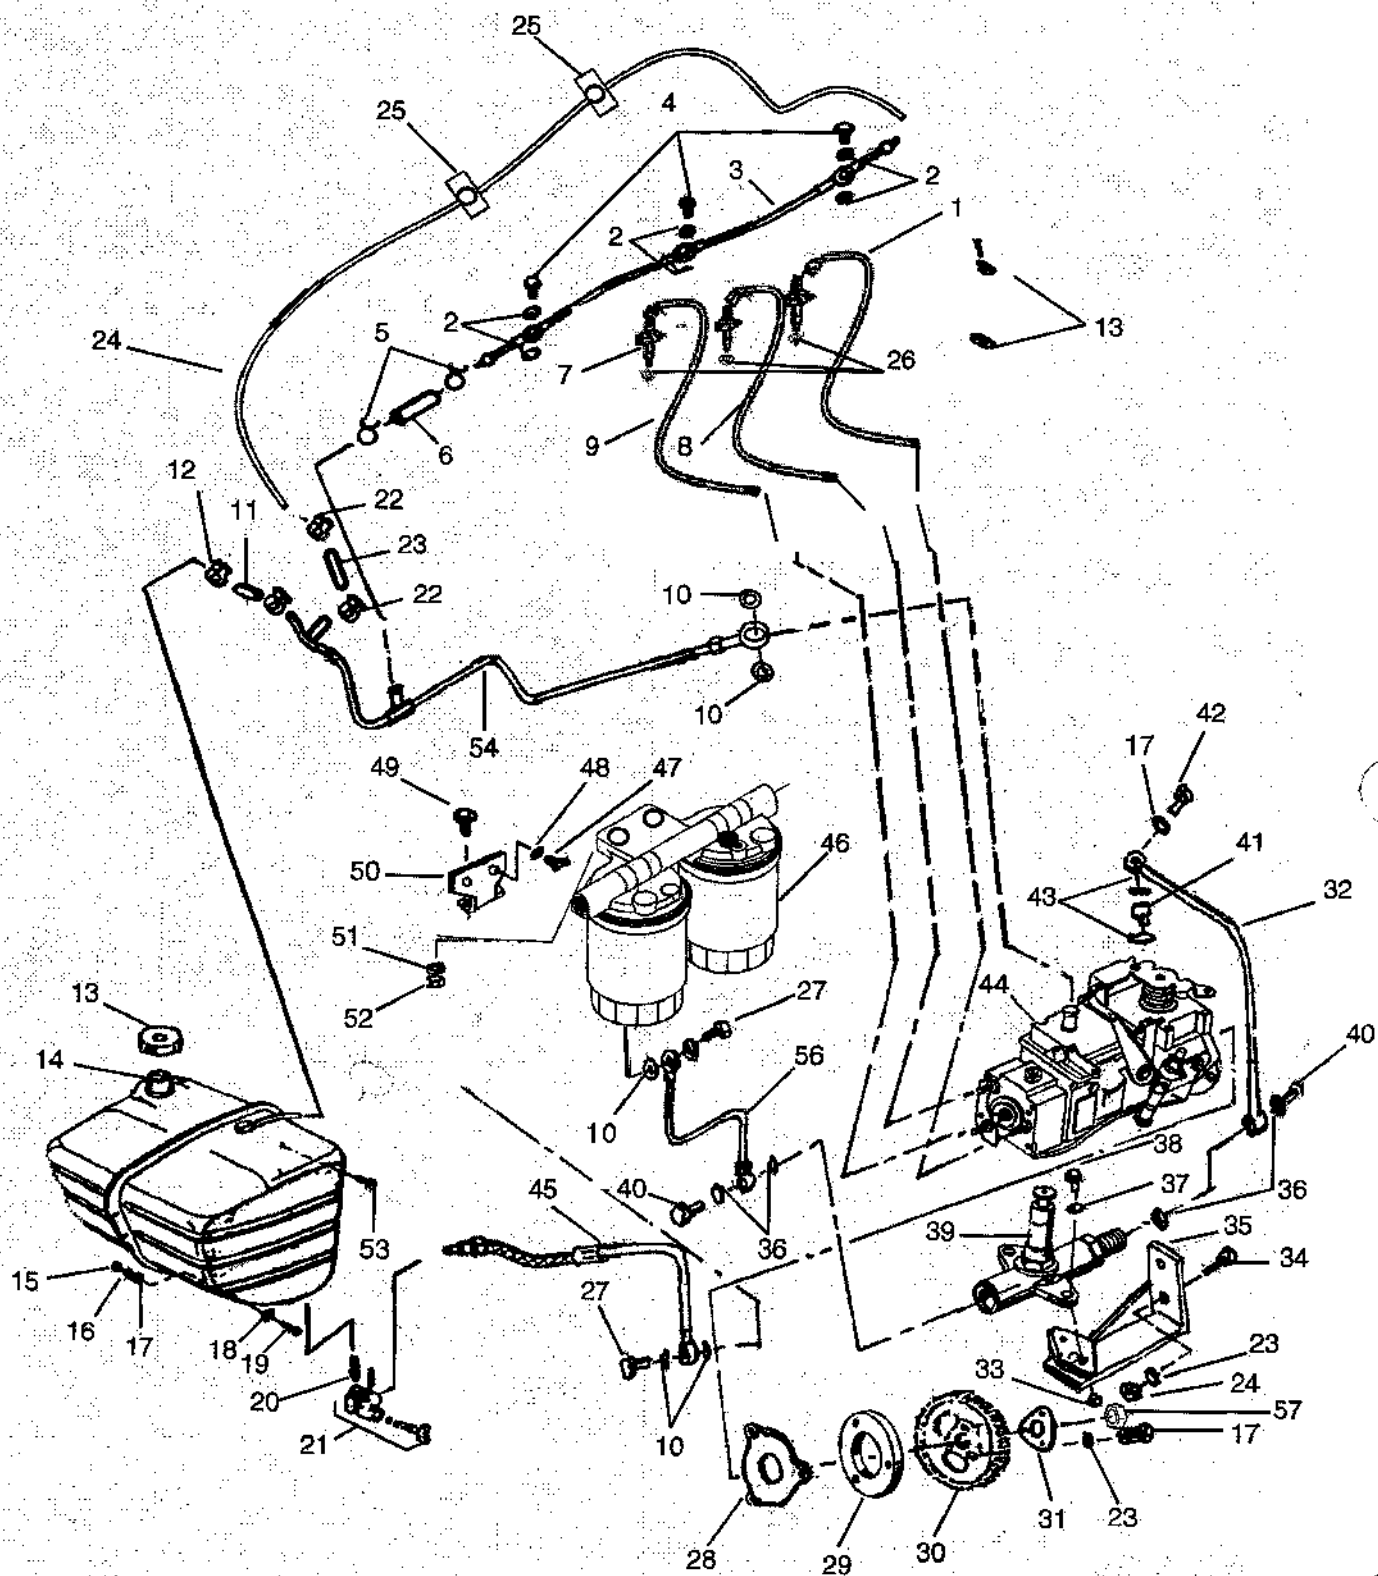

FUEL SYSTEM

3:1

© - SERIAL NUMBER BREAK ,




- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL15333	Tube Assembly Fuel Injection Cylinder	D10047920	1	1
2	ESL15332	Washer, (6MM) Sealing	2564662AA	6	6
3	ESL15330	Tube Fuel Injection Pump Leak Off	D10047950	1	1
4	ESL15331	Bolt, (M6) Banjo	2564661AA	3	3
5	ESL10296	Clam Spring Wire Hose, (#7G)	D10018180	2	2
6	ESL15338	Hose	D10064600	1	1
7	ESL14907	Injector Assembly Fuel (VE)	D10047830	3	3
8	ESL15334	Tube Assembly Fuel Injection Cylinder	D10047930	1	1
9	ESL15335	Tube Assembly Fuel Injection Cylinder	D10047940	1	1
10	ESL11975	Washer, (14.2x19.9) Copper Sealing	D86000040	14	14
11	ESL10297	Coonector Fuel Return To Tank Tube	D10017360	1	1
12	ESL10298	Clamp Assembly Fuel Tube	D10017460	2	2
13	ESL10254	Cap and Key Assembly Fuel Tank	D10019100	1	1
14	ESL12656	Tank Assembly Fuel	D10039360	1	1
14	ESL10270	Tube Assembly Fuel Feed Pump	D10012570	1	1
15	33798S8	Nut, (5/16-24) Hex	-	2	2
16	44722S8	Washer, (5/16) Flat	-	7	7
17	ESL11742	Bolt Fuel Injection Pump Adapter Plate	D10010800	3	3
18	ESL10256	Spacer Fuel Tank Mounting Lower	D10018360	1	1
19	304683S8	Bolt, (5/16-18x1.00) Hex Head	-	2	2
20	ESL15319	Filter Fuel Tap 7 Screen	D10063180	1	1
20	304646S8	Bolt, (5/16-18x0.75) Hex Head	-	6	6
21	ESL10257	Tap And Screen Assembly Fuel Control	D10018590	1	1
22	34941S8	Washer, (5/16) Lock External Tooth	-	5	5
23	34806S8	Washer, (5/16) Spring Lock	-	9	9
23	ESL15324	Plug	D10102380	1	1
24	33797S8	Nut, (5/16-18) Hex	-	3	3
25	ESL15339	Bracket Fuel Injection Pump Rear Mounting	D10048040	1	1
26	304682S8	Bolt, (5/16-18x1.00) Hex Head	-	1	1
27	ESL13683	Bolt Pipe Union, (94110334)	D81001060	3	3
28	ESL15323	Gasket VE Pump	D10048000	1	1
29	ESL10030	Coupling Fuel Injection Pump Adapter Plate	D10010760	1	1
30	ESL15322	Gear VE Pump	D10047910	1	1
31	ESL10275	Plate Fuel Injection Pump	D10010780	1	1
32	ESL15344	Tube Assy. Hand Line Primer To FIP	D10047960	1	1
33	33796S8	Nut, (1/4-28) Hex	-	2	2
34	ESL15342	Bolt, (5/15-18x3.00)	D10047990	2	2

FUEL SYSTEM

665 / 665 DTC

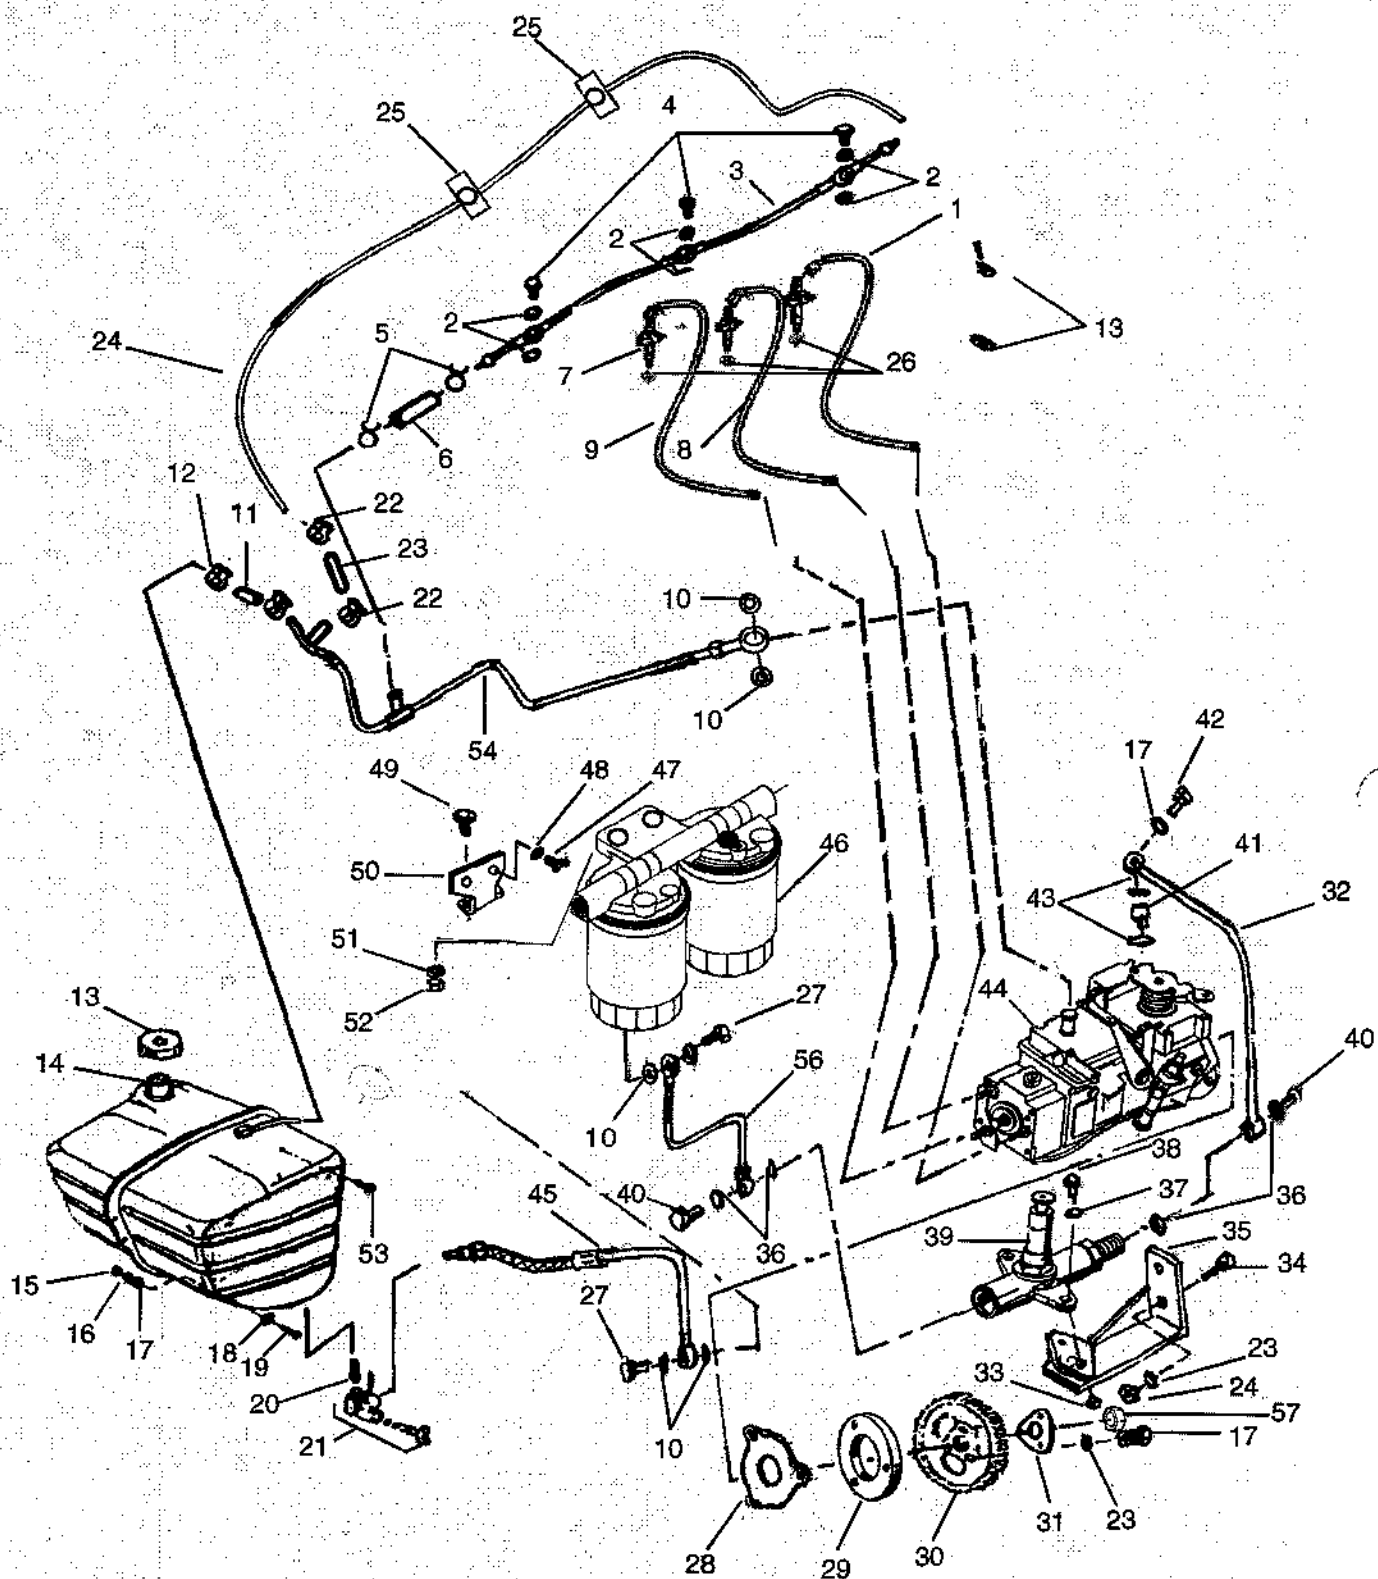

FUEL SYSTEM


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
35	ESL15341	Bracket Hand Primer Mounting	D10048050	1	1
36	ESL10357	Washer, (14.2x19.9) Copper Sealing	D10012580	4	4
37	34805S8	Washer, (1/4) Spring Lock	-	2	2
38	304633S8	Bolt, (1/4-28x0.62) Hex Head	-	2	2
39	ESL15343	Hand Primer Assembly	D10048070	1	1
40	ESL11778	Bolt, (M14x1.5x25.5) Hex Head	D10012590	2	2
41	ESL15346	Spacer Fuel Injection	D10048020	1	1
42	ESL11761	Bolt, (M12x1.5x23.5) Pipe Union	D10017500	1	1
43	ESL15345	Washer Copper Rotary	D10048060	3	3
44	ESL15371	Pump Assembly Fuel Injection 665	D10047840	1	1
45	ESL15321	Tube Assembly Fuel Tank To Filter	D10048190	1	1
46	ESL15328	Fuel Filter Assembly (Spin Type)	D10108550	1	1
47	304666S8	Bolt, (3/8-16x0.875) Hex Head	-	2	2
48	44726S8	Washer, (3/8) Flat	-	2	2
49	ESL11743	Bolt, Fuel Filter Bracket	-	2	2
50	ESL15329	Bracket Assembly Fuel Filter	D10044850	1	1
51	34809S8	Washer, (1/2) Spring Lock	-	2	2
52	ESL11782	Nut, Fuel filter Bracket	-	2	2
53	304635S8	Bolt, (5/16-24x0.625) Hex Head	-	1	1
54	ESL15337	Tube Assembly Fuel Tank Return	D10048180	1	1
55	ESL15336	Lamp Assembly High Pressure Pipe	D10047970	1	1
56	ESL15347	Tube Assembly Filter To H-L/Primer	D10048100	1	1
57	ESL15563	Nut, FIP Gear	D83500040	1	1

ESL 15354 Fuel Filter 2nd. 2°

ESL 15357 Fuel Filter Primary 1°

665 / 665 DTC

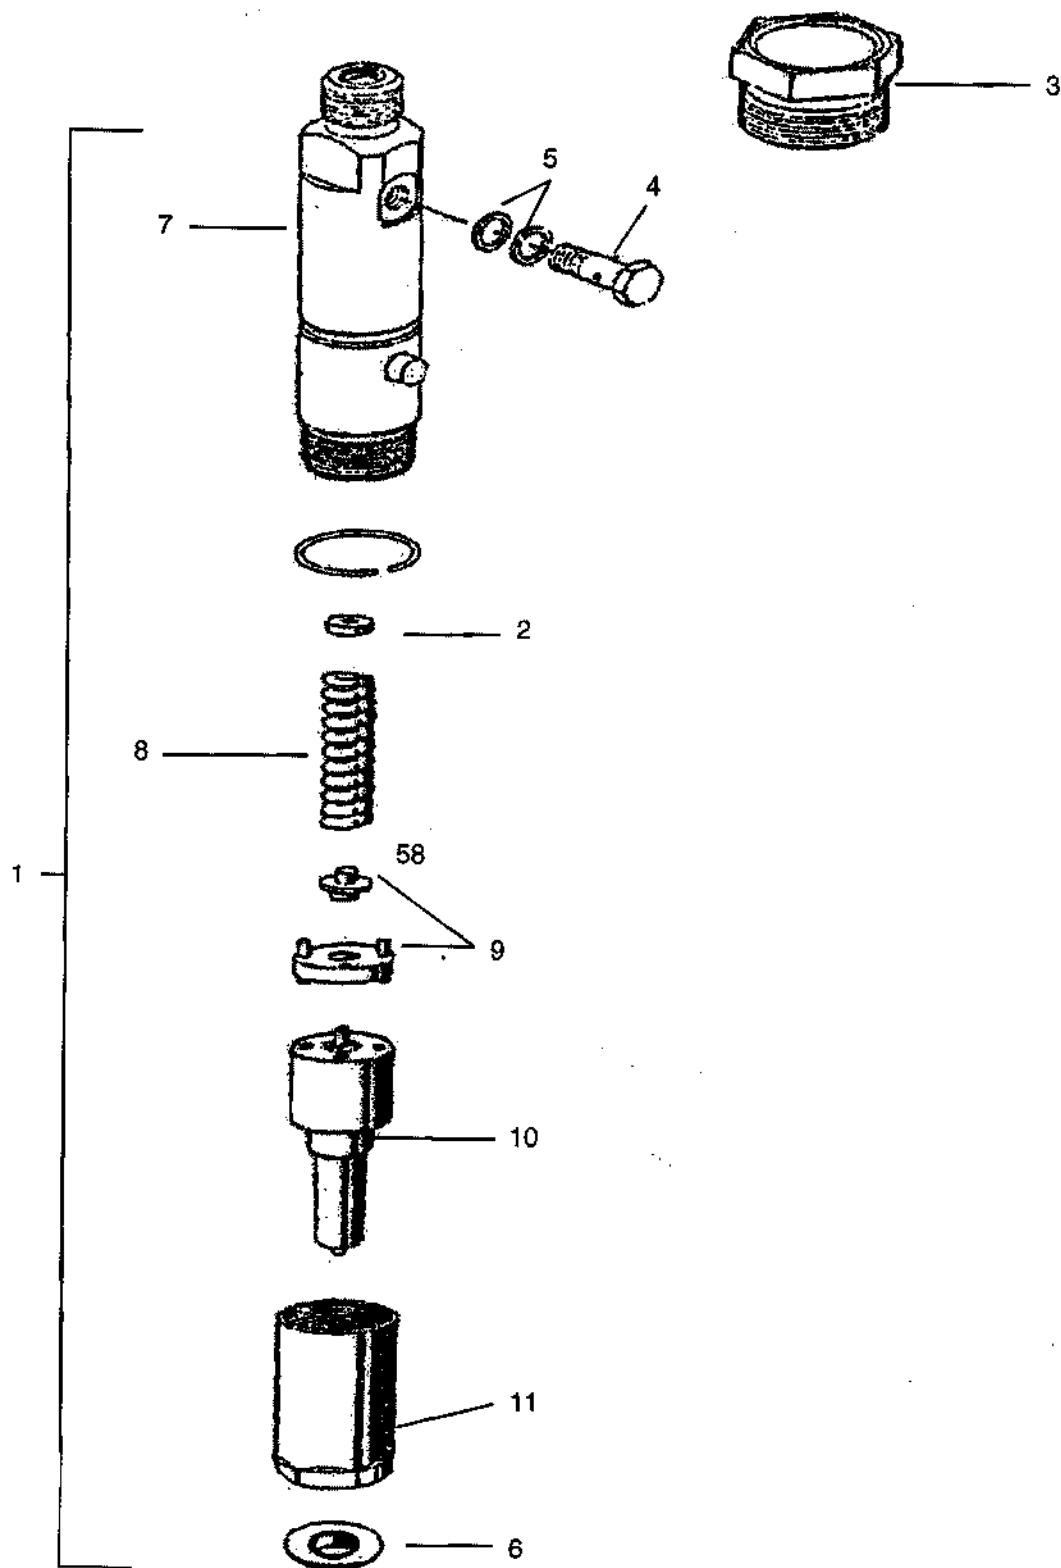


INJECTOR ASSEMBLY

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL14907	Injector Assy. Fuel (VE)	D10047830	3	3
2	ESL15348	Adjusting Washer	-	1	1
3	ESL15349	Retaining Screw	-	AR	AR
4	ESL15350	Banjo Bolt	-	1	1
5	ESL15351	Washer	-	2	2
6	ESL15352	Sealing Washer	D10130700	1	1
7	-	Nozzle Holder (NSS)	-	1	1
8	-	Spring (NSS)	-	1	1
9	-	Seat, Spring (NSS)	-	1	1
10	-	Nozzle (NSS)	-	1	1
11	-	Cap, Nut Nozzle (NSS)	-	1	1

INJECTOR ASSEMBLY

665 / 665 DTC

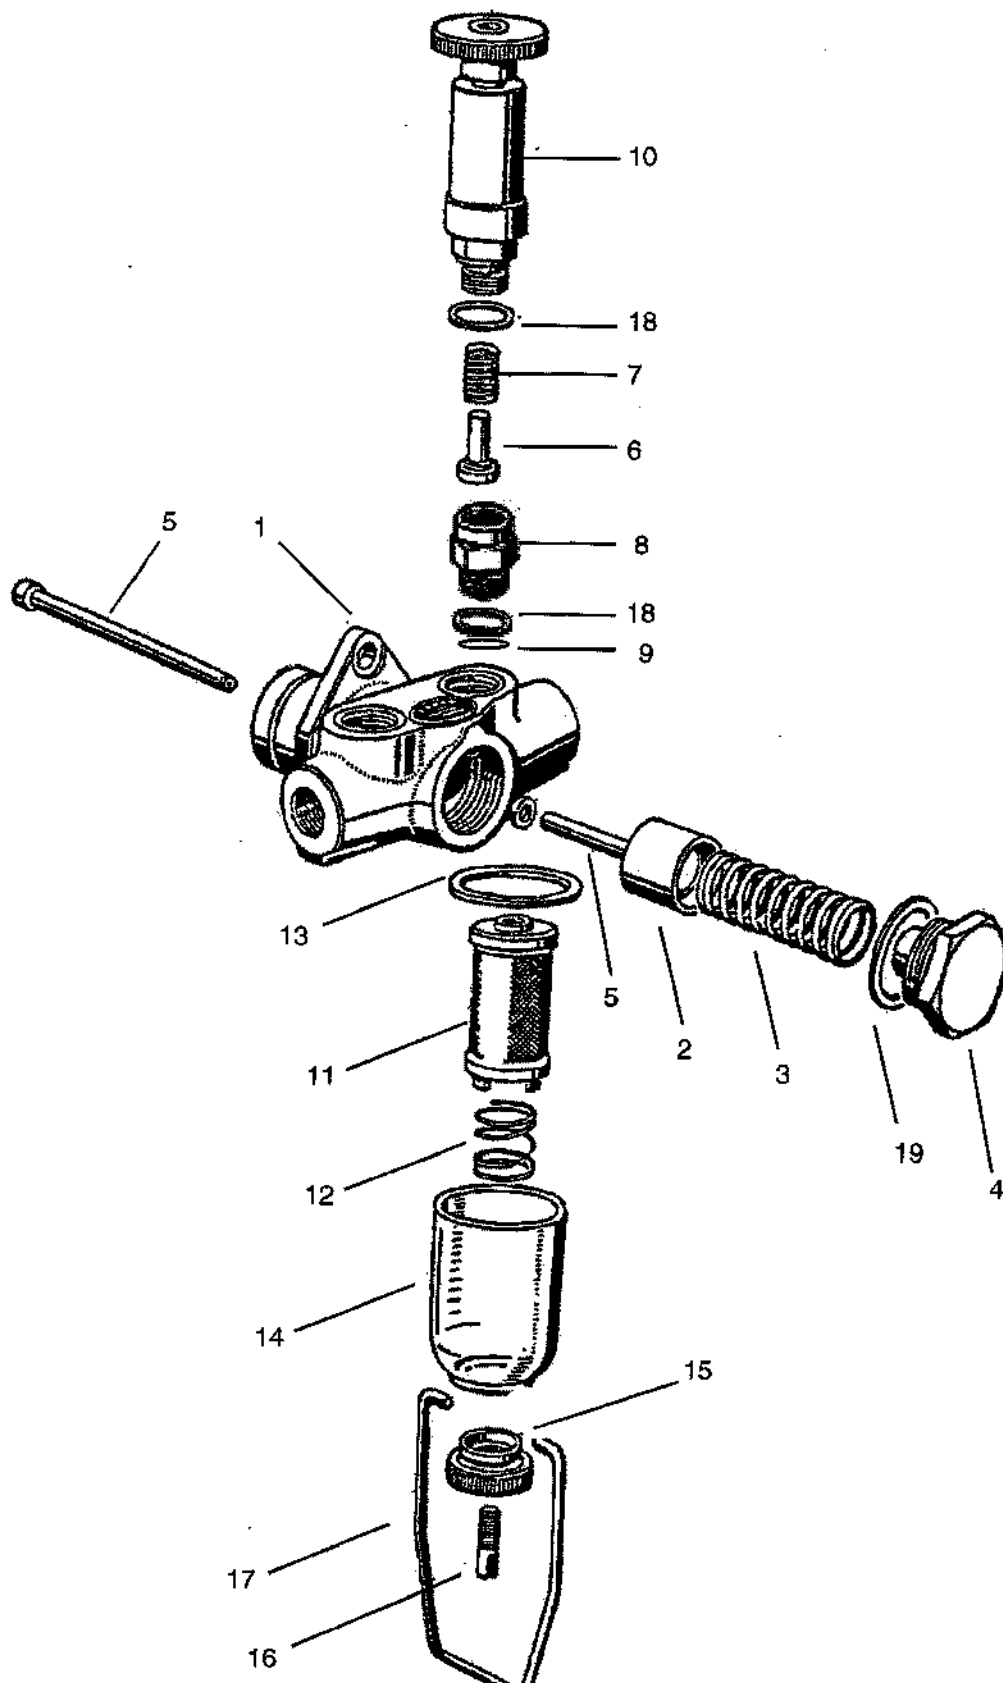


FUEL FEED PUMP & PRE-FILTER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
-	ESL10442	Fuel Feed Pump Assembly (Includes Items #1-2a)	D10105280	1	1
1	-	Housing, Fuel Feed Pump (NSS)	-	1	1
2	-	Pump Plunger (NSS)	-	1	1
3	ESL10426	Spring, Pump Plunger	-	1	1
4	ESL10427	Closing Plug	-	1	1
5	ESL10428	Pressure Spindle	-	1	1
6	ESL10429	Valve	-	1	1
7	ESL10430	Spring	-	1	1
8	ESL10431	Reducing Nipple	-	1	1
9	ESL13406	'O' Ring	D10105330	1	1
10	ESL10432	Hand Primer	-	1	1
11	ESL10433	Prefilter Sieve	-	1	1
12	ESL10434	Spring	-	1	1
13	ESL10435	Sealing Washer	D10105470	1	1
14	ESL10436	Prefilter Housing	-	1	1
15	ESL10437	Clamping Nut	D83000310	1	1
16	ESL10438	Stud	D10105390	1	1
17	ESL10439	Clip	-	1	1
18	ESL10440	Sealing Ring	-	2	2
19	ESL10441	Sealing Ring	-	1	1

FUEL FEED PUMP & PRE-FILTER

665 / 665 DTC

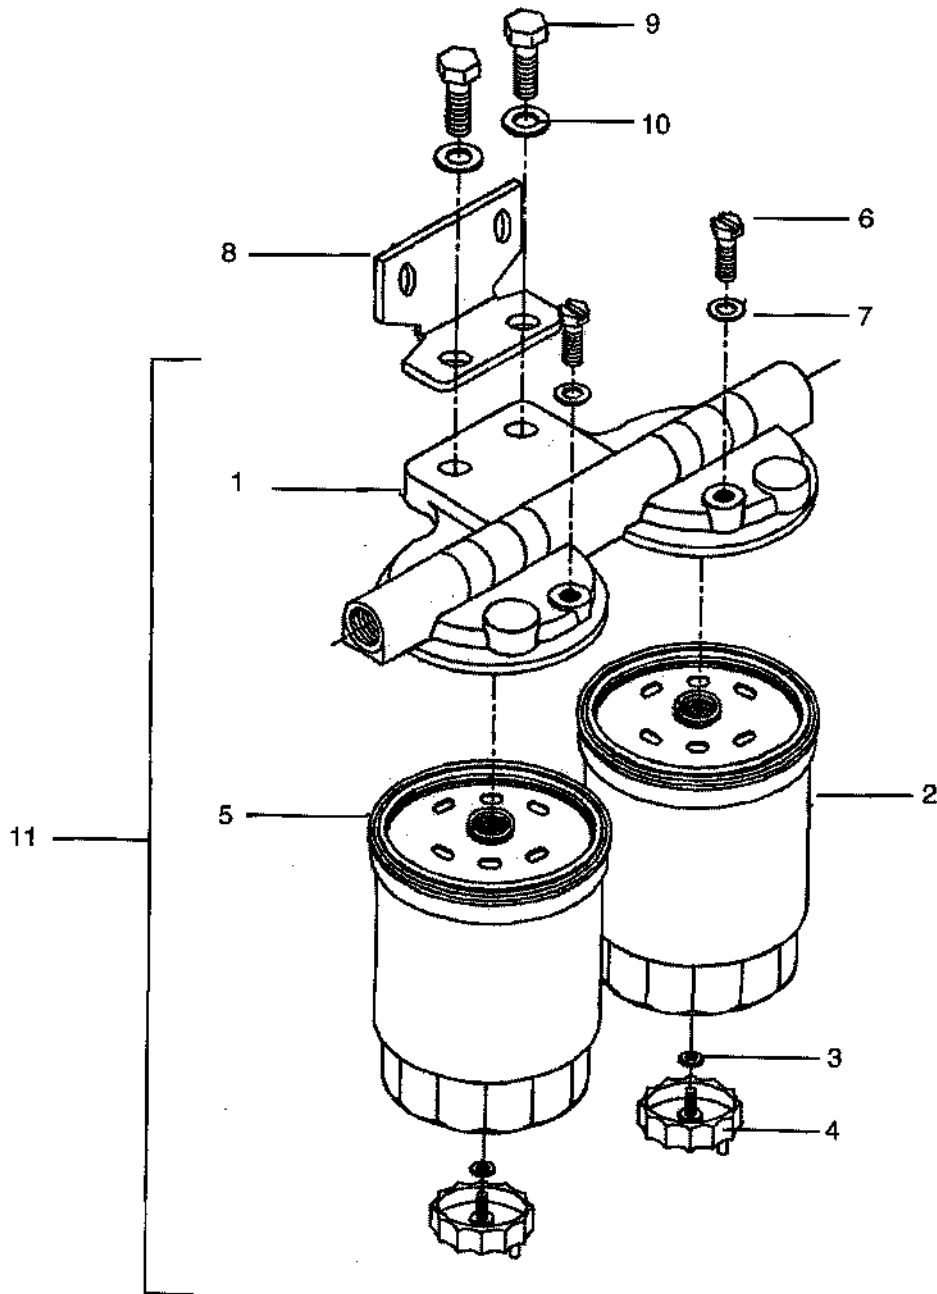


FUEL INJECTION PUMP

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL15353	Filter Cover	-	1	1
2	ESL15354	Exchange Filter (Secondary)	-	1	1
3	ESL15355	Sealing Ring	-	2	2
4	ESL15356	Drain Plug	-	2	2
5	ESL15357	Exchange Filter (Primary)	-	1	1
6	ESL15358	AirVent Screw	-	2	2
7	ESL15359	Flat Seal Ring	-	2	2
8	ESL15329	Bracket Assy. Fuel Filter	D10044850	1	1
9	304666S8	Bolt, (3/8-16x0.875) Hex Head	-	2	2
10	44726S8	Washer, (3/8) Flat	-	2	2
11	ESL13313	Fuel Filter Assembly	-	1	1

FUEL INJECTION PUMP

665 / 665 DTC

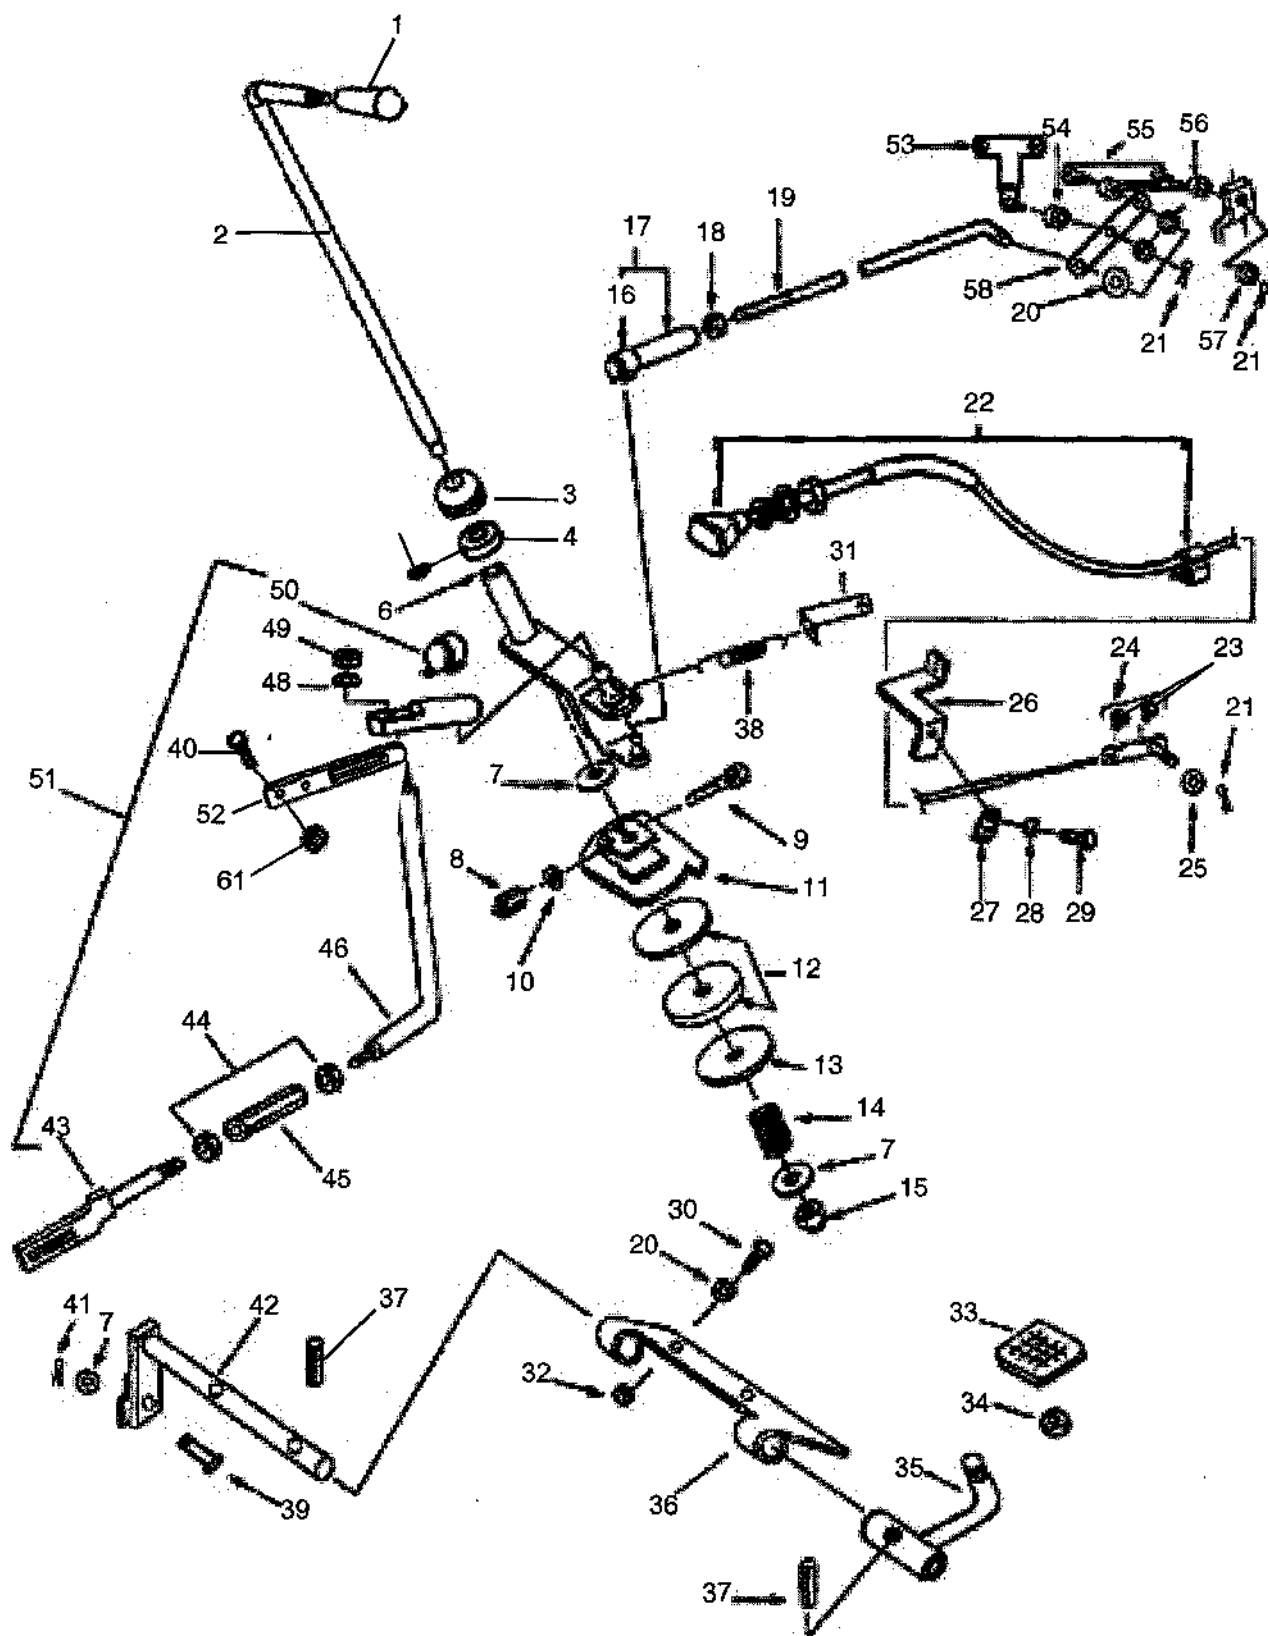


THROTTLE & ACCELERATION CONTROLS

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL12687	Knob, Hand Throttle	D10042450	1	1
2	ESL12689	Lever Assembly, Hand Throttle (Includes Item #1)	D10046660	1	1
3	ESL12636	Grommet	-	1	1
4	ESL13300	Stop, Throttle Control Lever	-	1	1
5	N60550S8	Bolt, Hex Head (M5x0.8-8)	-	1	1
6	ESL10455	Arm Assembly, Throttle Control	D10019090	1	1
7	44726S8	Washer, Flat (3/8)	-	3	3
8	82835179	Nut, Hex (5/16-24)	-	1	1
9	379586S8	Bolt (5/16-24*1.25)	-	1	1
10	ESL11674	Washer, Flat (5/16)	D10018690	1	1
11	ESL10461	Plate Assembly, Throttle Control	D10017990	1	1
12	ESL10457	Disc, Throttle Control Friction	D10018170	2	2
13	ESL10460	Plate, Throttle Lever Friction	D10021590	1	1
14	ESL10452	Spring, Main Control Lever	-	1	1
15	ESL11791	Nut, Thick Lock (3/8-24)	-	1	1
16	ESL10463	Clip, Throttle Control	D10105110	1	1
17	ESL10462	Connector, Throttle Control Rod	D10105120	1	1
18	33796S8	Nut, Hex (1/4-28)	-	1	1
19	ESL15611	Rod Assembly, Throttle Control (Includes Items 16-18)	D10045210	1	1
20	44719S8	Washer, Flat (1/4)	-	3	3
21	ESL12688	Pin, Cotter (1/16x0.50)	D10000640	5	5
22	ESL10468	Control Assembly, Fuel Shut Off	D10017670	1	1
23	ESL11858	Screw	D82000100	2	2
24	ESL10471	End, Fuel Shut Off Cable (Includes Item #23)	D10011820	1	1
25	ESL11676	Washer, Fuel Shut Off	D10011810	1	1
26	ESL13278	Bracket Assembly, Shut Off Cable	D10017710	1	1
27	ESL10478	Clamp, Fuel Shut Off Cable	D10017350	1	1
28	34803S8	Washer, Lock (10)	-	1	1
29	54042S8	Screw (10-24)	-	1	1
30	ESL12014	Bolt, Hex Head (1/4-28x0.62)	D81000390	2	2
31	ESL13331	Bracket Acceleration Return Spring	D10043110	2	2
32	33796S8	Nut, Hex (1/4-28)	-	2	2
33	ESL12690	Pedal	-	1	1
34	ESL12691	Nut, Hex (M10)	D83500510	1	1
35	ESL12692	Pedal Assembly Acc. (Shank & Hub)	-	1	1
36	ESL12693	Bracket Acc. Pedal	D10103590	1	1
37	ESL11156	Pin, Spring (3/16x0.8125)	D87000050	2	2
38	ESL10480	Spring	D10012750	1	1
39	76023S8	Pin, Clevis (3/8x13/16)	-	1	1
40	ESL13684	CS Screw (M8x1.25x20)	-	2	2

THROTTLE & ACCELERATION CONTROLS

665 / 665 DTC

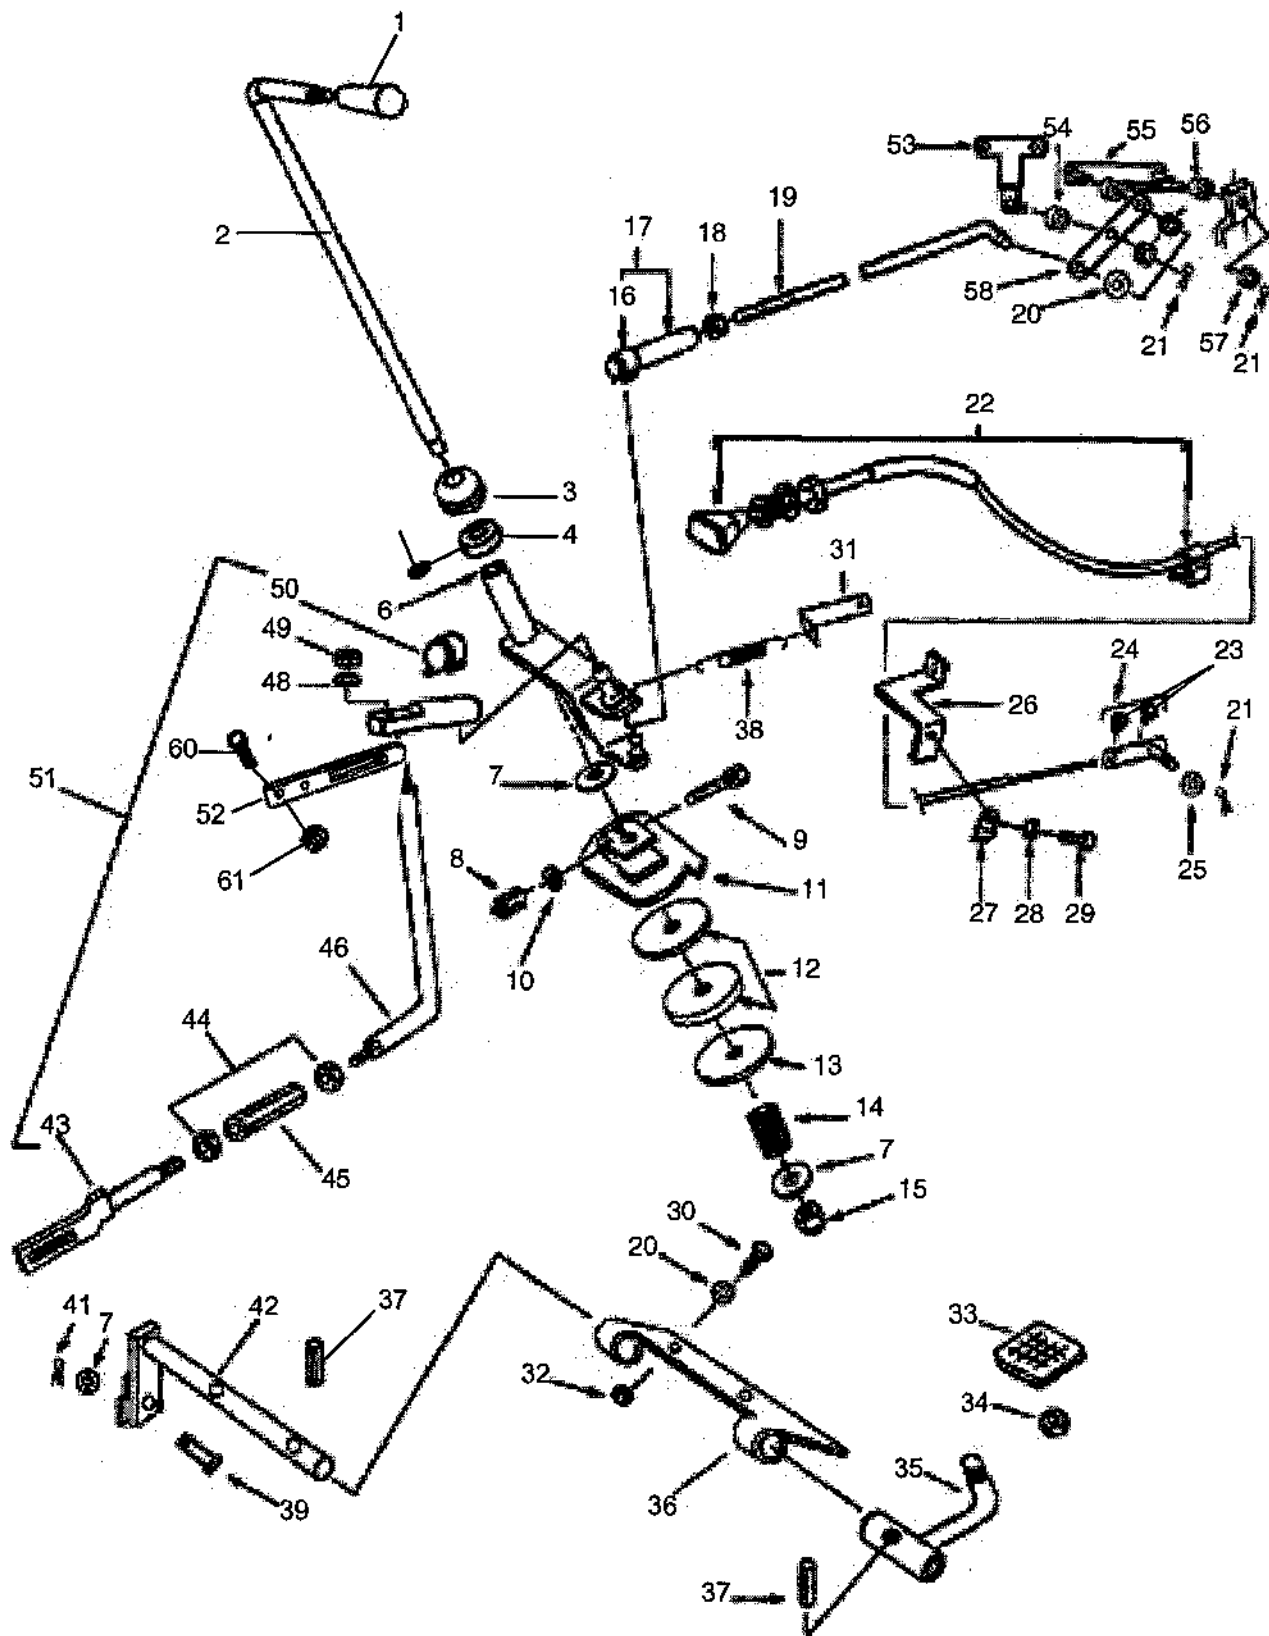

THROTTLE & ACCELERATION CONTROLS

665 / 665 DTC


ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
41	ESL12679	Pin Cotter (3/32x0.75)	D10013450	1	1
42	ESL12680	Arm Assembly Acceleration Control	-	1	1
43	ESL12681	Rod Assembly Acceleration Control	-	1	1
44	N620013S8	Nut, Hex (M8x1.25)	-	2	2
45	ESL12682	Coupler Acceleration Control	D10103620	1	1
46	ESL12683	Rod Acceleration Control	-	1	1
47	ESL12684	Connection Assembly	D10103600	1	1
48	N630067S8	Washer, Flat (M6)	-	1	1
49	N620012S8	Nut, Hex (M6x1.0)	-	1	1
50	ESL10464	Lock Throttle Lever	D10019070	1	1
51	ESL12685	Link Assembly Acceleration Control	D10043090	1	1
52	ESL12686	Guide Foot Acceleration	D10043100	1	1
53	ESL10472	Bracket Assembly Fuel Shut Off	-	1	1
54	ESL10476	Spacer	D10060800	1	1
55	ESL10473	Plate Assembly, Throttle Control	-	1	1
56	ESL10474	Spacer	D10060780	2	2
57	ESL10475	Spacer	D10060790	3	3
58	ESL10477	Plate	D10060190	1	1

THROTTLE & ACCELERATION CONTROLS

Notes

COOLING SYSTEM

665 / 665 DTC

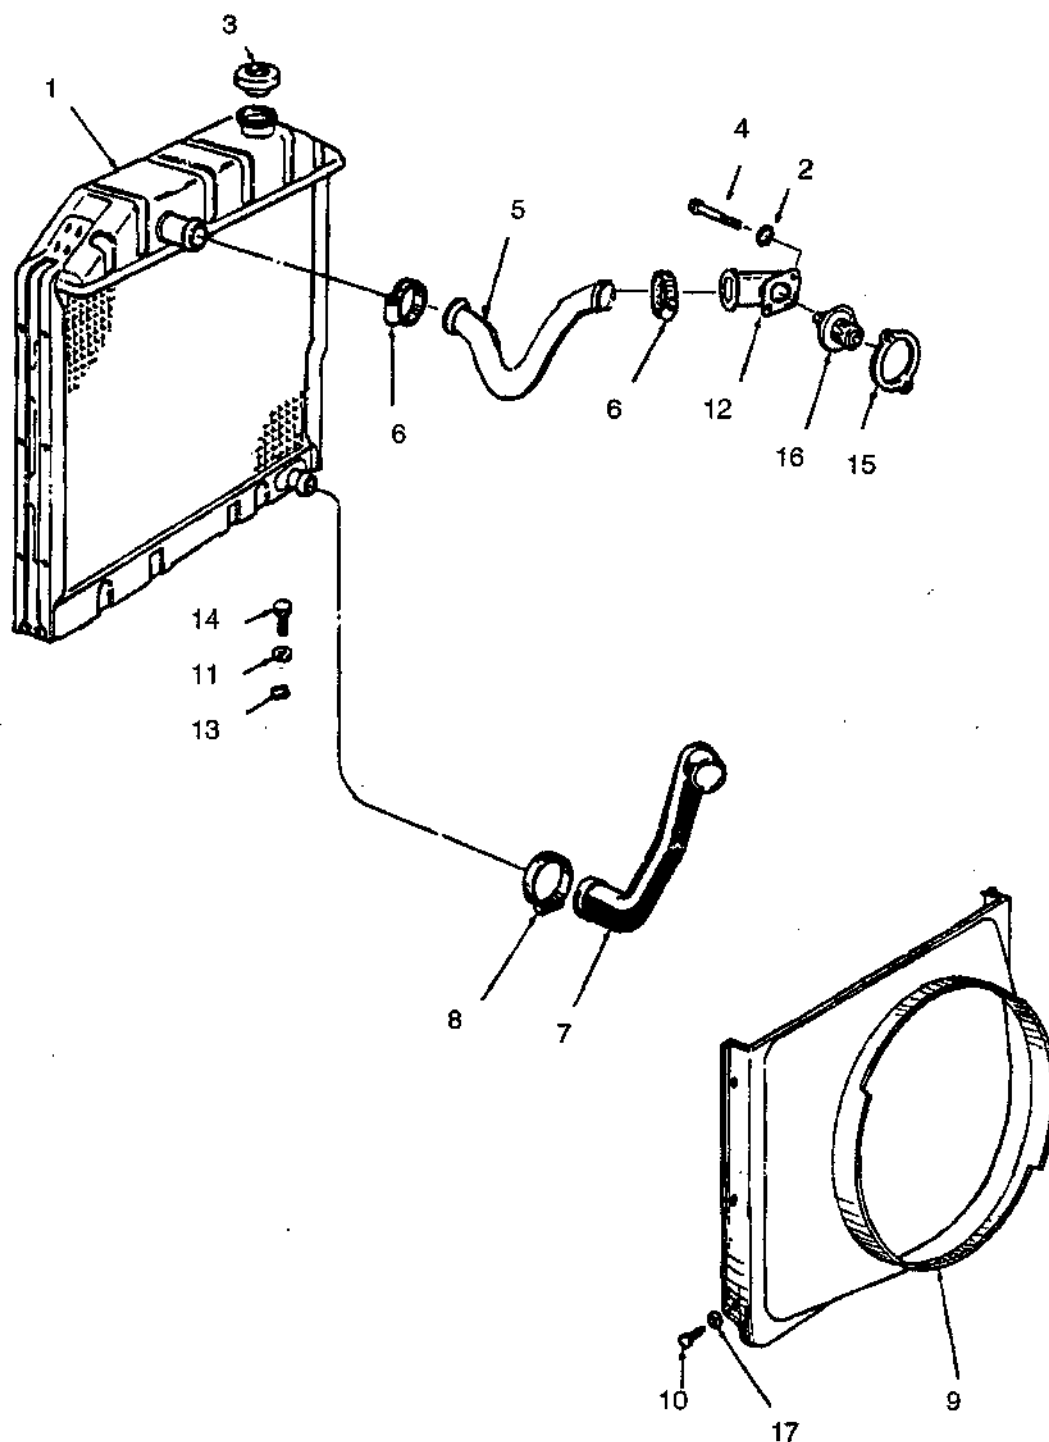


WATER PUMP

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL15361	Radiator And Shroud Assembly	D10039270	1	1
2	ESL15365	Washer, (M8) Spring Lock	D86500030	2	2
3	ESL10493	Cap Assembly Radiator Pressure	D10105080	1	1
4	ESL15364	Bolt, (M8x30) Hex Head	D81501370	2	2
5	ESL10494	Hose Radiator Upper	D10017340	1	1
6	ESL10495	Hose Clamp Upper	D10017540	2	2
7	ESL10496	Hose Radiator Lower	D10018350	1	1
8	ESL15360	Clamp Radiator Hose Lower	D10017620	2	2
9	ESL10498	Shroud - Fan	-	1	1
10	ESL11859	Screw And Lock Washer Assy. (#8-32x3/8)	-	6	6
11	ESL10500	Insulator Radiator Support	D10018340	2	2
12	ESL10503	Connection Water Outlet	D10011770	1	1
13	ESL15362	Nut, (7/16-14) Nylock	D10019060	2	2
14	23607S8	Bolt, (7/16-14x3.50) Round Head	-	2	2
15	ESL10502	Gasket Water Outlet	D10011760	1	1
16	ESL15363	Thermostat Assembly Water	D10011750	1	1
17	44710S8	Washer, (#8) Flat	-	6	6

WATER PUMP

665 / 665 DTC

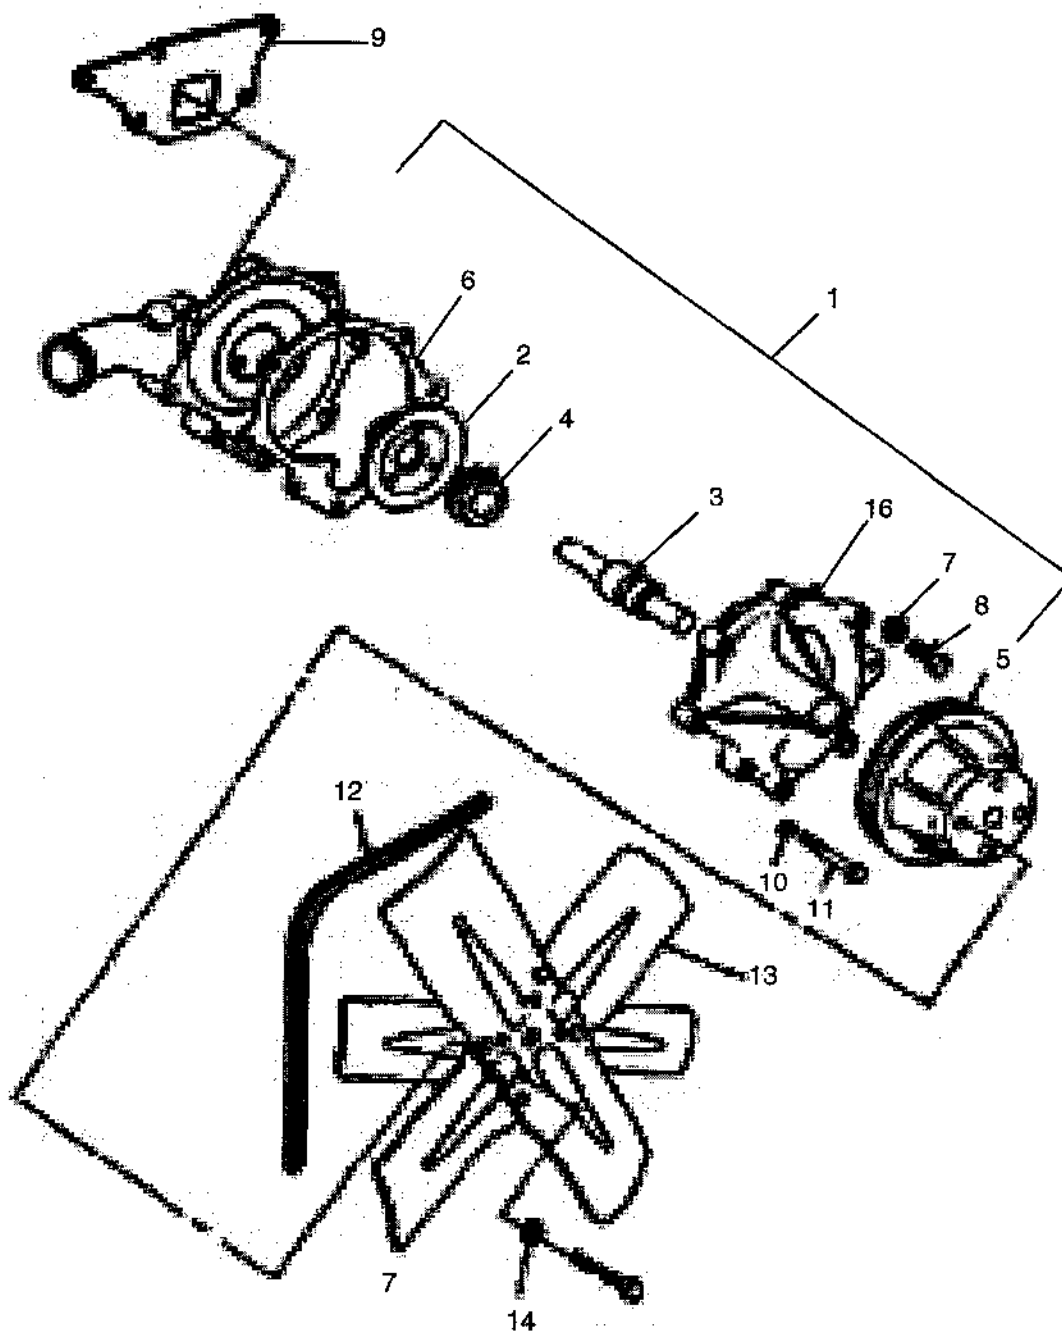

WATER PUMP


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL10520	Pump Assembly Water	D10011230	1	1
2	ESL10508	Impeller Water Pump	D10068820	1	1
3	ESL10509	Bearing Water Pump	D10011240	1	1
4	ESL10510	Seal And Seat Assembly Water Pump	-	1	1
5	ESL10511	Pulley Water Pump	D10062990	1	1
6	ESL10512	Gasket Water Pump Cover	D10063000	1	1
7	34806S8	Washer, (5/16) Spring Lock	-	8	8
8	304758S8	Bolt, (5/16-18x1.50) Hex Head	-	4	4
9	ESL15366	Gasket Water Pump	D10011250	1	1
10	34807S8	Washer, (3/8) Spring Lock	-	4	4
11	300892S8	Bolt, (3/8-16x3.00) Hex Head	-	4	4
12	ESL12222	Belt Drive Cogged	-	1	1
13	ESL15367	Fan Assembly Water Cooling	D10028750	1	1
14	304665S8	Bolt, (5/16-18x0.88) Hex Head	-	4	4
15	ESL12224	Kit Water Repair Koyo Bearing 3610	-	1	1
16	-	Cover Water Pump (NSS)	-	1	1

WATER PUMP


Notes

FRONT END STEERING & 4WD SYSTEM

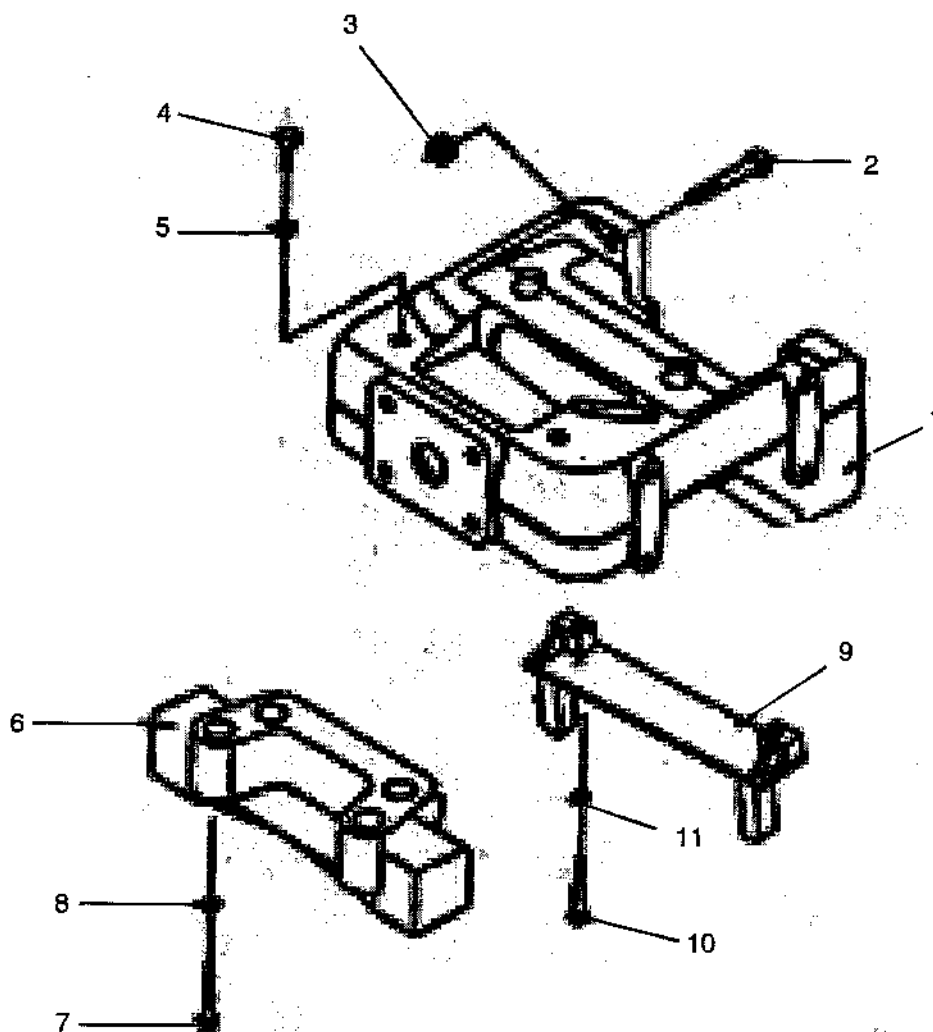

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC
1	ESL14919	Suport Front Axle 4wd	D10045710	- 1
2	304964S8	Bolt, (3/4-10x4.00) Hex Head	-	- 4
3	34674S8	Nut, (3/4-10) Hex	-	- 4
4	ESL14970	Screw, (M6x1.00x12-6.8)Hex Head	D82500050	- 2
5	N630067S8	Washer M6 Flat	-	- 2
6	ESL14612	Adapter Front Pillow Block	D10045500	- 1
7	ESL14613	Bolt Trunion Bracket Mounting	D10012670	- 4
8	ESL11642	Washer 1/2 Flat	D10003580	- 4
9	ESL14604	Stopper Assembly 4 Wheel Drive	D10045520	- 1
10	58679S8	Bolt, (1/2-13x2.50) Hex Head	-	- 2
11	34809S8	Washer 1/2 Spring Lock	-	- 2

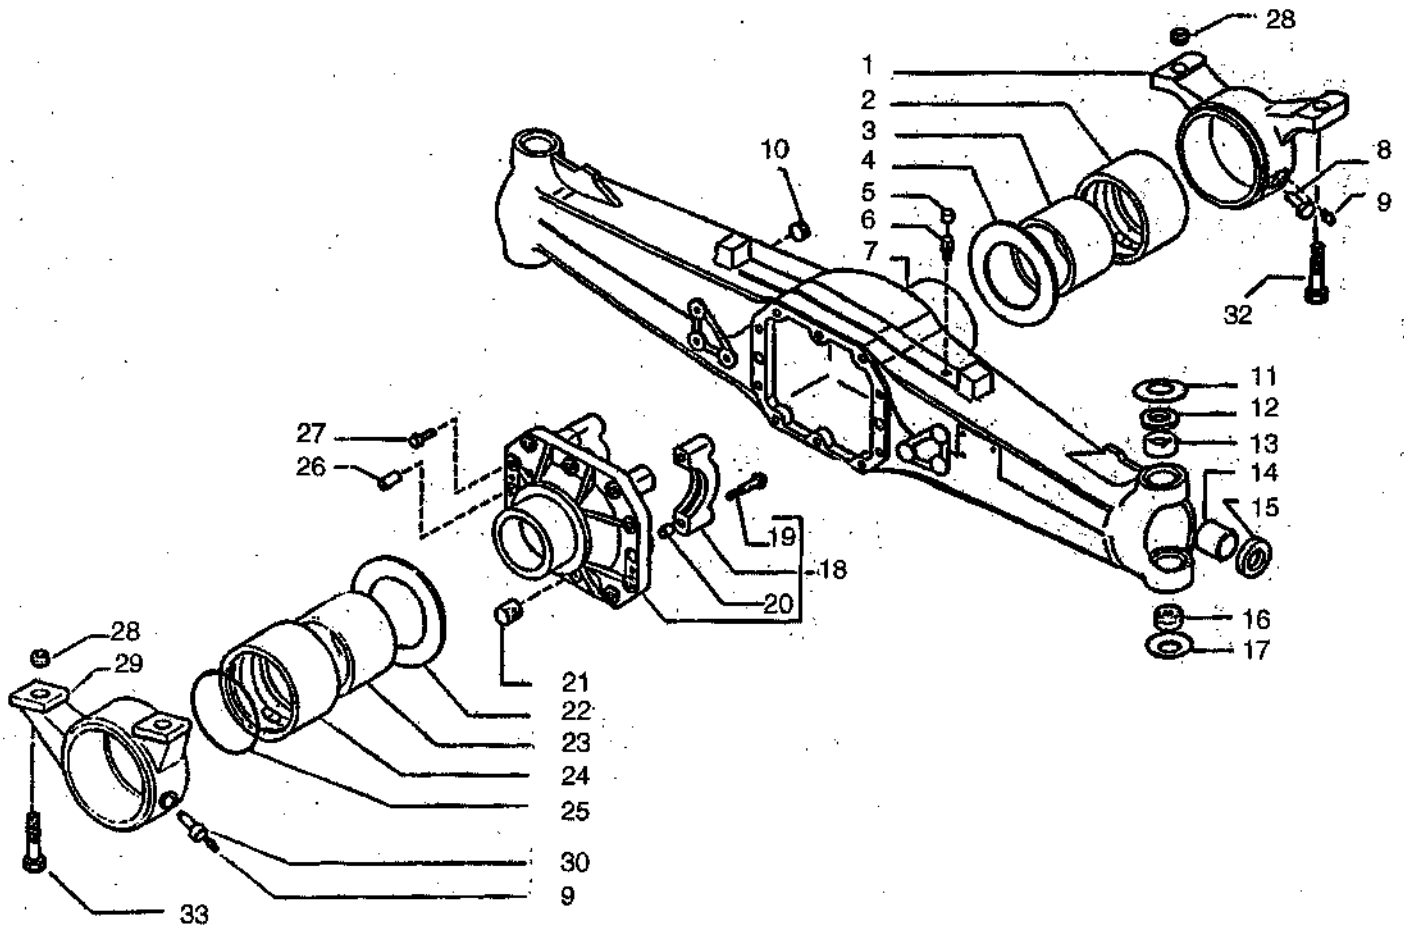


AXLE HOUSING

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY
				665 665 DTC
1	ESL14606	Front Support (Pillow Block)	D10084770	- 1
2	ESL14614	Bush	D10084780	- 1
3	ESL14615	Bush	D10084790	- 1
4	ESL14616	Thrust Washer	D10084800	- 1
5	ESL14617	Protection Cover	D10084810	- 1
6	ESL14618	Breather M10x1	D10084820	- 1
7	ESL14619	Axle Housing	D10084830	- 1
8	ESL14620	Bolt	D10084840	- 1
9	ESL14621	Grease Nipple M6x1	D10084850	- 1
10	ESL14622	Plug 24x1.5	D10084860	- 1
11	ESL14623	Belleville Washer	D10084870	- 2
12	ESL14624	Spacer	D10084880	- 2
13	ESL14625	Bush	D10084890	- 2
14	ESL14626	Bush	D10084900	- 2
15	ESL14627	Seal Ring	D10084910	- 2
16	ESL14628	Spherical Bearing	D10084920	- 2
17	ESL14629	Belleville Washer	D10084940	- 1
18	ESL14630	Differential Support	D10084950	- 1
19	ESL14631	Bolt	D10084960	- 4
20	ESL14632	Centering Bush	D10084970	- 4
21	ESL14634	Plug M24x1.5	D10084980	- 1
22	ESL14633	Thrust Washer	D10084990	- 1
23	ESL14637	Bush	D10085000	- 1
24	ESL14638	Bush	D10085010	- 1
25	ESL14639	'O' Ring	D10046240	- 1
26	ESL14640	Pin Plain Dowel	D10085020	- 2
27	ESL14641	Bolt M12x33	D10085030	- 10
28	ESL14642	Bush	D10045700	- 4
29	ESL14643	Pillow Block Rear	D10085040	- 1
30	ESL14644	Bolt	-	- 1
31	ESL14646	Plug (NI)	D10085050	- 1
32	304912S8	Bolt 3/4-16x2.75 Hex Head	-	- 2
33	304964S8	Bolt 3/4-10x4.00 Hex Head	-	- 4
A	ESL14635	Pillow Block Assembly Front	D10085060	- 1
-	ESL15377	Front Axle Assembly With Pillow Block	D10045640	- 1
-	ESL15378	Kit Rear pillow Block	D10047650	- 1

AXLE HOUSING

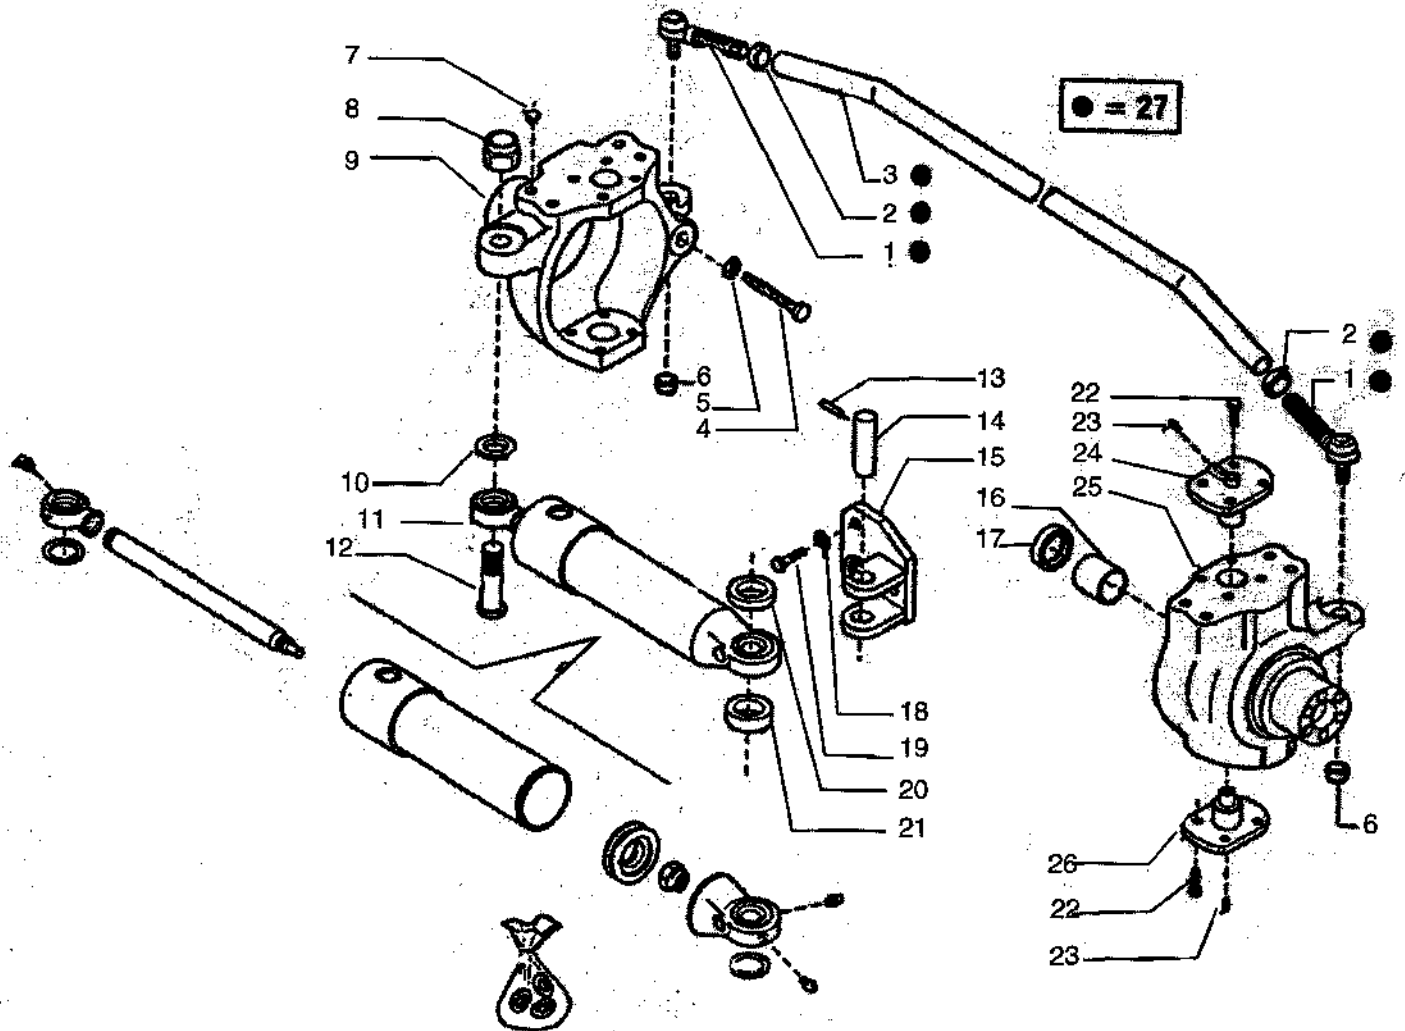


AXLE & STEERING PARTS

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC
1	ESL14636	Ball Joint	D10085070	- 2
2	ESL14647	Nut M20x1.5	D10085080	- 2
3	ESL14648	Steering Rod	D10085090	- 1
4	ESL14649	Bolt M16x2.0x75-8.8 Hex Head	D10085100	- 2
5	ESL14650	Nut M16	D10085110	- 2
6	ESL14651	Nut M14x1.5	D10085120	- 2
7	ESL14652	Plug D14.6x9.5	D10085130	- 8
8	ESL14653	Nut Self Lock m22x1.5	D10085140	- 1
9	ESL14654	Swivel Housing LH	D10085150	- 1
10	ESL14655	Washer 30x22.1x4	D10085160	- 1
11	ESL14656	Steering Cylinder	D10085170	- 1
12	ESL14657	Pin D22x100	D10085180	- 1
13	ESL14658	Pin 8x35 Spring Dowel	D87000130	- 1
14	ESL14659	Pin D22x95	D10085190	- 1
15	ESL14660	Clamp	D10085200	- 1
16	ESL14661	Bush	D10085210	- 2
17	ESL14662	Seal Ring 45x60x16	D10085220	- 2
18	ESL14663	Ring D14	D10085230	- 3
19	ESL14664	Bolt M14x35	D10085240	- 3
20	ESL14665	Spacer 33.7x22.1x7.5	D10085250	- 1
21	ESL14666	Spacer 33.7x22.1x11	D10085260	- 1
22	ESL14667	Bolt M12x1.75x30 (Self Lock)	D10085270	- 16
23	ESL14637	Grease Nipple M6x1	D10084990	- 4
24	ESL14669	King Pin	D10085280	- 2
25	ESL14670	Swivel Housing RH	D10085290	- 1
26	ESL14671	King Pin	D10085300	- 2
27	ESL14672	Steering Rod Assembly	D10085310	- 1

AXLE & STEERING PARTS

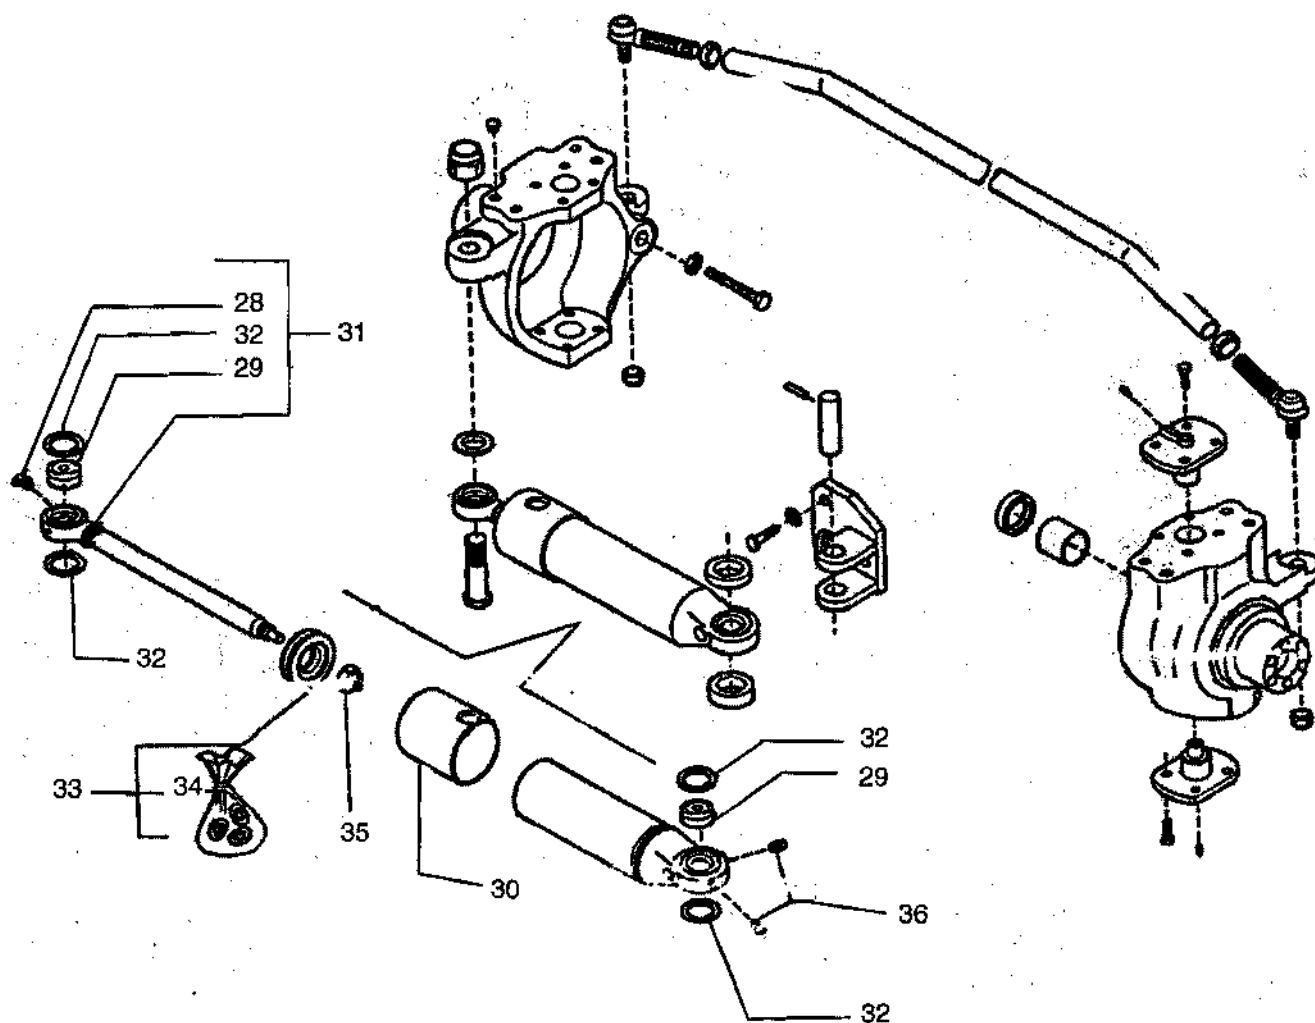


AXLE HOUSING

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY
				665 665 DTC
28	ESL14673	Grease Nipple M6x1	D10085320	- 1
29	ESL14674	Ball Joint	D10085330	- 2
30	ESL14675	Cylinder Head	D10085340	- 1
31	ESL14676	Rod Assembly	D10085350	- 1
32	ESL14677	Circlip	D10085360	- 2
33	ESL14678	Piston & Cylinder Seal Kit	D10085370	- 1
34	ESL14679	Cylinder Seal Kit	D10085380	- 1
35	ESL14680	Lock Nut M16x1.5	D10085390	- 1
36	-	Grease Nipple M6x1	-	- 2

AXLE HOUSING

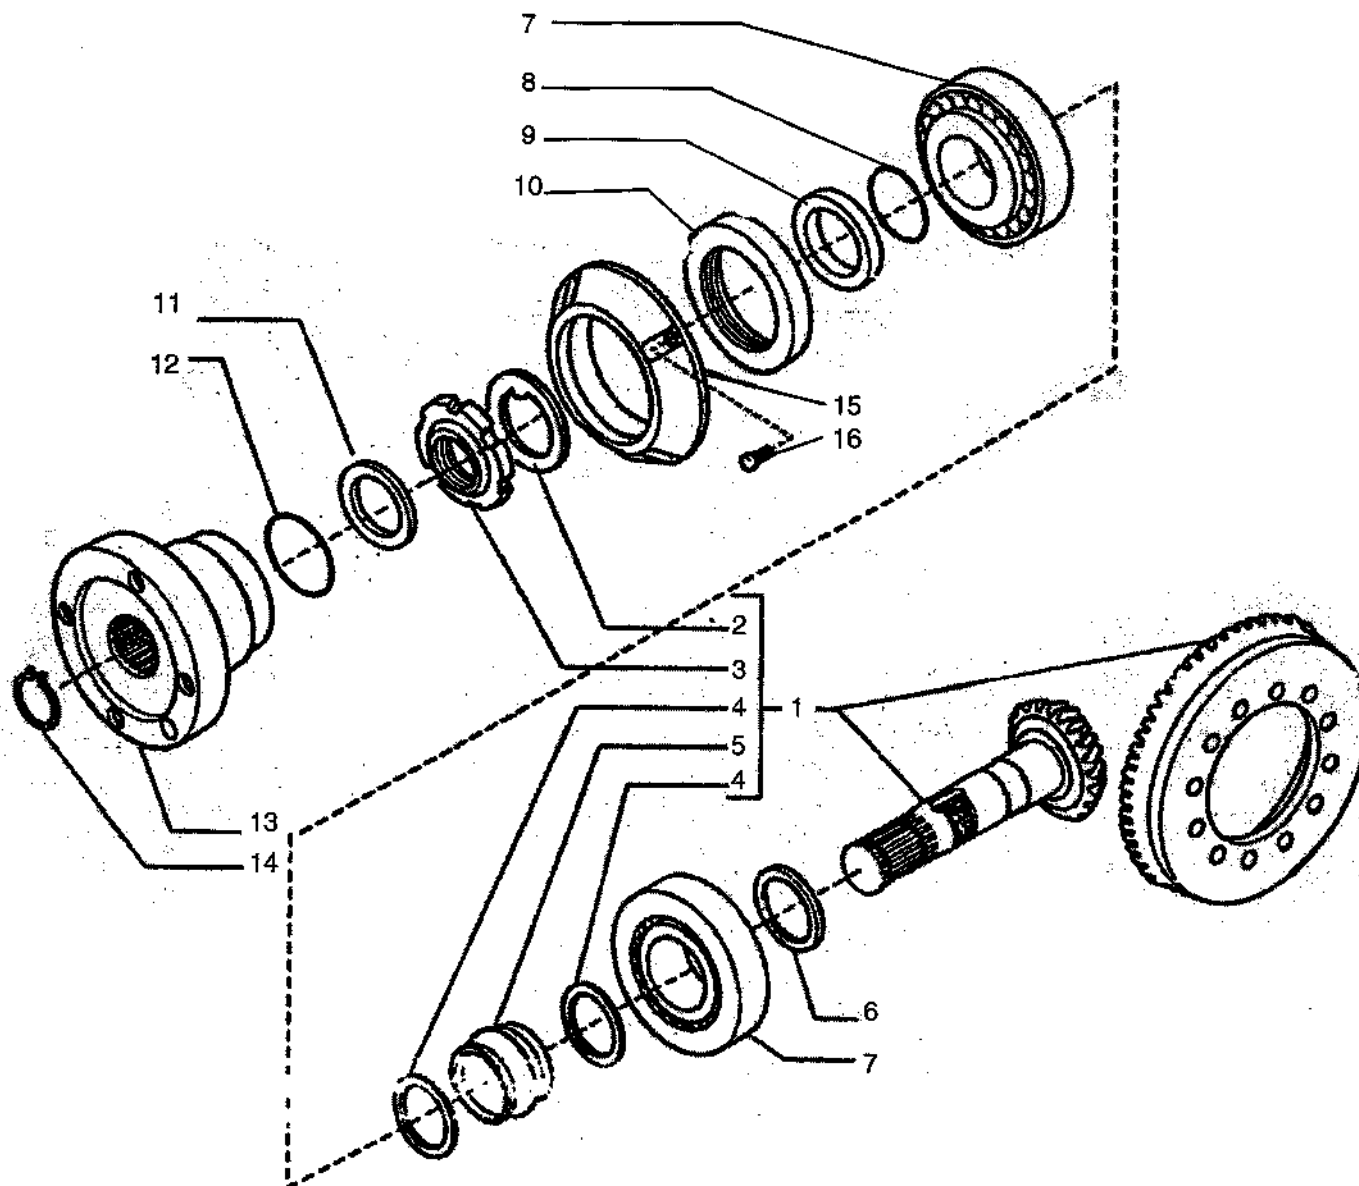


BEVEL GEAR - PUNCH SET

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL14682	Bevel Gear & Pinion 13/30	D10085400	-	1
2	ESL14683	Lock Washer	D10085410	-	1
3	ESL14684	Ring Nut M35x1.5	D10085420	-	1
4	ESL14685	Washer 45x35.5x2	D10085430	-	1
5	ESL14686	Collapsible Spacer	D10085440	-	1
6	ESL14687	Shim 2.50MM	D10085450	-	1
6	ESL14688	Shim 2.60MM	D10085460	-	1
6	ESL14689	Shim 2.70MM	D10085470	-	1
6	ESL14690	Shim 2.80MM	D10085480	-	1
6	ESL14691	Shim 2.90MM	D10085490	-	2
6	ESL14692	Shim 3.00MM	D10085500	-	2
6	ESL14693	Shim 3.10MM	D10085510	-	2
6	ESL14694	Shim 3.20MM	D10085520	-	2
6	ESL14695	Shim 3.30MM	D10085530	-	2
6	ESL14696	Shim 3.40MM	D10085540	-	2
7	ESL14697	Bearing	D10085550	-	1
8	ESL14698	'O' Ring	D10085560	-	1
9	ESL14699	Spacer	D10085570	-	4
10	ESL14701	Seal Ring	D10085580	-	4
11	ESL14702	Washer 45x31.5x3	D10085590	-	1
12	ESL14703	'O' Ring	D10085600	-	1
13	ESL14704	Flange	D10085610	-	1
14	ESL14705	Snap Ring	D10085620	-	1
15	ESL14706	Flange	D10085630	-	1
16	ESL14707	Bolt M6x16	D10085640	-	2

BEVEL GEAR - PUNCH SET

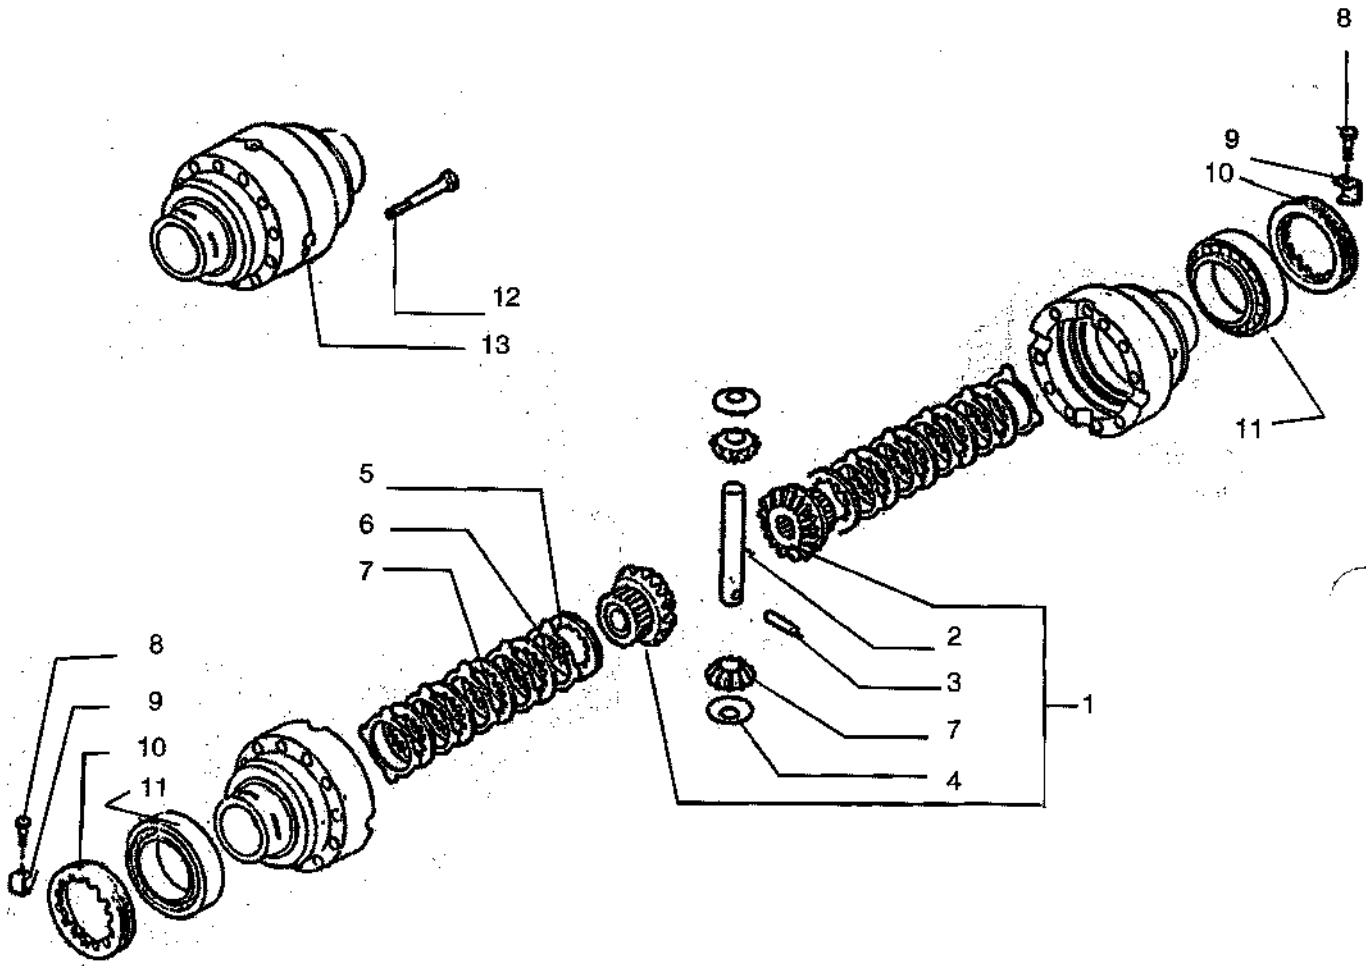


BEVEL GEAR - PUNCH SET

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC
1	ESL14709	Differential Kit	D10085650	- 1
2	ESL14710	Shaft	D10085660	- 1
3	ESL14711	Pin, (D.6x40)	D10085670	- 2
4	ESL14712	Trust Washer	D10085680	- 2
5	ESL14713	Plate	D10085690	- 2
6	ESL14714	Drive Plate	D10085700	- 10
7	ESL14715	Plate	D10085710	- 8
8	ESL14716	Screw, (M6x10) (Self Lock)	D10085720	- 2
9	ESL14717	Locking Plate	D10085730	- 2
10	ESL14718	Ring Nut	D10085740	- 2
11	ESL14719	Bearing	D10085750	- 2
12	ESL14620	Bolt, (M10X1.5X75)	D10084840	- 12
13	ESL14721	Differential Housing	D10085770	- 1

BEVEL GEAR - PUNCH SET

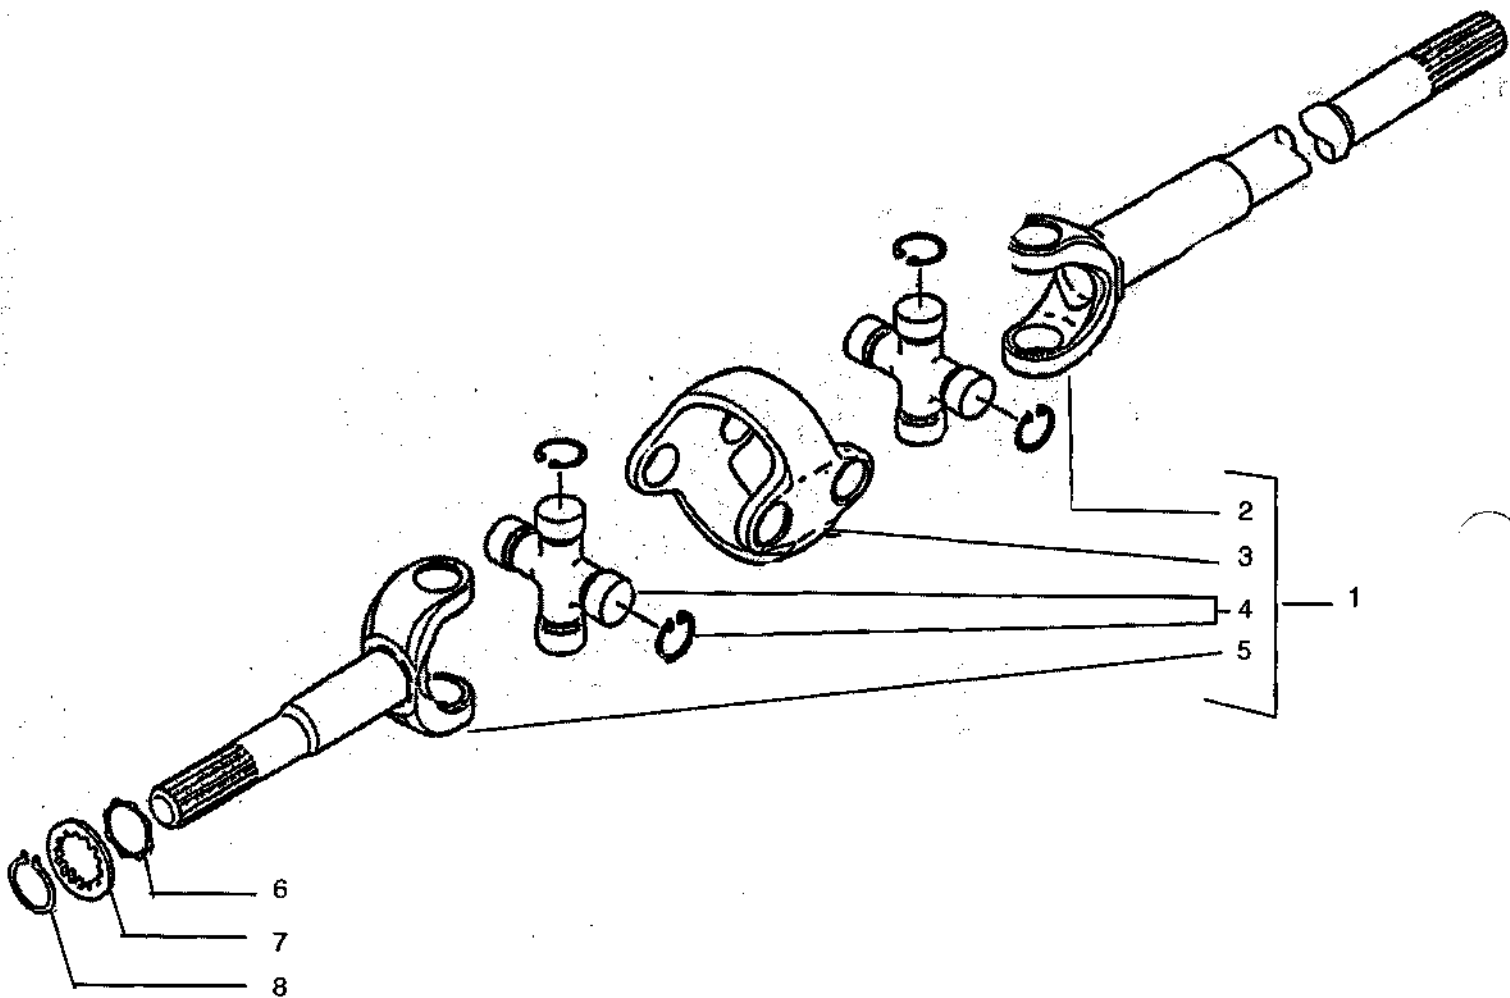


DIFFERENTIAL

665 / 665 DTC

ITEM NO.	PART NO.	DESCRIPTION	VENDOR NO.	QUANTITY
				665 665 DTC
1	ESL14722	Double Joint	D10085780	- 2
2	ESL14723	Fork (Diff Side)	D10085790	- 2
3	ESL14724	Central Body	D10085800	- 2
4	ESL14725	Spider	D10085810	- 4
5	ESL14726	Fork (Wheel Hub)	D10085820	- 2
6	ESL14727	Thrust Washer	D10085830	- 2
7	ESL14728	Thrust Washer	D10085840	- 2
8	ESL14729	Snap Ring D45	D10085850	- 2

DIFFERENTIAL

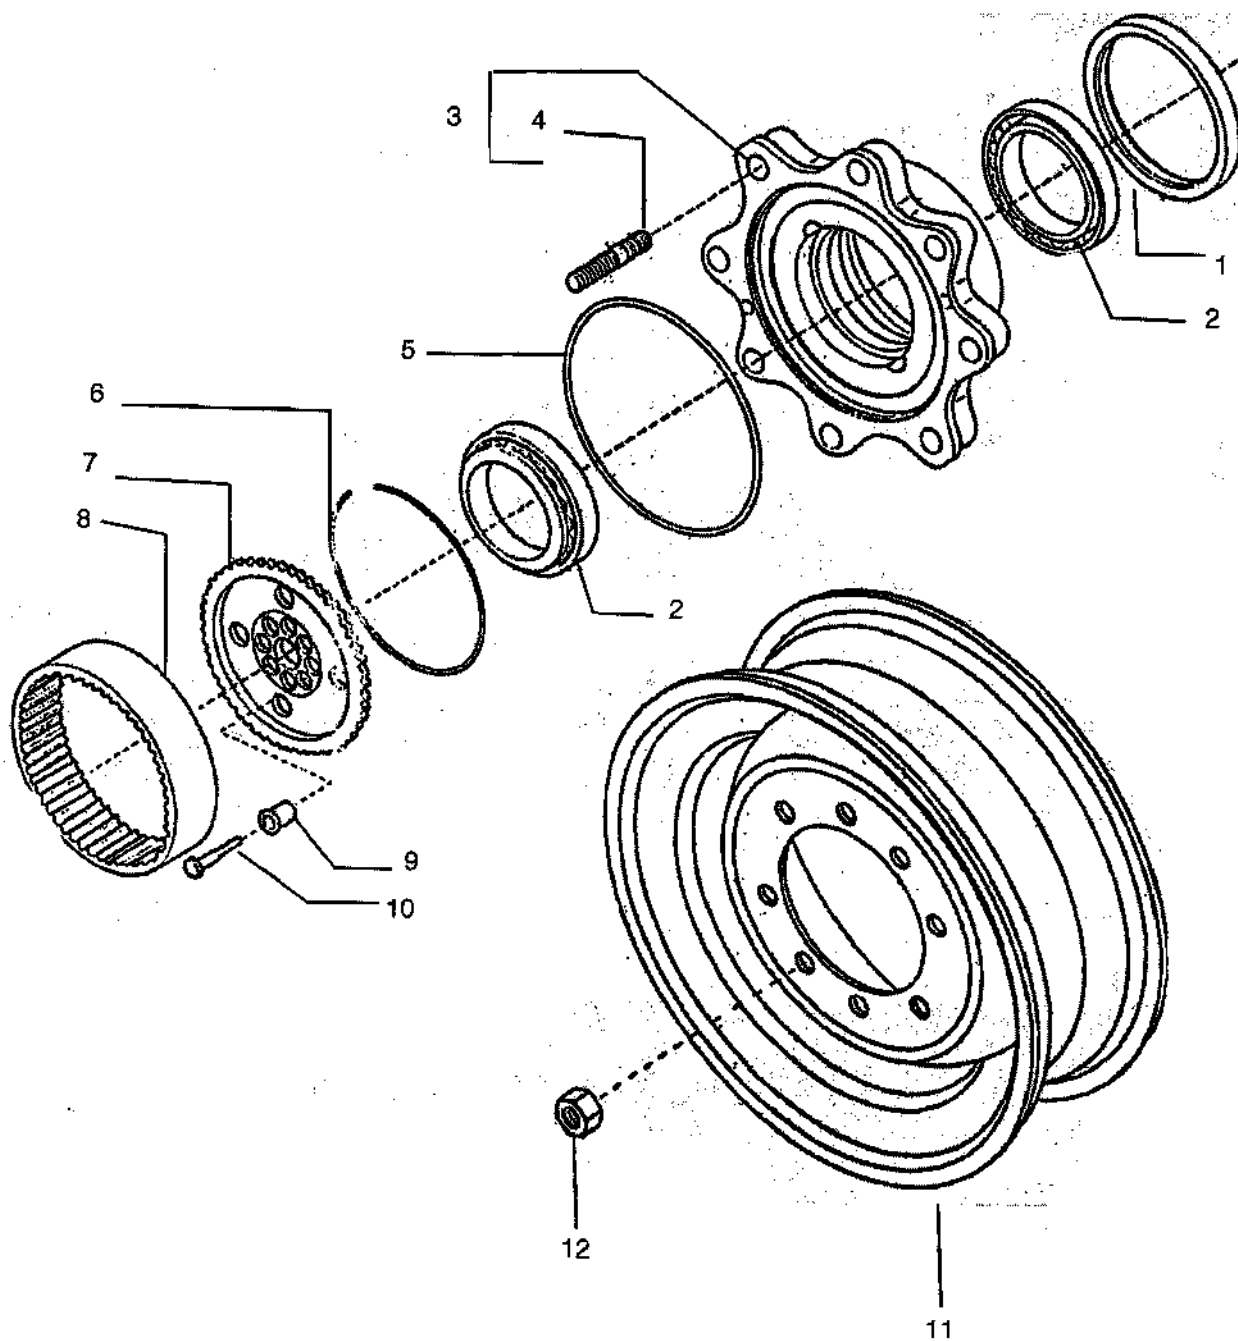


DOUBLE JOINT

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY
				665 665 DTC
1	ESL14730	Oil Seal Ring	D10085860	- 2
2	ESL14731	Bearing	D10085870	- 4
3	ESL14732	Wheel Hub Kit	D10085880	- 2
4	ESL14733	Stud	D10085890	- 16
5	ESL14734	'O' Ring	D10085820	- 2
6	ESL14735	Ring	D10085830	- 2
7	ESL14736	Wheel Carrier	D10085840	- 2
8	ESL14737	Crown Gear	D10085850	- 2
9	ESL14638	Centering Bush	D10085940	- 12
10	ESL14639	Bolt M10x45 (Self Lock)	D10085950	- 12
11	ESL14640	Wheel assembly Front W10-24	D10045660	- 2
12	ESL14641	Nut M18x1.50-8 Hex Head Collared (Rear Wheel Bolt)	D10043020	- 12

L4g
 Bolt
 ESL15061
 L4g nut


DOUBLE JOINT

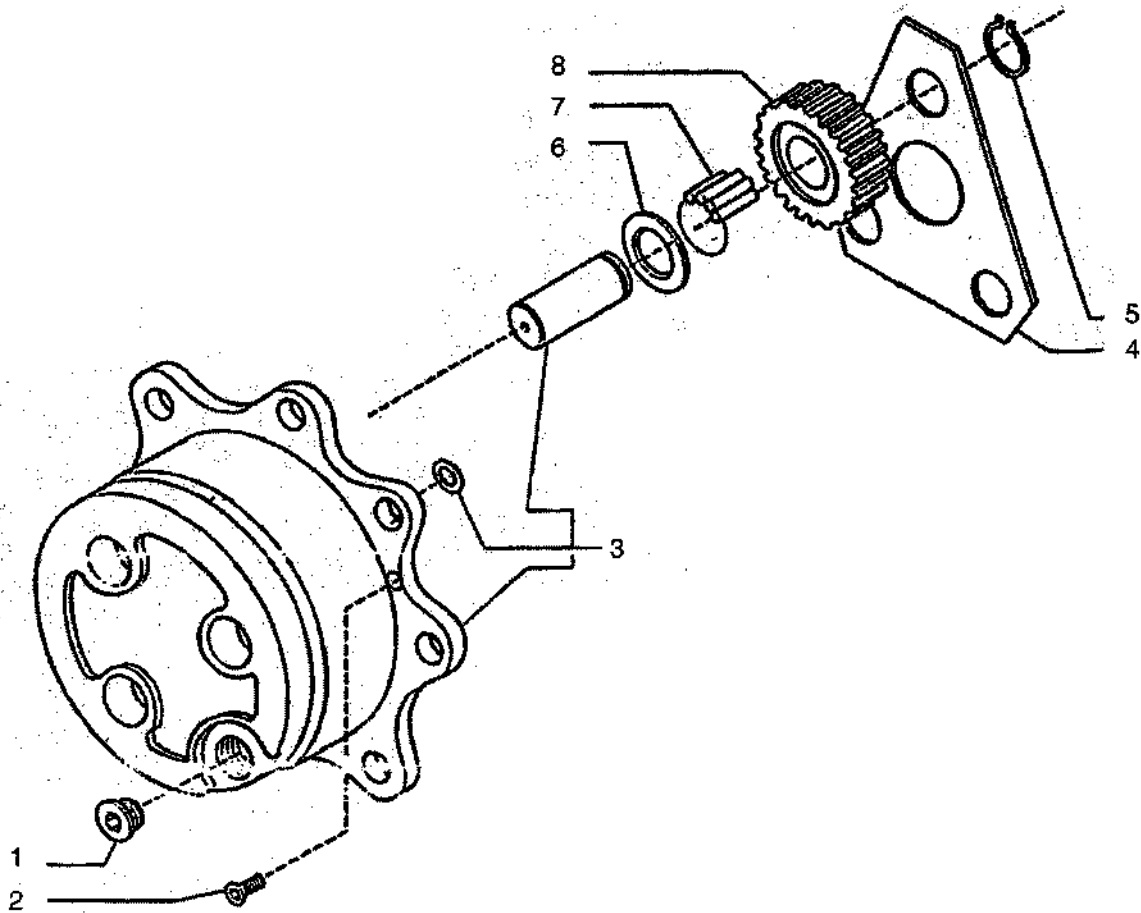

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL14742	Plug M30x2	D10085960	-	2
2	ESL14743	Bolt M8x20	D10085970	-	4
3	ESL14744	Plantery Carrier Assembly	D10085980	-	2
4	ESL14745	Thrust Washer	D10085990	-	2
5	ESL14746	Snap Ring D.34	D10086000	-	6
6	ESL14747	Washer 55x34.6x1.5	D10086010	-	6
7	ESL14748	Needle Bearing (By Tens)	D10086020	-	18
8	ESL14749	Gear Z=23	D10086030	-	6


FINAL REDUCTION

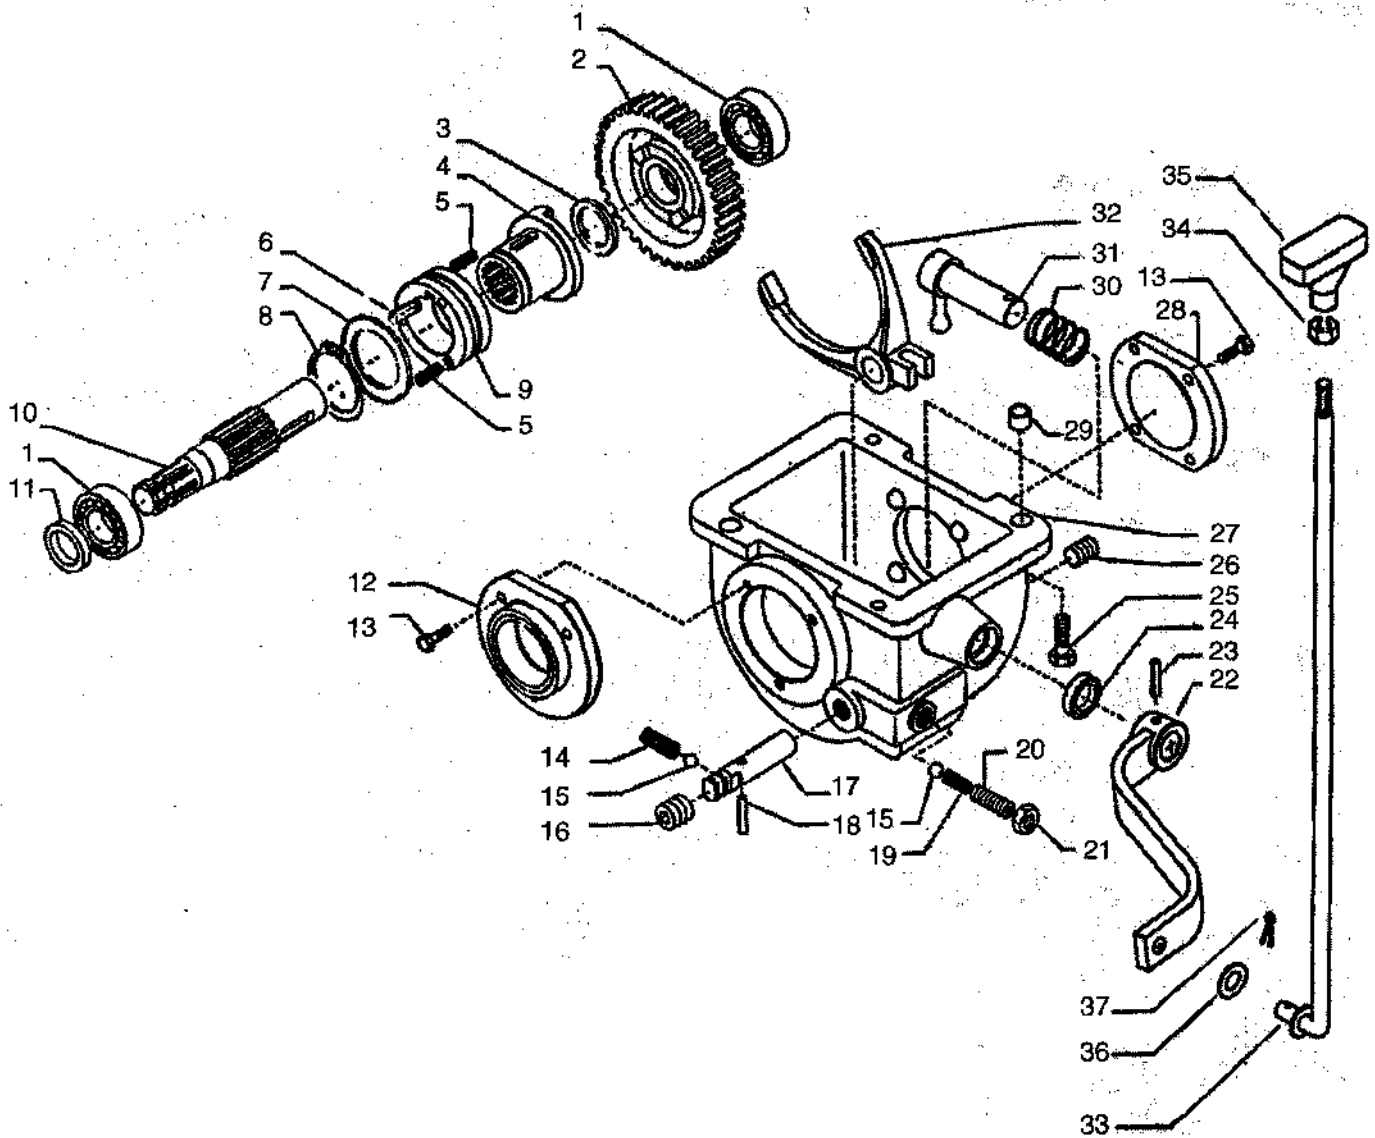

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC
1	ESL14750	Bearing	D10086040	- 2
2	ESL14751	Gear Z=46	D10086050	- 1
2	ESL14752	Gear Z=44	D10086060	- -
3	ESL14753	Washer	D10086070	- 1
4	ESL14754	Gear Z=13	D10086080	- 1
5	ESL14755	Spring	D10086090	- 6
6	ESL14756	Key 4x4x15	D10086100	- 1
7	ESL14757	Washer	D10086110	- 1
8	ESL14758	Snap Ring	D10086120	- 1
9	ESL14759	Sleeve	D10086130	- 1
10	ESL14760	Shaft	D10086140	- 1
11	ESL14761	Oil Seal	D10086150	- 1
12	ESL14762	Cover	D10086160	- 1
13	ESL14763	Bolt M8x20 (Self Lock)	D10086170	- 7
14	ESL14764	Spring	D10086180	- 1
15	ESL14765	Ball D 5/16	D10086190	- 2
16	ESL14766	Plug	D10086200	- 1
17	ESL14767	Fork Pin 506	D10086210	- 1
18	ESL14768	Pin D5x30	D10086220	- 1
19	ESL14769	Spring	D10086230	- 1
20	ESL14770	Grub Screw M12x25	D10086240	- 1
21	ESL14771	Nut M.12	D10086250	- 1
22	ESL15379	Bracket Assembly Hub And Lever	D10045620	- 1
23	N646664S8	Roll Pin D6x36	N646664S2	- 1
24	ESL14773	Oil Seal	D10086260	- 1
25	ESL14774	Bolt, M12x1.75x30 (Self Lock)	D10085270	- 4
26	ESL14775	Plug M24x1.5	D10084970	- 1
27	ESL14776	Housing (Drop Box)	D10086270	- 1
28	ESL14777	Rear Cover	D10086280	- 1
29	ESL14778	Bush	D10086290	- 2
30	ESL14779	Spring	D10086300	- 1
31	ESL14780	Lever	D10086310	- 1
32	ESL14781	Fork	D10086320	- 1
33	ESL14782	Lever Assembly Engagement	D10045630	- 1
34	N620014S8	Nut M10x1.50-5 Hex	D83500210	- 1
35	ESL14783	Knob PTO	D10042460	- 1
36	N630070S8	Washer M12 Flat	D85500160	- 1
37	72026S8	Pin 1/8x.875 Cotter	D87000080	- 1

TRANSMISSION HSG & OUTPUT SHAFT

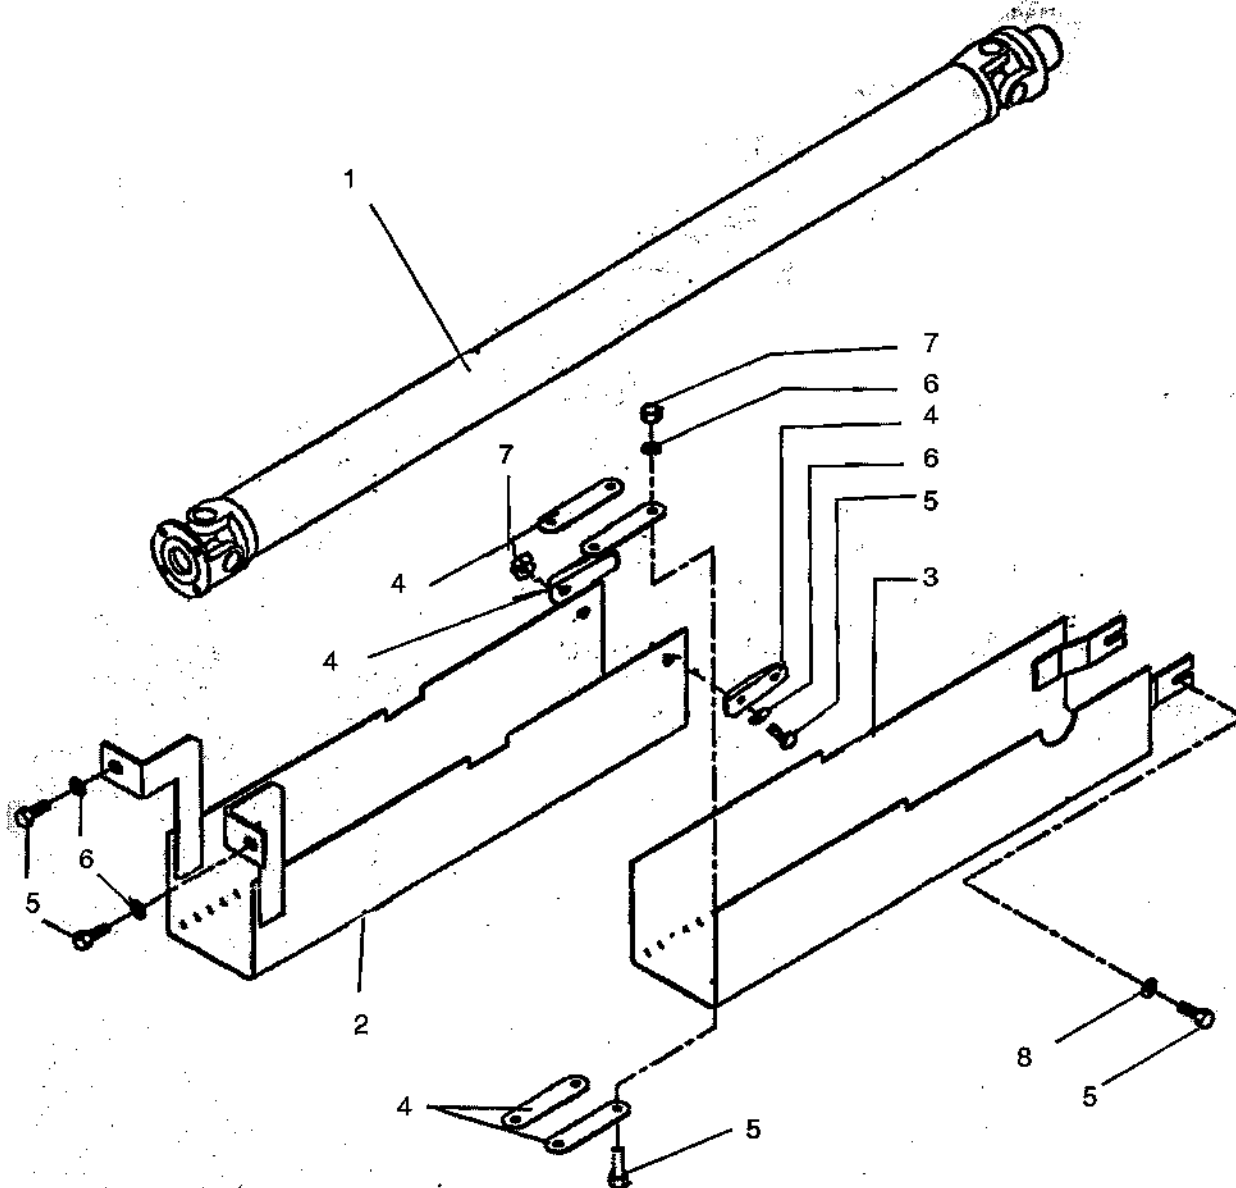


**FRONT END STEERING & 4WD****665 / 665 DTC**

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL14786	Shaft Assembly Propeller	D10045690	-	1
2	ESL14788	Guard Propeller Shaft	D10045490	-	1
3	ESL14790	Guard Propeller Shaft (Drop Box End)	D10047610	-	1
4	ESL14791	Strip Guard	D10047660	-	4
5	N605531S8	Bolt M8x1.25x20-9.8 Hex Head	-	-	12
6	ESL11720	Washer M8 Flat	D85500130	-	8
7	N620013S8	Nut M8x1.25-5 Hex	-	-	8
8	44726S8	Washer 3/8 Flat	-	-	4

TRANSMISSION HSG & CONTROL LEVER**Ⓢ - SERIAL NUMBER BREAK ,** **✓ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER****5:22**

665 / 665 DTC

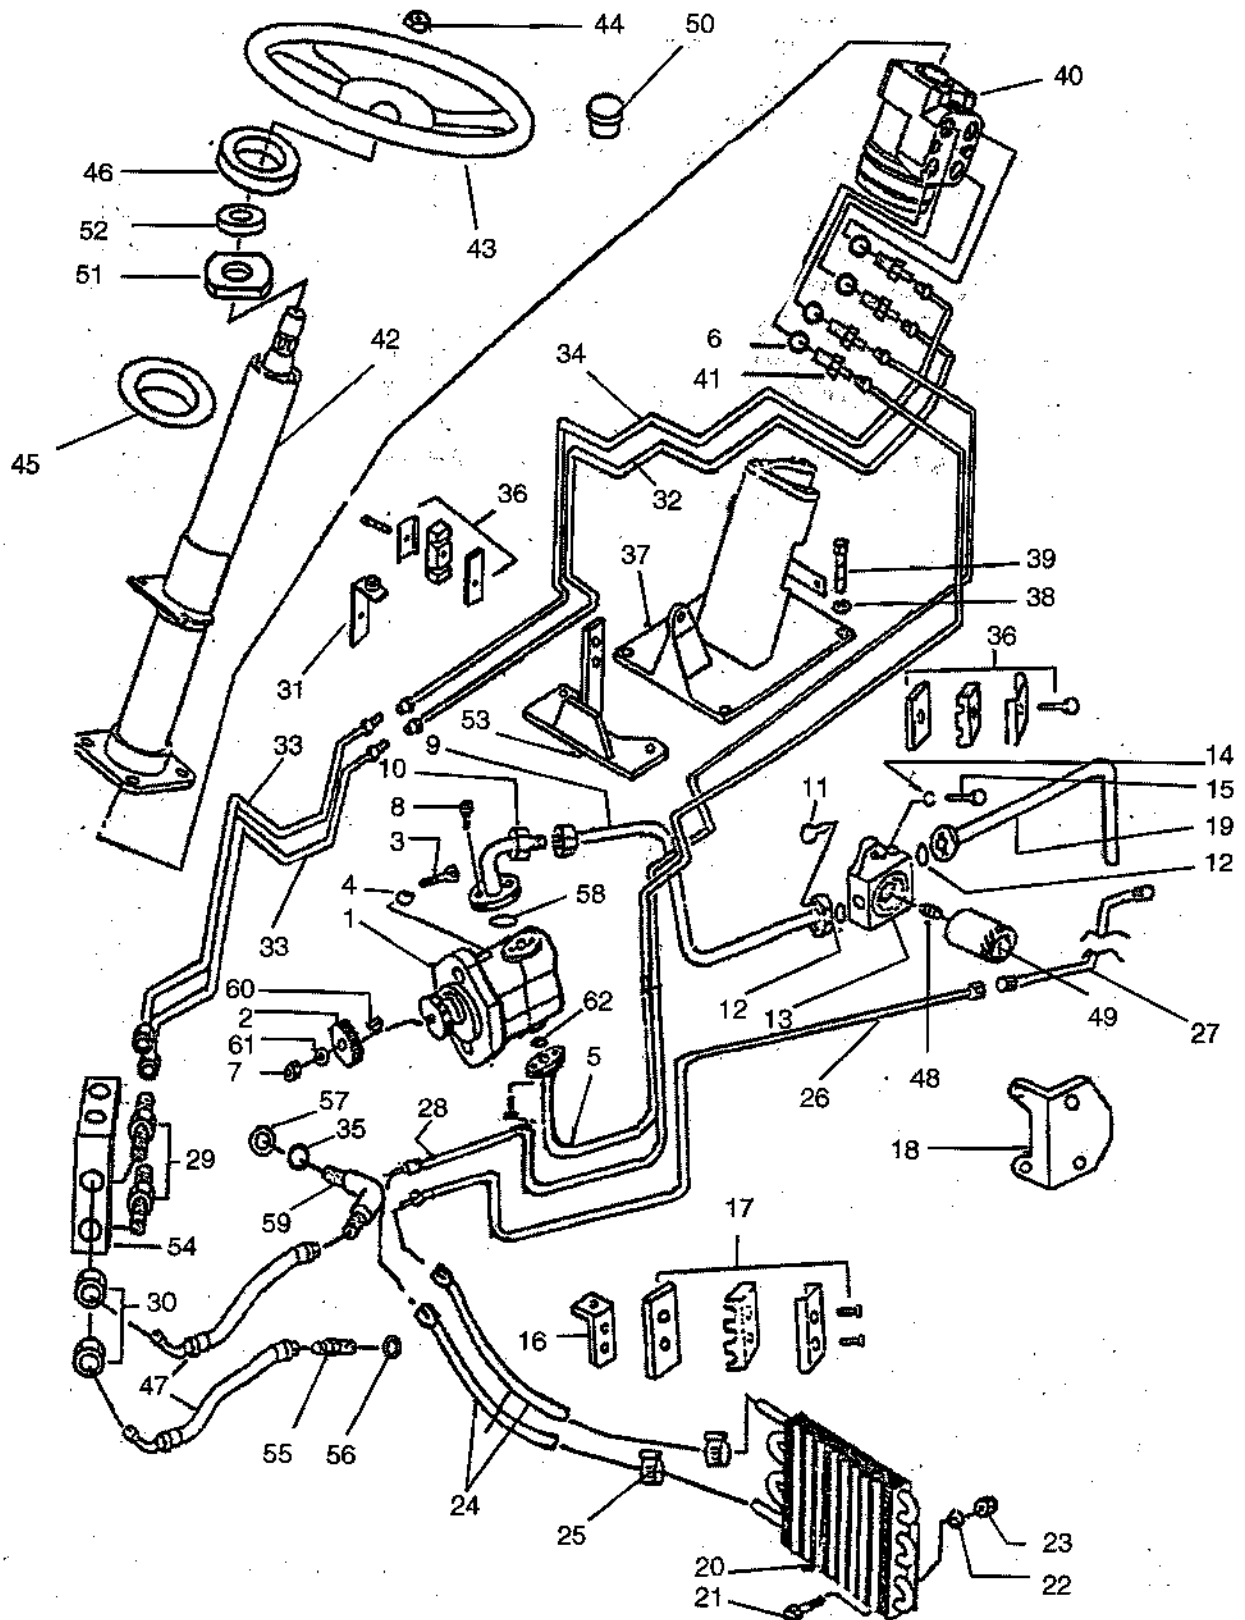

GEARS & SHAFT

5:23

Ⓢ - SERIAL NUMBER BREAK ,


✓ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY
				665 665 DTC
1	ESL13281	Pump Assembly Power Steering	D10013280	- 1
2	ESL14796	Gear Power Steering	D10012150	- 1
3	-	Bolt 3/8-16x2.50 Hex Head	-	- 2
4	ESL12016	Washer 3/8 Spring Lock	D86000010	- 2
5	ESL12723	Tube Assembly Pressure Power Steering	D10043510	- 1
6	ESL14798	Seal 'O' Ring 0.087x0.644	D93600070	- 4
7	ESL14846	Nut	2533559AA0	- 1
8	ESL14799	Screw M6x1.00x20 Hex Socket Head	D10046250	- 2
9	ESL14800	Tube Assembly Filter To Steering Pump	D10043540	- 1
10	ESL14801	Tube Assembly Steering Pump	D10044250	- 1
11	ESL12724	Bolt M6x.00x20-9.8 Hex Head	D81500490	- 4
12	ESL14802	Seal 'O' Ring 0.139x1.375	D93600260	- 2
13	ESL14803	Adapter Hydraulic Oil Filter	D10012140	- 1
14	ESL14921	Washer M12 Flat	D85500160	- 3
15	ESL12653	Screw M12x1.75x25-6.6 Hex Head	D82500090	- 2
16	ESL15380	Bracket Tubing Power Steering	D10044140	- 2
17	ESL12524	Clamp Assembly Tubing Power Steering	D10021250	- 2
18	ESL12732	Bracket Adapter Mounting	D10042500	- 1
19	ESL13301	Tube Assembly Housing To Filter Inlet	D10043120	- 1
20	ESL13302	Cooler Assembly Hydraulic Oil	D10039260	- 1
21	-	Bolt 3/8-16x0.75 Hex Head	-	- 2
22	ESL12017	Nut 3/8-16 Hex	D83000020	- 2
23	ESL12576	Washer 3/8 Spring Lock	D86000010	- 2
24	ESL12735	Hose Oil Cooler Return	D10042770	- 2
25	ESL14483	Clamp Assembly Fuel Tube	D10017460	- 4
26	ESL14811	Tube Assembly Return From Cooler	D10043530	- 1
27	ESL14812	Tube Assembly Return To Housing	D10043130	- 1
28	ESL14813	Tube Assembly Return To Cooler	D10043520	- 1
29	ESL14814	Adapter 9/16-18 High Pressure Tube	D10021280	- 2
30	ESL14815	Nut 9/16-18 Hex	D10021270	- 2
31	ESL14816	Bracket Tubing Support Power	D10047730	- 1
32	ESL14817	Tube Assembly Right Turn Power	D10043490	- 1
33	ESL14820	Tube Assembly Power Steering	D10045530	- 2
34	ESL14819	Tube Assembly Left Turn Power	D10043500	- 1
35	ESL14847	Seal 'O' Ring, (0.103x0.625)	D10042690	- 2
36	ESL14821	Clamp Assembly Tubing Power Steering	D93600090	- 2
37	ESL14822	Bracket Assembly Power Steering	D10042670	- 2
38	ESL12018	Washer 1/2 Spring Lock	D86000060	- 4
39	ESL14823	Bolt 1/2-13x1.38 Hex Head (Steering Gear)	D10012330	- 4
40	ESL14824	Motor Assembly - Hydrostatic Steering	1333240BA	- 1
41	ESL14825	Adapter 3/4 Power Steering	D10021080	- 4

GEARS & SHAFT

665 / 665 DTC

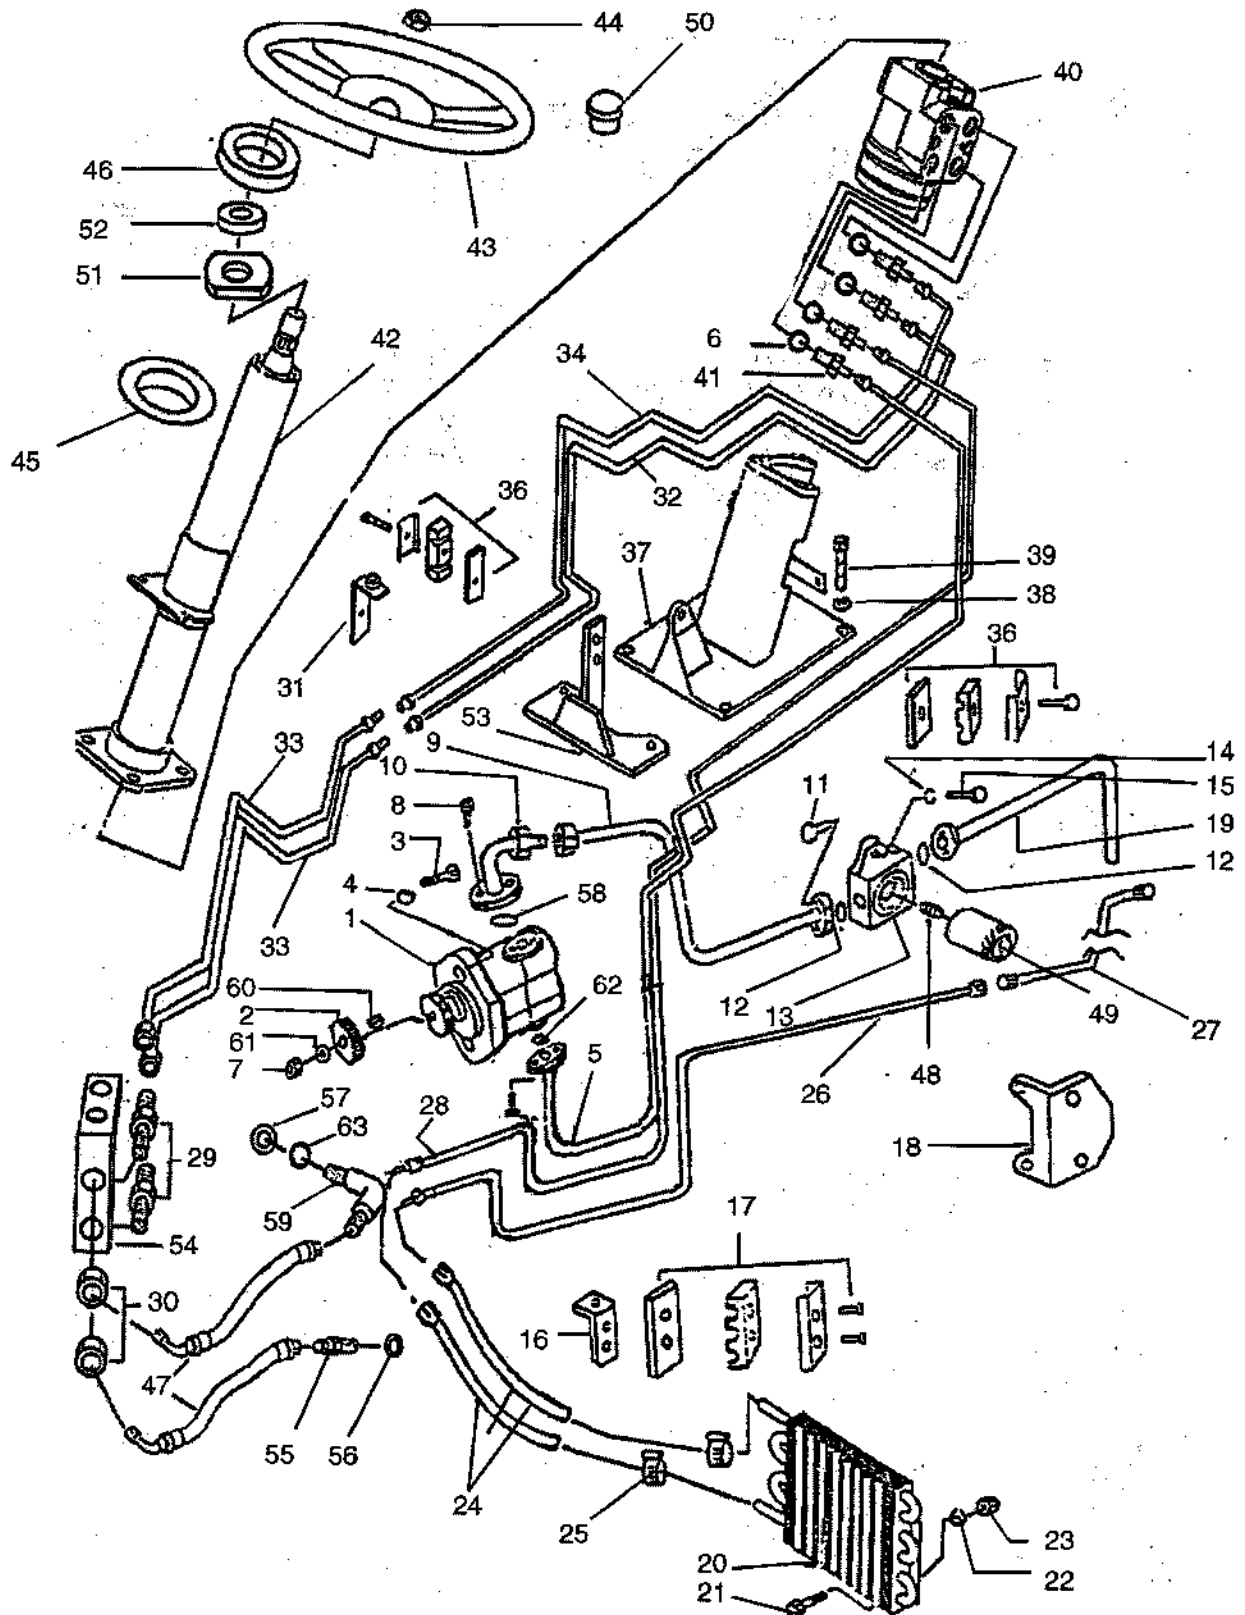

LEVER ASSEMBLY

5:25

Ⓢ - SERIAL NUMBER BREAK ,

⚡ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC
42	ESL14826	Column Assembly Power Steering	D10043840	- 1
43	ESL14827	Wheel Assembly Power Steering	D10039690	- 1
44	ESL14828	Nut Nylock Steering Wheel Retaining	D10018500	- 1
45	ESL14829	Grommet Steering Column Shroud	-	- 1
46	ESL14830	Seal Steering Column Dust	D10018530	- 1
47	ESL14831	Hose Assembly Power Steering	D10021130	- 2
48	ESL14832	Adapter Oil Filter	-	- 1
49	ESL11255	Filter Assembly Hydraulic	D10026160	- 1
50	ESL12232	Cap Steering Wheel	-	- 1
51	ESL14835	Nut, (11/16-20) Check	D10043570	- 1
52	ESL14836	Damper Ring	D10043560	- 1
53	ESL14837	Bracket Fuel Tank Mounting	D10047770	- 1
54	ESL14838	Bracket Steering Hose Support	D10045570	- 1
55	ESL14839	Adapter Power Steering Pipe Fitting	D10045580	- 1
56	ESL14840	Washer M18 Flat Copper	D10045590	- 1
57	ESL14841	Washer, (21x24.2) Power Steering Elbow	D10045600	- 1
58	ESL14842	'O' Ring	87039S94	- 1
59	ESL14843	Elbow Power Steering Hose Fitting	D10045610	- 1
60	ESL14844	Key Woodruff	D91000210	- 1
61	ESL14845	Washer Lock	2533558AA	- 1
62	ESL10085	'O' Ring	-	- 1

LEVER ASSEMBLY

Notes


CLUTCH

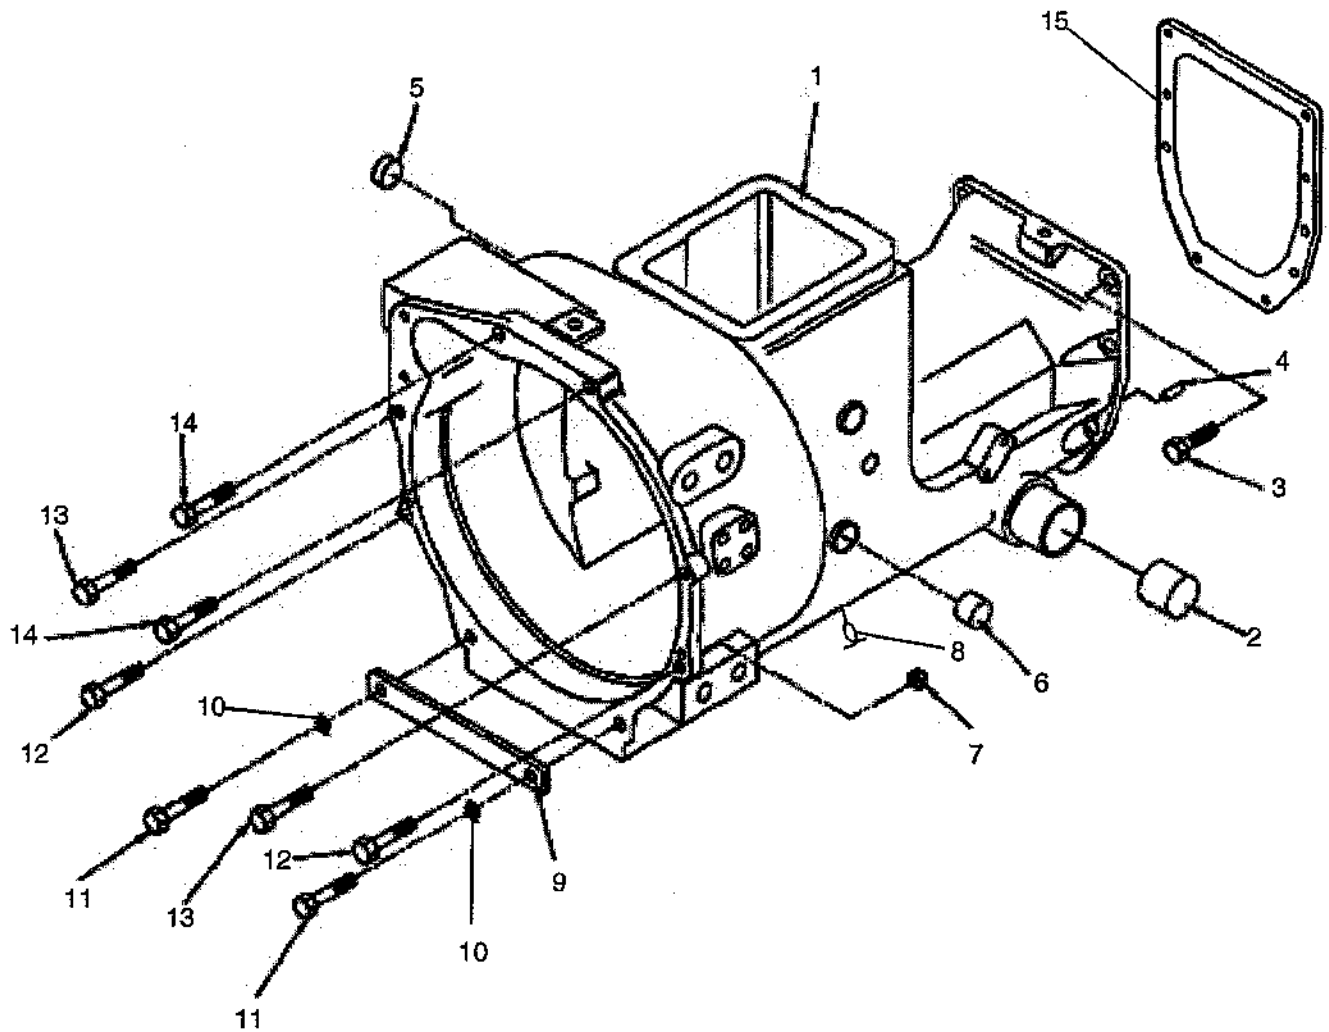

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC
1	ESL12770	Housing Kit (Includes Items 2,5,6)	-	
2	ESL10668	Bush Set, Brake Pedal Shaft	D10075230	
3	ESL12771	Bolt (M14x2.0x40)	D81500970	- 1
4	ESL12772	Dowel Pin	D10060850	- 8
5	ESL12773	Plug Cup	D10042960	- 2
			D10042950	- 1
6	ESL12774	Bush Clutch Shaft	-	- 4
7	33849S8	Nut, Hex (5/8-11)	D88400080	- 2
8	ESL13305	Pin, Cotter, Drain Hole	-	- 1
9	ESL13312	Stiffner, Engine Rear Cover Plate	-	- 1
10	34792S8	Washer, Lock (3/8)	-	- 2
			-	
11	304722S8	Bolt, Hex (3/8-16x1.25)	-	- 2
12	304955S8	Bolt, Hex (5/8-11x3.75)	-	- 2
13	304883S8	Bolt, Hex (5/8-11x2.375)	-	- 2
14	304912S8	Bolt, Hex (3/4-16x2.75)	D10066360	- 2
15	ESL12775	Gasket, Clutch Housing, to Transmission	-	- 1

CLUTCH HOUSING

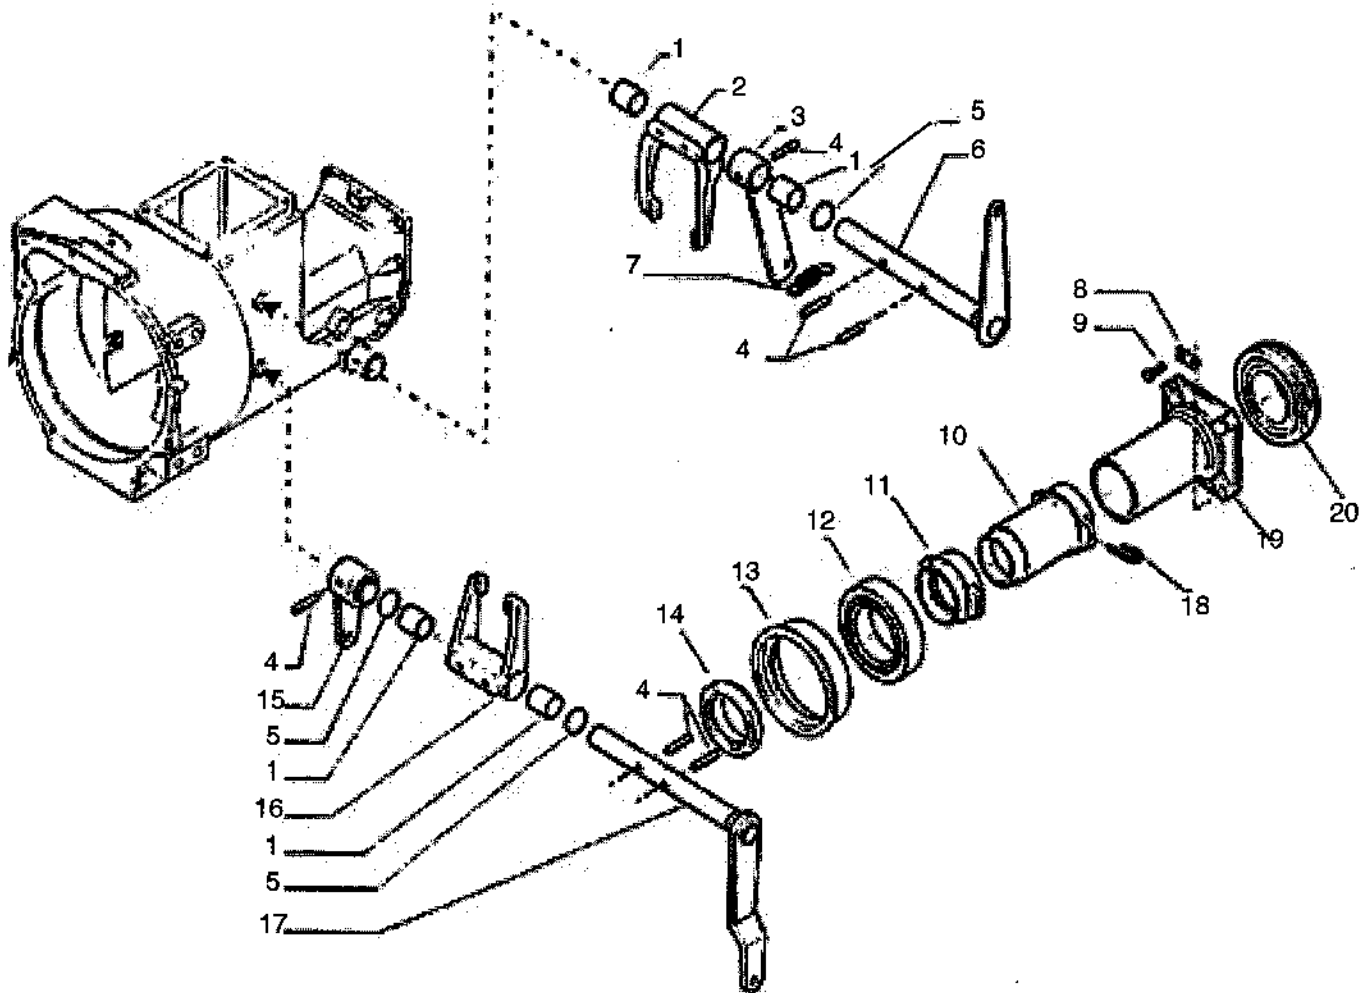


CLUTCH INNER CONTROLS

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL12774	Bush Clutch Shaft	D10042950	-	4
2	ESL12776	Fork PTO	D10061210	-	1
3	ESL12777	Lever Assembly PTO Clutch	D10061180	-	1
4	ESL12778	Pin	D87000130	-	4
5	ESL12779	O'Ring	D10042990	-	3
6	ESL12780	Shaft & Lever Assembly, PTO Clutch	-	-	1
7	ESL12781	Spring Clutch Return, PTO	D10061150	-	1
8	ESL12782	Plate, Spring Retaining	D10103820	-	1
9	E602189S8	Bolt	-	-	4
10	ESL12783	Hub, Clutch Release PTO	D10061230	-	1
11	ESL12784	Hub, Clutch Release	D10061240	-	1
12	ESL12785	Bearing, Clutch Release	D10061270	-	-
13	ESL12786	Sleeve	D10061260	-	1
14	ESL12787	Bearing, Clutch Release PTO	D10061250	-	1
15	ESL12788	Lever	D10063100	-	1
16	ESL12789	Fork Clutch Release	D10061200	-	1
17	ESL12790	Shaft & Lever Assembly Clutch	D10061220	-	-
-	ESL12791	Shaft & Lever Assembly Clutch	D10103810	-	1
18	ESL12792	Spring	D10061160	-	4
19	ESL12793	Retainer, Clutch Release	D10061190	-	-
-	ESL12794	Retainer, Clutch Release	D10103800	-	1
20	ESL12795	Bearing Assembly, Input Shaft	D10061140	-	1

CLUTCH INNER CONTROLS

665 / 665 DTC

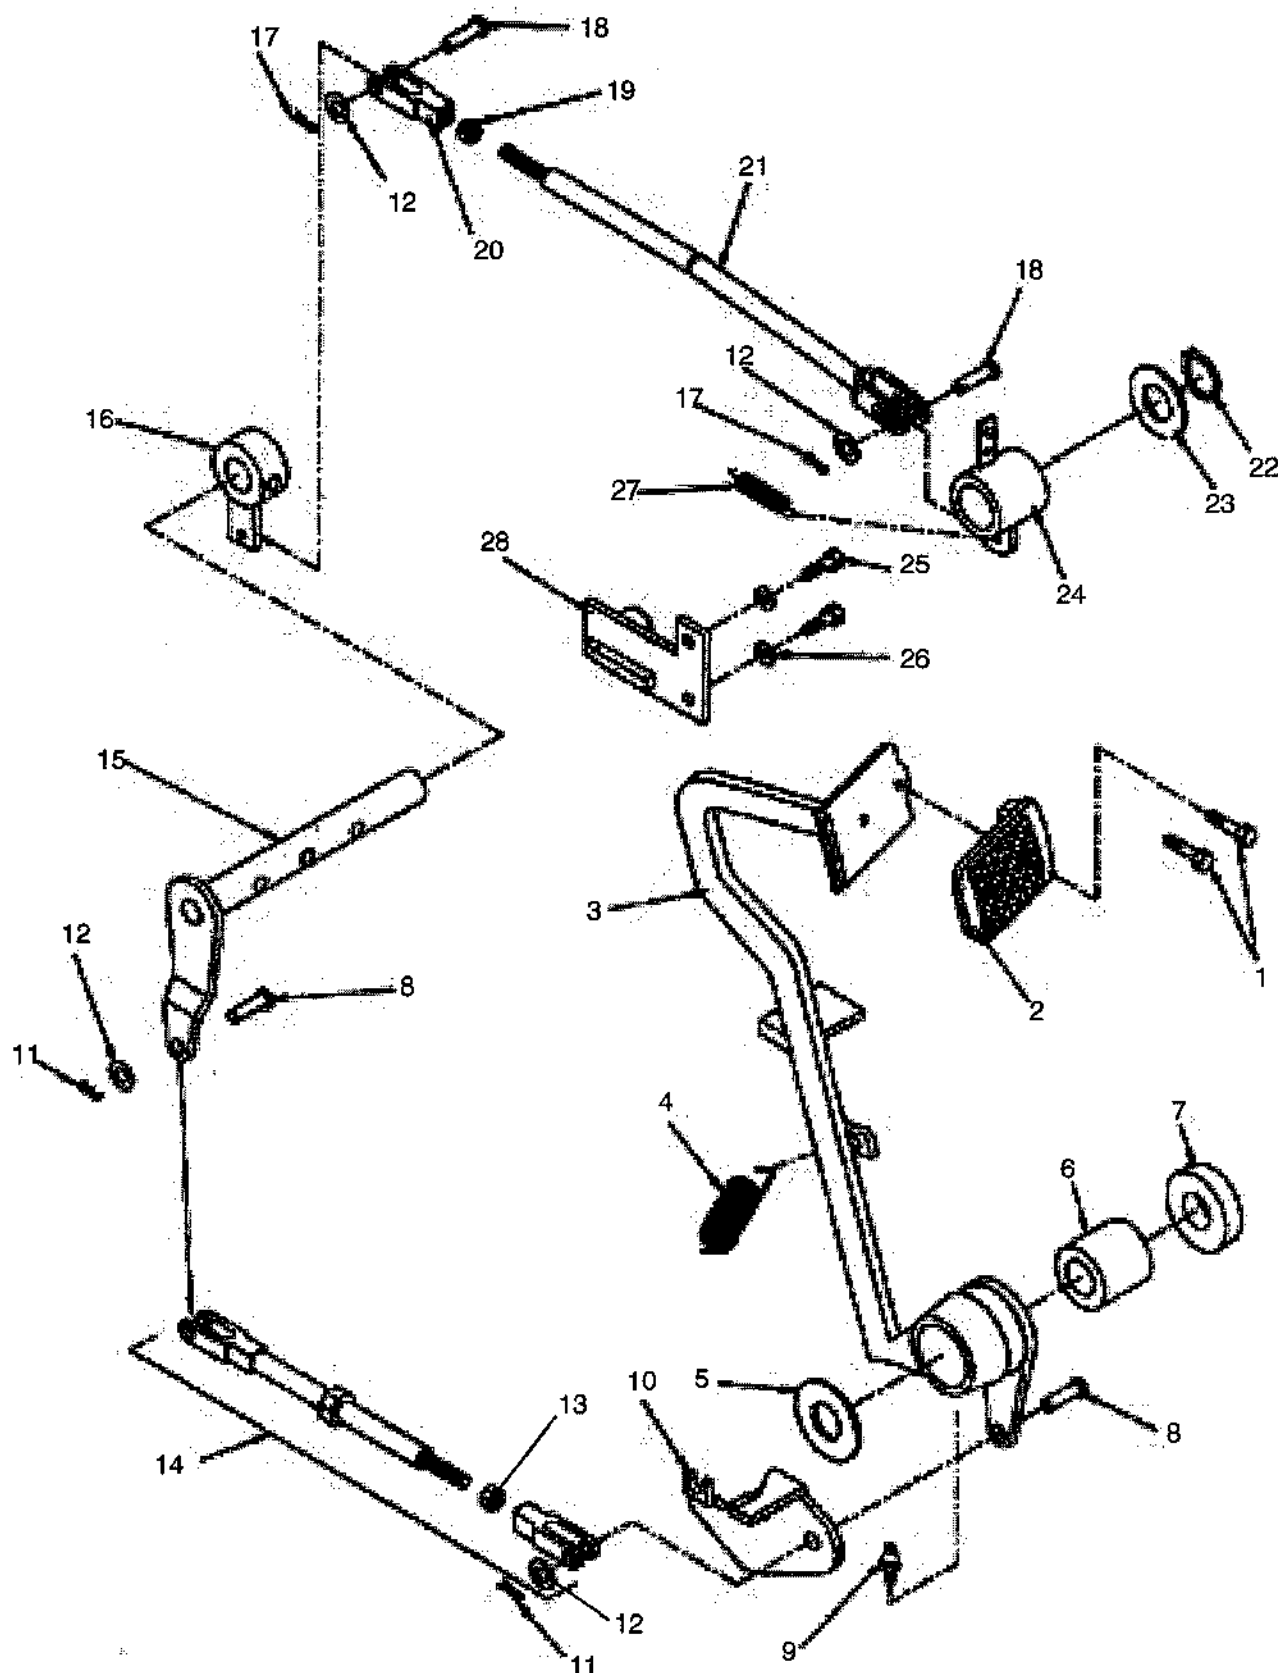

CLUTCH OUTER CONTROLS


6:5

© - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC
1	N600212S8	Bolt	-	- 2
2	ESL12798	Pad Assembly, Clutch	D10042840	- 1
3	ESL13285	Pedal Assembly, Clutch	D10039500	- -
	ESL13286	Pedal Assembly, Clutch	D10046020	- 1
4	ESL10663	Spring	D10012380	- -
-	ESL12799	Spring	D10046920	- 1
5	ESL11700	Washer	D10012260	- -
-	ESL13409	Washer	D10067000	- 1
6	ESL12811	Bush Clutch Pedal	D10067010	- 1
-	ESL13318	Bush Clutch Pedal	-	- -
7	ESL11700	Washer	D10012260	- -
-	ESL13409	Washer	D10067000	- 1
8	73919S8	Pin, Clevis (3/8x1.4)	-	- 2
9	ESL10654	Grease Nipple	-	- 1
10	ESL13410	Bracket Clutch Pedal Spring	D10043000	- -
11	72017S8	Pin, Cotter (1/8x0.75)	-	- 2
12	44728S8	Washer, Flat (3/8)	-	- 4
13	33925S8	Nut (3/8-24)	-	- 1
14	ESL12800	Rod & Clevis Assembly	-	- -
-	ESL12801	Rod & Clevis Assembly	D10103830	- 1
15	ESL12790	Shaft & Lever Assembly, Clutch	D10061220	- -
-	ESL12791	Shaft & Lever Assembly, Clutch	D10103810	- 1
16	ESL12788	Lever F & R	D10063100	- 1
17	ESL12805	Pin Cotter	-	- 2
18	ESL12804	Pin Clevis	D93400070	- 2
19	N620042S8	Nut (M10)	-	- 1
20	N662423S8	Clevis (M10)	-	- 1
21	ESL12802	Rod & Clevis Assembly	D10043380	- -
-	ESL12803	Rod & Clevis Assembly	D10046480	- 1
22	ESL12808	Circlip	D90000180	- 1
23	ESL12807	Washer	-	- 1
24	ESL12806	Lever & Hub Assembly	D10043370	- 1
25	ESL12653	Bolt (M12x1.75x25)	-	- 2
26	N630070S8	Washer, Lock (M12)	-	- 2
27	ESL12809	Spring	D10043400	- 1
28	ESL12810	Bracket Assembly Pivot	D10043390	- 1

CLUTCH OUTER CONTROLS

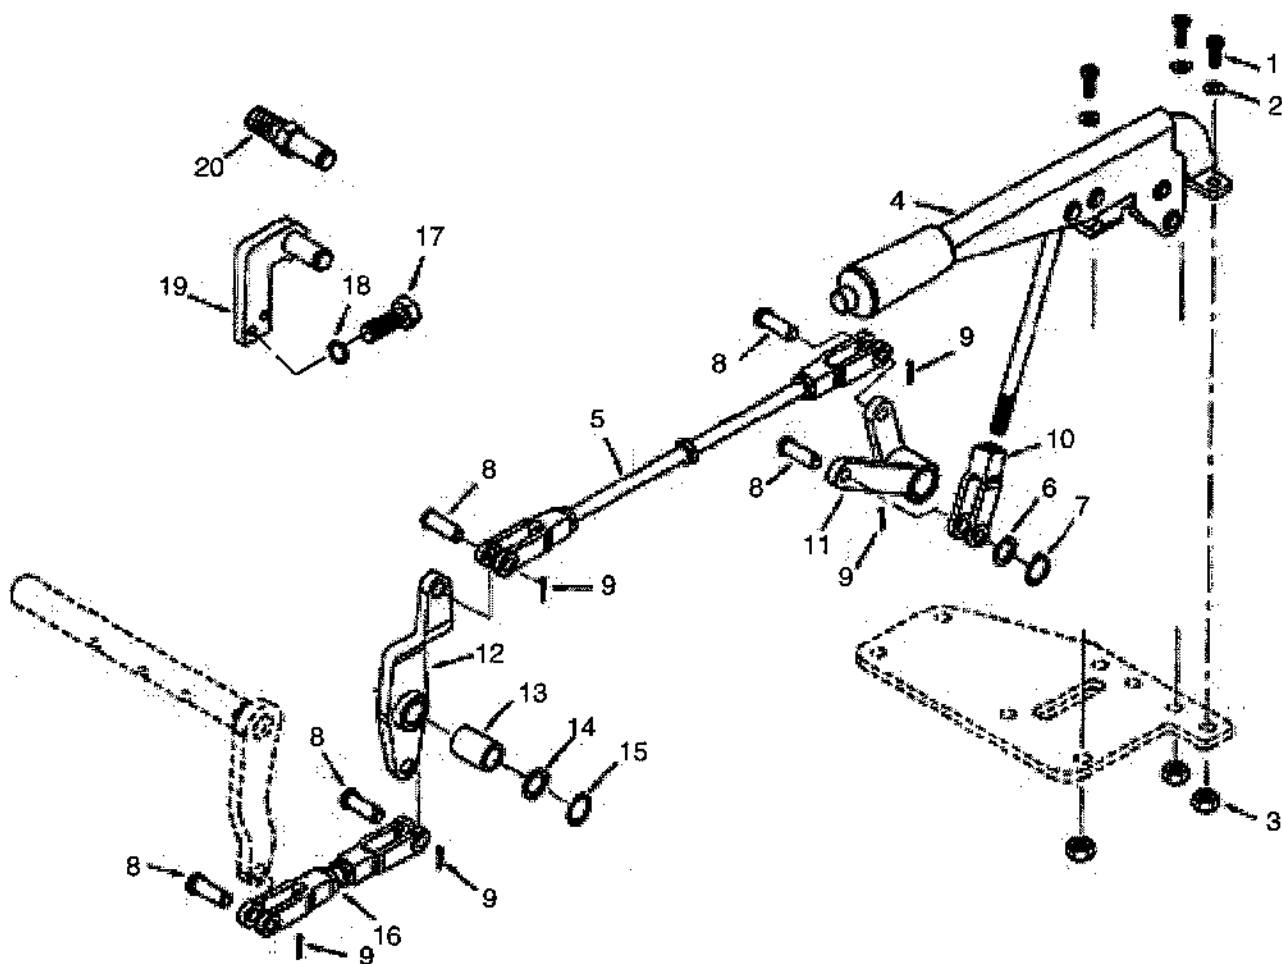

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC
1	ESL12724	Bolt (M6x1.00x20)	D81500490	- 3
2	N630067S8	Washer	-	- 3
3	N620012S8	Nut	-	- 3
4	ESL12812	Lever Assembly, PTO Clutch	-	- 1
5	ESL12813	Rod & Clevis Assembly, PTO Clutch	D10042880	- -
-	ESL12814	Rod & Clevis Assembly, PTO Clutch	D10047050	- 1
6	ESL11700	Washer	D10012260	- 1
7	ESL10983	Lock Ring	D10012470	- 1
8	73919S8	Pin Clevis (3/8x1.4)	-	- 5
9	72017S8	Pin Cotter(3/8x0.75)	-	- 5
10	97013S8	Clevis	-	- 1
11	ESL12816	Sleeve, PTO Clutch	D10042250	- 1
12	ESL12815	Hub & Lever Assembly	D10042890	- 1
13	ESL12819	Bush, Hub & Lever Assembly	D10042700	- 1
14	ESL12807	Washer	-	- 1
15	ESL12808	Circlip	D90000180	- 1
16	ESL12820	Rod & Clevis Assembly	D10043140	- 1
17	ESL12653	Bolt (M12x1.75x25)	-	- 2
18	N630070S8	Spring Washer (M12)	-	- 2
19	ESL13288	Bracket Assembly, PTO Clutch Pivot	D10066440	- -
-	ESL12818	Bracket Assembly, PTO Clutch Pivot	D10046740	- 1
20	ESL13413	Pin	D10043480	- -
-	ESL13414	Pin	-	- 1

PTO CLUTCH OUTER CONTROLS


S - SERIAL NUMBER BREAK ,

◀ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

6:8

665 / 665 DTC


ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY
				665 665 DTC
1	ESL12821	Clutch Assembly	D10039550	- 1
	ESL12822	Clutch Assembly	D10045800	- -
2	ESL12823	Clutch Plate, Main	D10065390	- 1
-	ESL12824	Clutch Plate, Main	D10103850	- -
3	ESL12825	Clutch Plate, PTO	D10068020	- 1
	ESL12826	Clutch Plate, PTO	D10103840	- -
4	ESL13333	Levers Kit	D10077150	- 1
5	ESL13334	Levers Kit	D10077160	- 1
6	ESL12827	Bolt (M8x1.25)	D81501320	- 6
-	ESL12828	Bolt (M10x1.5x60)	D81500670	- -
7	ESL12829	Washer, Lock (M8)	-	- 6
-	N630174S8	Washer, Lock (M10)	-	- -

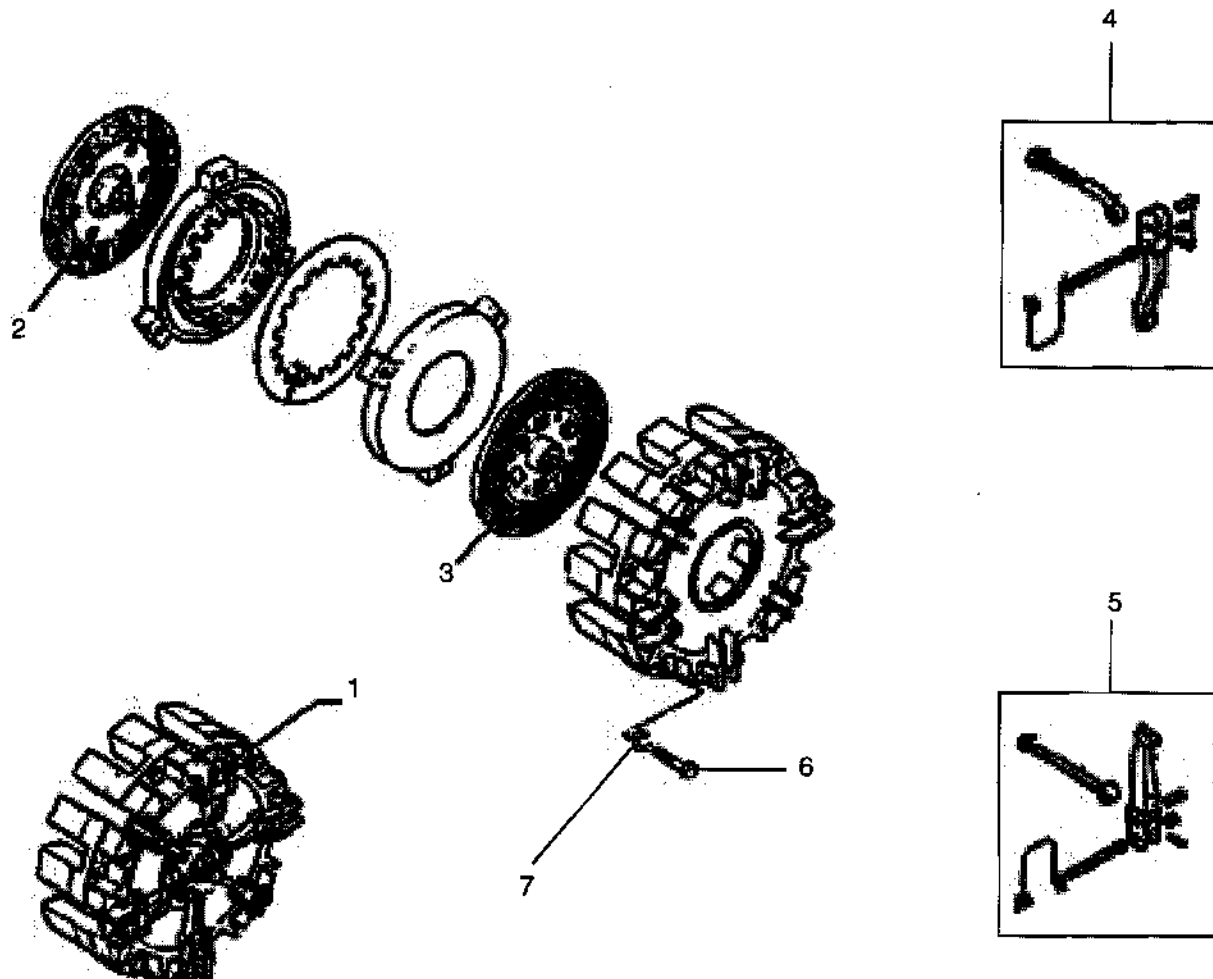

CLUTCH ASSEMBLY

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL12830	Oil Seal	D10062520	1	1
2	ESL12831	Bush	D10062540	1	1
3	ESL12832	Transmission Shaft Kit, (Includes Item #2)	-	1	1
-	ESL13416	Transmission Shaft Kit, (Includes Item #2)	D10103860	-	-
4	ESL12795	Bearing	D10061140	1	1
5	ESL12833	Shaft	D10062550	1	1
-	ESL13417	Shaft	-	-	-

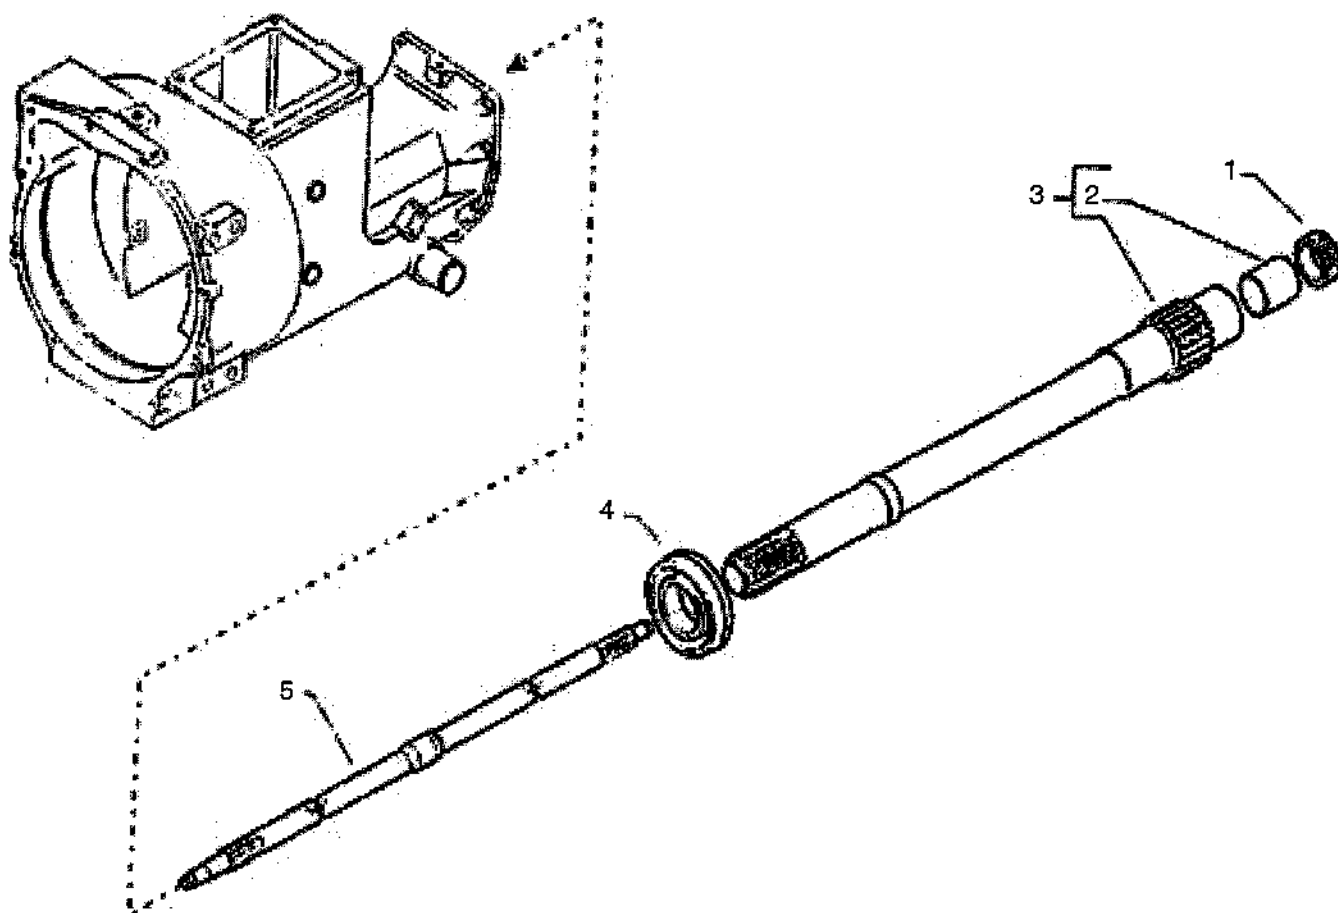


CLUTCH SHAFTS

Notes

GEARBOX

665 / 665 DTC

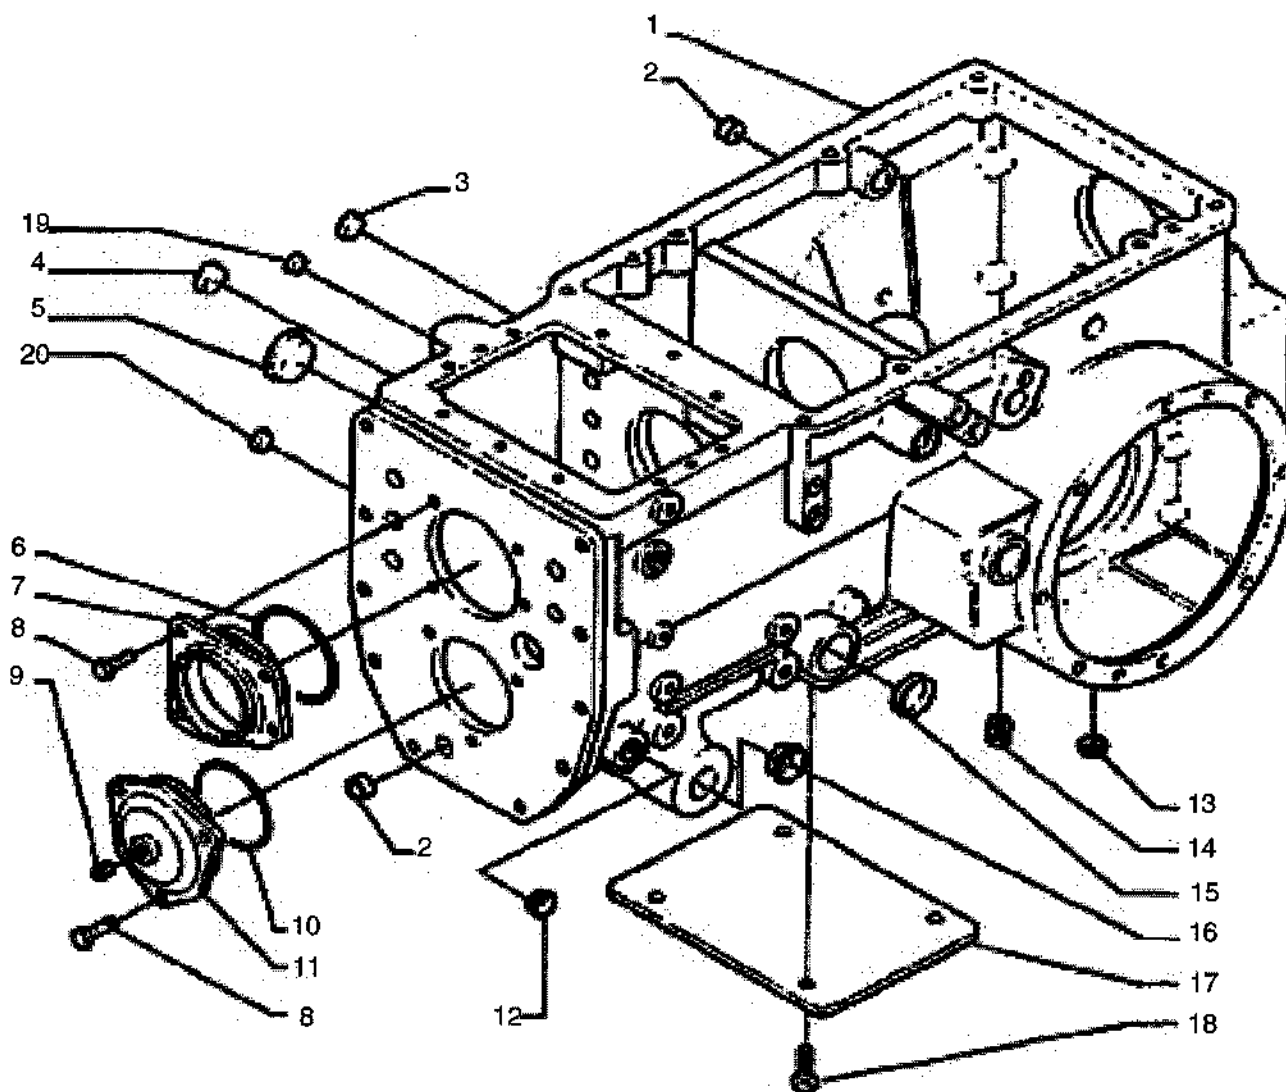

Housing Gear Box

7:1

Ⓢ - SERIAL NUMBER BREAK ,



- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL12834	Gear Box Housing Kit	D10062560	1	1
2	ESL12835	Plug (D20.35)	D10062570	2	2
3	ESL12836	Plug (D15.5)	D10062590	3	3
4	ESL12837	Plug (20.5)	D10062600	1	1
5	ESL12838	Plug (D39)	D10062610	1	1
6	ESL12839	'O'Ring	D10062620	1	1
7	ESL12840	Cover	D10062630	1	1
8	ESL12841	Bolt (M8x25)	-	7	7
9	ESL12842	Plug	D10062660	1	1
10	ESL12843	'O'Ring	D10062670	1	1
11	ESL12844	Cover	D10062690	1	1
12	ESL12845	Plug	D10062710	1	1
13	ESL12846	Plug (D14.5)	D10062720	2	2
14	ESL12847	Plug (M22x1.5)	D10084970	1	1
15	ESL12838	Plug (D39)	D10062610	1	1
16	ESL12849	Plug (D26)	D10062760	2	2
17	ESL12850	Cover	D10062770	1	1
18	ESL12851	Bolt	D81500840	4	4
19	ESL12852	Plug (D7)	D10062780	3	3
20	ESL12853	Plug (D11)	D10062790	10	10

HOUSING GEAR BOX

665 / 665 DTC


ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL12861	Screw (M8x16)	D82500420	2	2
2	ESL12862	Cover	D10062820	1	1
3	ESL12863	'O'Ring	D10062860	2	2
4	ESL12864	Lever Support	D10062870	1	1
5	ESL12865	Screw (M8x25)	D82500440	4	4
6	ESL12672	Bolt (M10x25)	-	8	8
7	ESL12866	Plug	D10062880	1	1
8	ESL12867	Cover	D10062890	1	1
9	ESL12868	Pin, Dowel	D10062900	2	2
10	ESL12869	Pin, Dowel	D10062910	2	2
11	ESL12871	Bolt (M6x12)	D81500980	4	4
12	ESL12870	Cover	D10062920	1	1

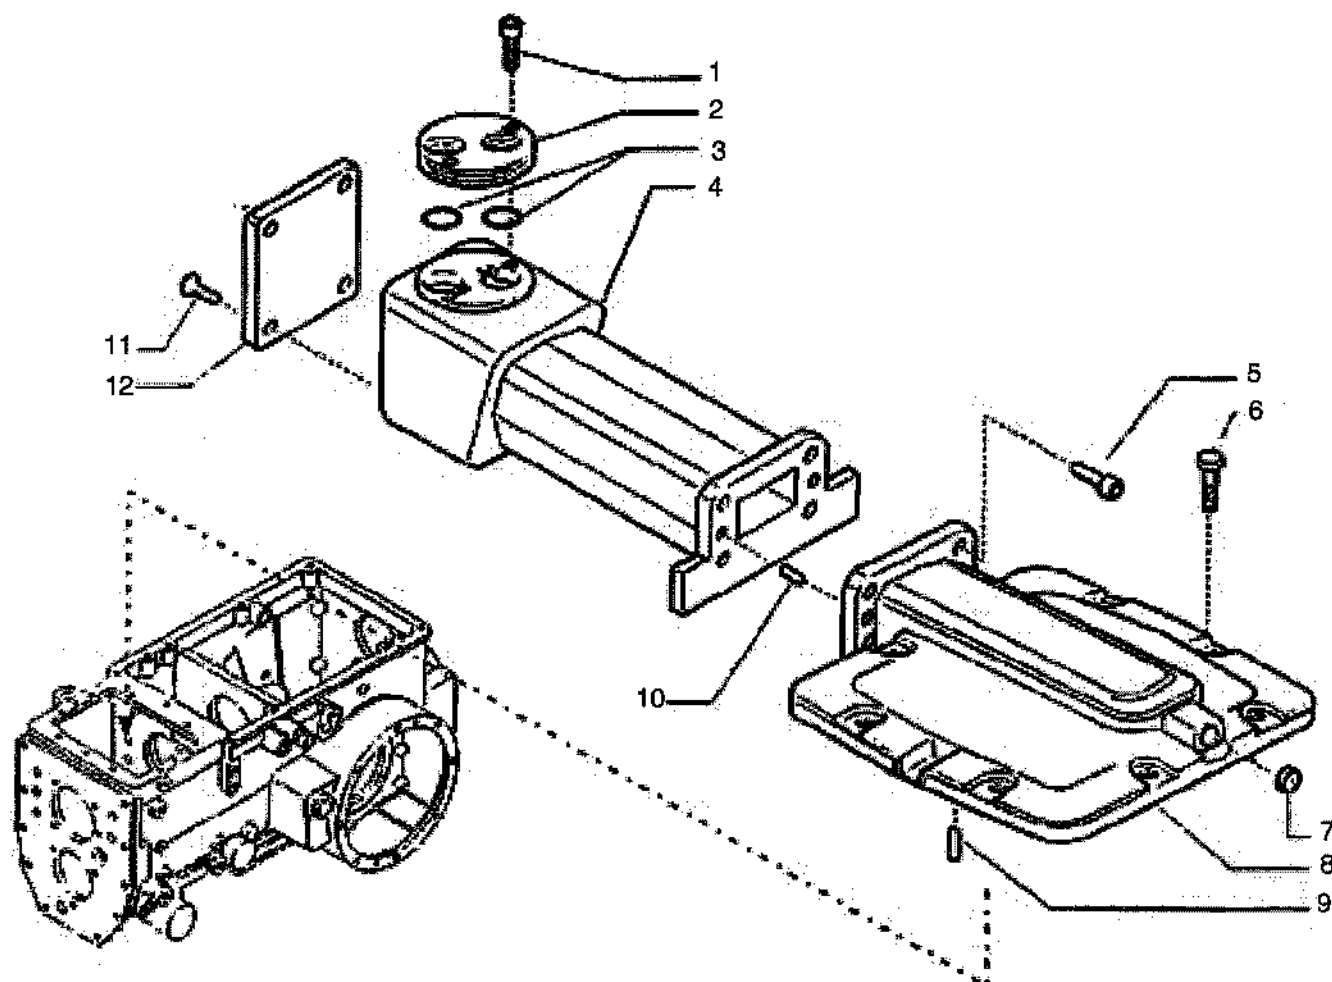

LEVER'S COVER

665 / 665 DTC


ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL12872	Boot	D10062940	1	1
2	ESL12873	Hose Clamp	D10062960	1	1
3	ESL12874	Snap Ring (D16)	D90000340	2	2
4	ESL12875	Shim (26x16.5x1)	D10063030	2	2
5	ESL12876	Spring	D10063040	2	2
6	ESL12877	Lever	D10063050	2	2
7	ESL12878	Inner Rod	D10063060	1	1
8	ESL12879	Inner Rod	D10063070	1	1
9	ESL12869	Pin	D10062910	2	2
10	ESL12880	Pin (D6x26)	D93400250	4	4
11	ESL12881	Inner Lever	D10063120	2	2
12	ESL12882	Knob Gear Shift	D10042300	2	2
13	ESL12883	Nut (M10x1.00)	D10042100	2	2
14	ESL12884	Lever & Hub Assembly	D10043030	1	1
15	ESL12885	Lever & Hub Assembly	D10043060	1	1
16	ESL13418	Roll Pin	-	2	2
17	ESL12862	Cover	D10062820	1	1
18	ESL12863	O'Ring	D10062860	2	2

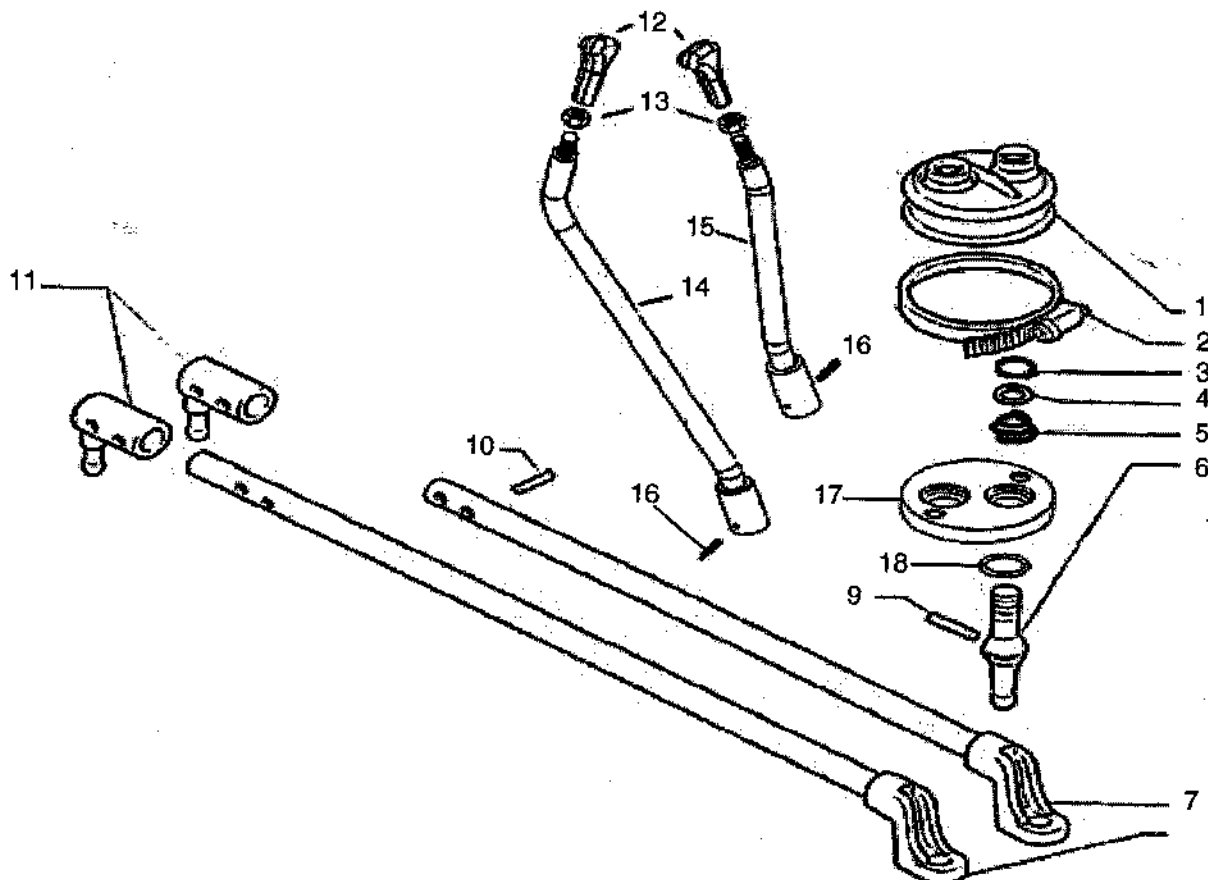
TRANSMISSION OUTER CONTROL

(S) - SERIAL NUMBER BREAK,

(K) - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

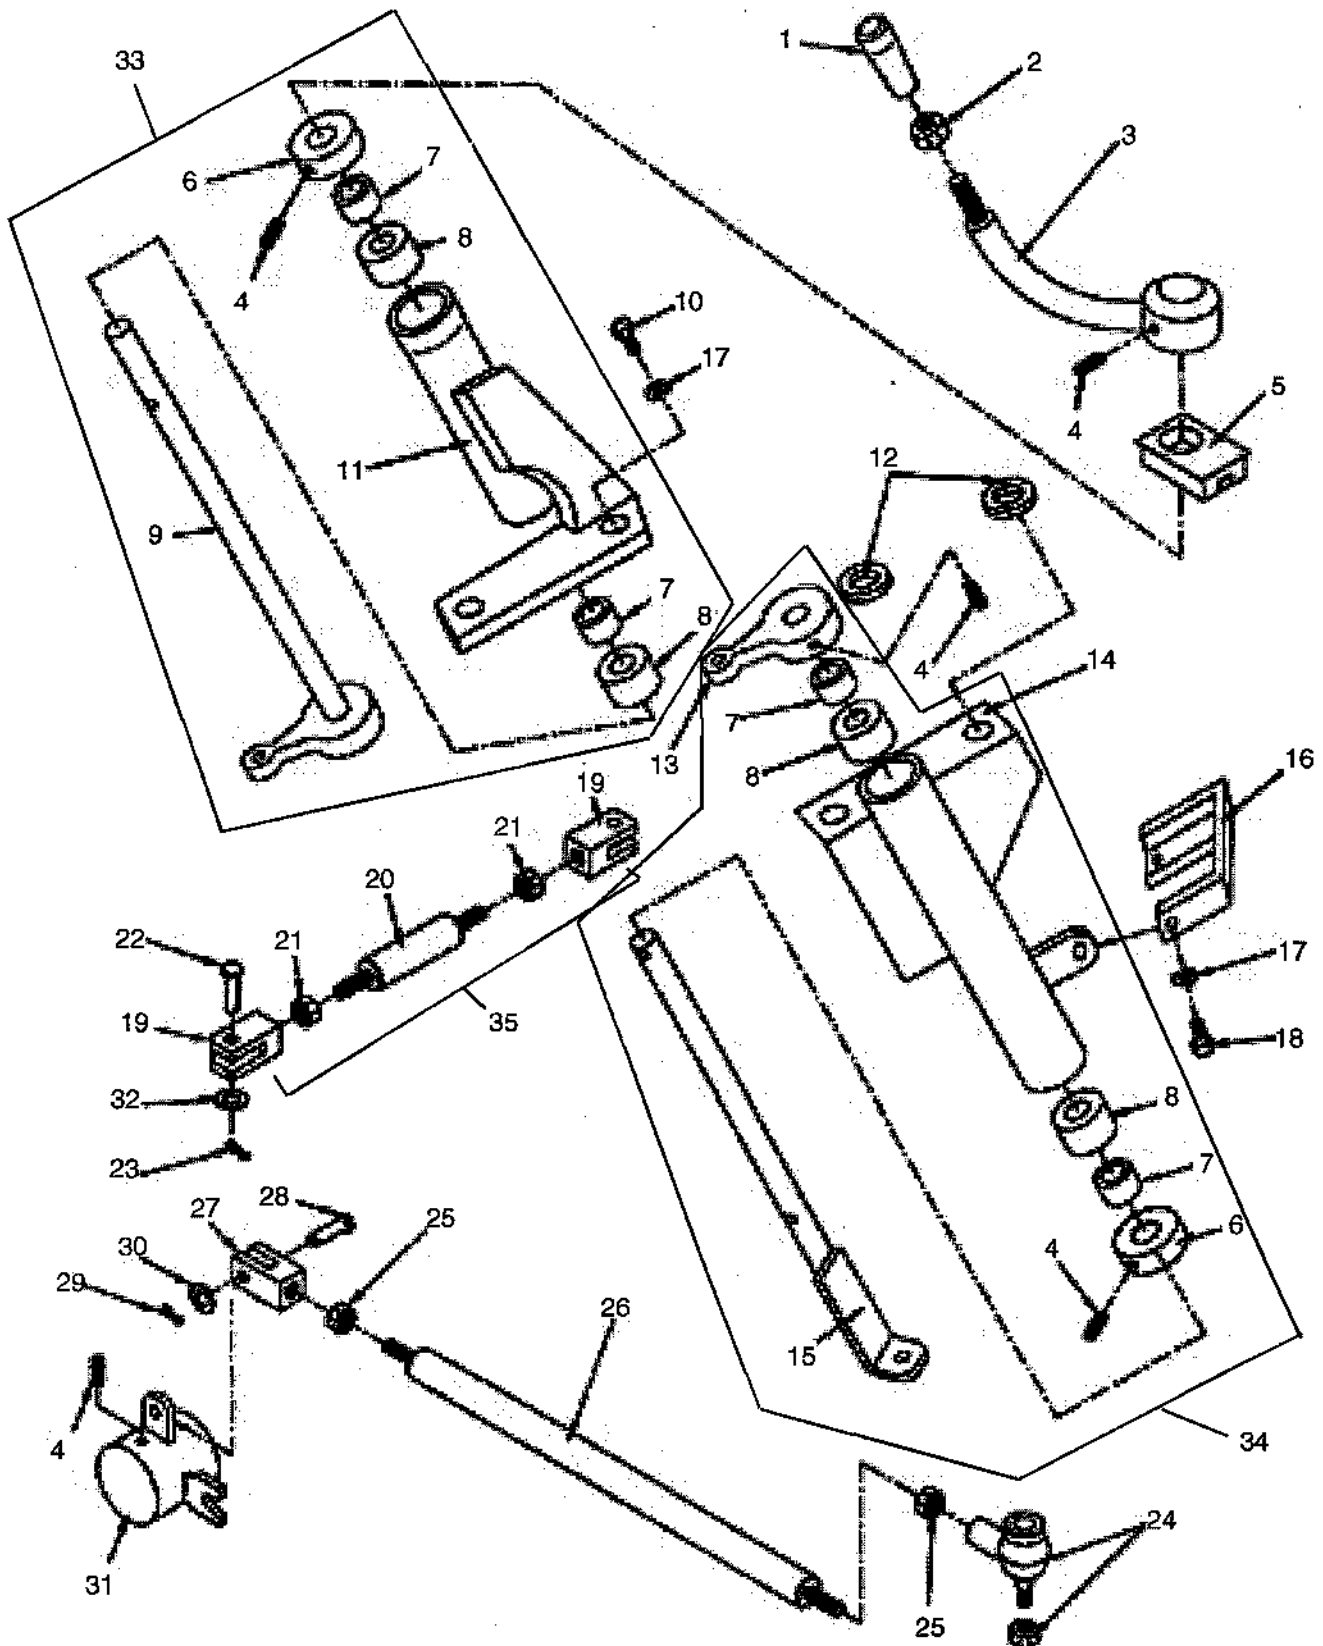

REVERSER OUTER CONTROL


665 / 665 DTC

ITEM NO.	PART NO.	DESCRIPTION	VENDOR NO.	QUANTITY 665 665 DTC	
1	ESL12882	Knob	D10042300	1	1
2	ESL12883	Nut (M10x1.00)	D10042100	1	1
3	ESL12886	Handle F/R/ Gear Shift	D10042090	1	1
4	ESL12888	Roll Pin	D87000120	4	4
5	ESL12889	Grommet	D10042220	1	1
6	ESL12887	Retainer	-	2	2
7	ESL13437	Bush	D10042980	4	4
8	ESL12890	Adapter	D10043270	4	4
9	ESL13419	Shaft F/R, LH	D10043330	1	1
10	ESL12894	Bolt (M10x1.5x40)	-	4	4
11	ESL13425	Bracket & Tube Assembly, LH	-	1	1
12	ESL12898	Spacer	D10042070	2	2
13	ESL13420	Lever	D10043350	1	1
14	ESL13421	Bracket & Tube Assembly, RH	D10043340	1	1
15	ESL13422	Shaft F/R, RH	D10043320	-	-
-	ESL13423	Shaft F/R, RH	D10046490	1	1
16	ESL12896	Support	D10043290	1	1
17	N630174S8	Washer, Lock (M10)	-	3	3
18	ESL12897	Bolt (M10x1.5x30)	D81500370	1	1
19	97013S36	Clevis	-	2	2
20	ESL13642	Rod F/R Gear Shift	D10103880	1	1
21	33925S8	Nut, Hex (3/8-24)	-	2	2
22	73919S8	Pin, Clevis (3/8x1.4)	-	2	2
23	72017S8	Pin, Cotter (1/8x0.75)	-	2	2
24	ESL12900	Ball Joint Assembly	D10042110	1	1
25	ESL12901	Nut Hex, Thin	-	2	2
26	ESL12899	Rod, RH	D10043300	-	-
-	ESL13424	Rod, RH	-	1	1
27	ESL12902	Clevis	D10043280	1	1
28	ESL12904	Pin	D10042120	1	1
29	72035S8	Cotter Pin	-	1	1
30	ESL11956	Washer	D85500140	1	1
31	ESL12903	Lever & Hub Assembly	D10043310	1	1
32	44728S8	Washer, Flat (3/8)	-	2	2
33	ESL12891	Shaft & Bracket Assembly, LH	-	1	1
34	ESL12892	Shaft & Bracket Assembly, RH	-	-	-
35	ESL12895	Rod & Clevis Assembly	D10066430	1	1

REVERSER OUTER CONTROL

665 / 665 DTC


ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL12905	Bolt	D81500850	2	2
2	ESL12906	Washer	D10063140	2	2
3	ESL12907	Fork 1-2	D10063250	1	1
4	ESL12908	Lock Pin	D10063260	1	1
5	ESL12909	Rod	D10063280	1	1
6	ESL12910	Block	D10063290	1	1
7	ESL12911	Pin (D6x30)	D10063300	2	2
8	ESL12912	Fork 3-4	D10062520	1	1
9	ESL12835	Plug (D20.35)	D10062570	2	2
10	ESL12913	Block	D10063330	1	1
11	ESL12914	Rod	D10063340	1	1
12	ESL12915	Grub Screw (M12x25)	D10086240	2	2
13	ESL12916	Nut (M12)	D10086250	2	2
14	ESL12917	Spring	D10086230	2	2
15	ESL12918	Ball	D10063380	2	2

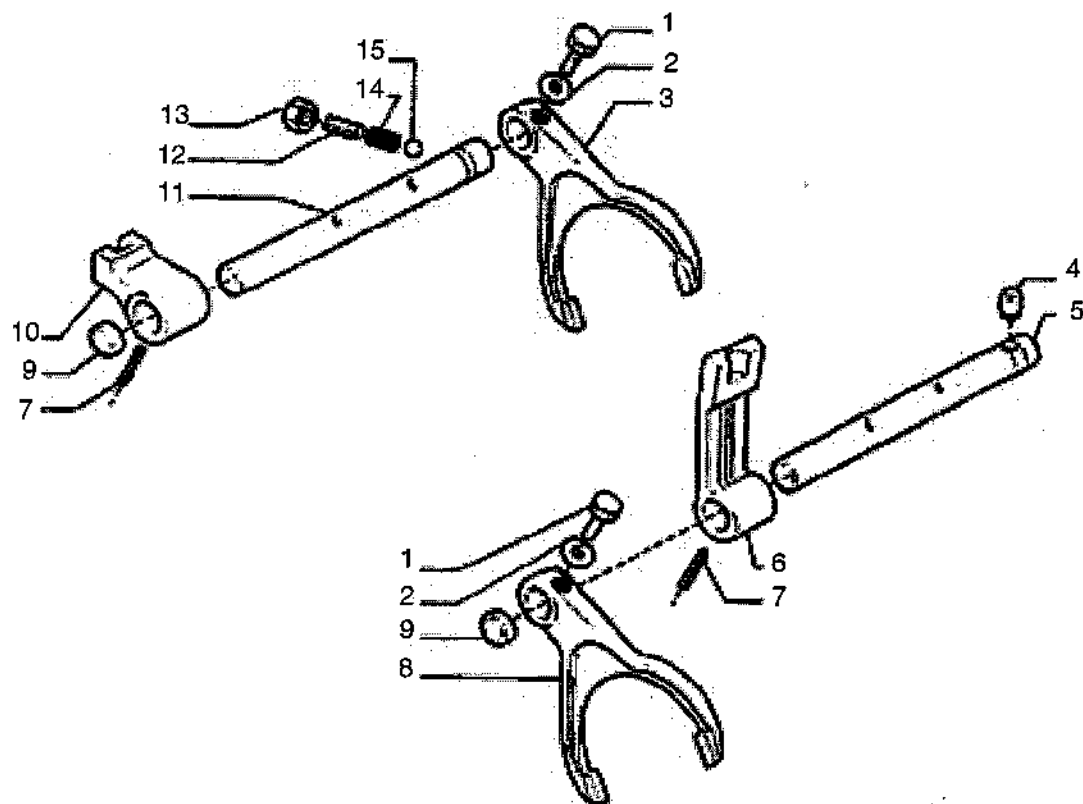

GEAR BOX INNER CONTROLS

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL12905	Bolt	D81500850	2	2
2	ESL12906	Washer	D10063140	2	2
3	ESL12919	Fork	D10063390	1	1
4	ESL12920	Fork	D10063450	1	1
5	ESL12916	Nut (M12)	D10086250	2	2
6	ESL12915	Grub Screw (M12x25)	D10086240	2	2
7	ESL12917	Spring	D10086230	2	2
8	ESL12918	Ball (D.3/8")	D10063380	2	2
9	ESL12921	Rod	D10063440	1	1
10	ESL12908	Lock Pin	D10063260	1	1
11	ESL12911	Pin (D6x30)	D10063300	2	2
12	ESL12835	Plug (D20.35x6)	D10062570	2	2
13	ESL12910	Block	D10063290	1	1
14	ESL12913	Block	D10063330	1	1
15	ESL12922	Rod	D10063430	1	1

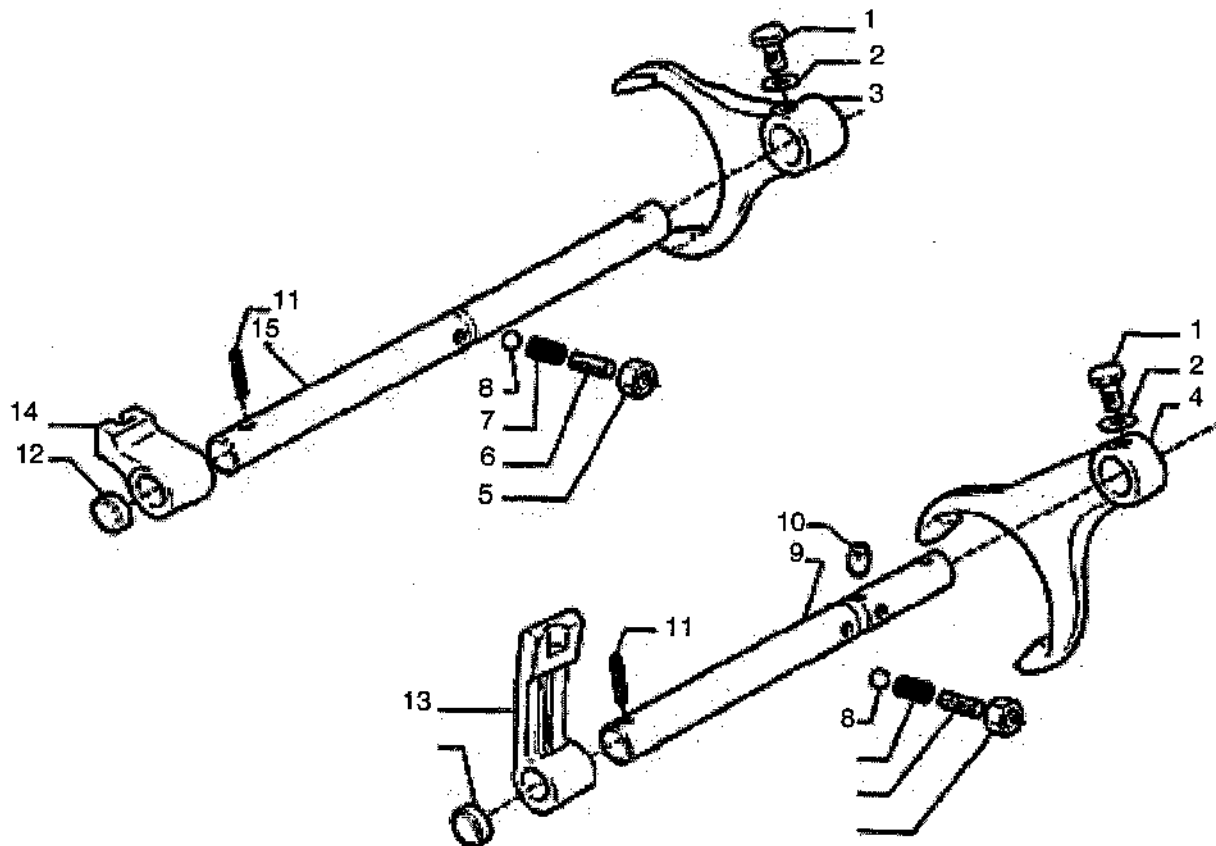

REDUCER INNER CONTROLS

S - SERIAL NUMBER BREAK,

I - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

7:8

665 / 665 DTC

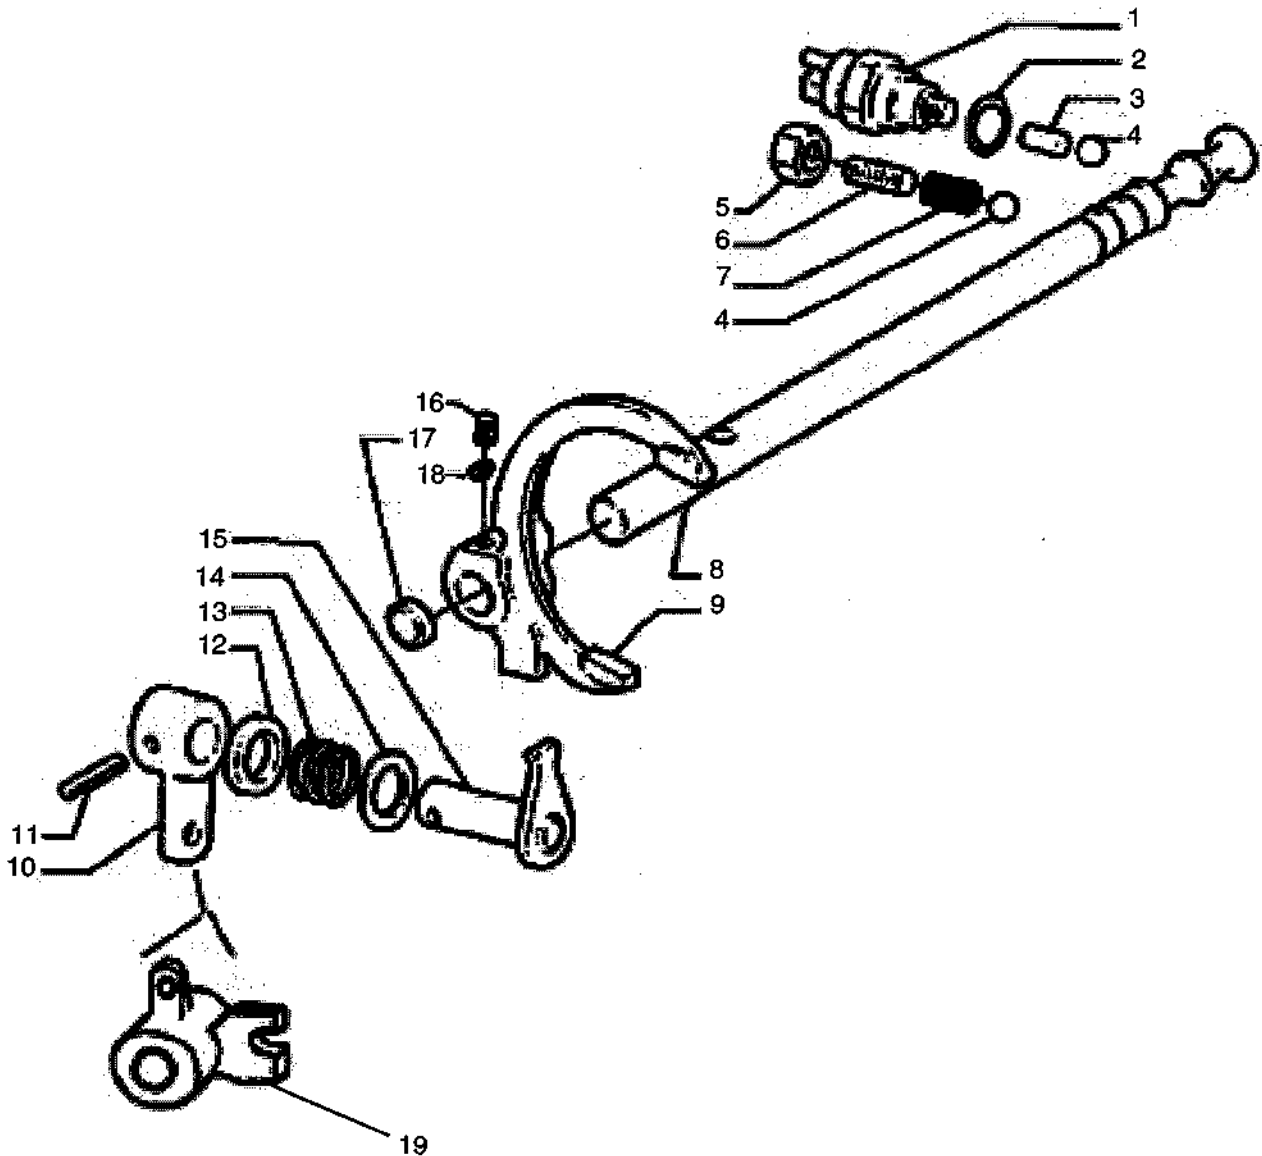


REVERSER INNER CONTROLS

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL12923	Sensor	D10063460	1	1
2	ESL12924	Washer	D10063470	1	1
3	ESL12925	Pin (D.9x17)	D10063480	1	1
4	ESL12918	Ball (D3/8")	D10063380	2	2
5	ESL12916	Nut (M12)	D10086250	1	1
6	ESL12915	Grub Screw (M12x25)	D10086240	1	1
7	ESL12917	Spring	D10086230	1	1
8	ESL12926	Rod	D10072640	1	1
9	ESL12927	Fork	D10074960	1	1
10	ESL12806	Lever & Hub Assembly	D10043370	1	1
11	ESL12928	Pin	D93400200	1	1
12	ESL12929	Oil Seal	D10063500	1	1
13	ESL12930	Spring	D10063510	1	1
14	ESL12931	Washer	D10063520	1	1
15	ESL12932	Lever	D10063540	1	1
16	ESL12905	Bolt	D81500850	1	1
17	ESL12835	Plug (D20.35x6)	D10062570	1	1
18	ESL12906	Washer	D10063140	1	1
19	ESL12903	Lever & Hub Assembly	D10043310	1	1

REVERSER INNER CONTROLS

665 / 665 DTC

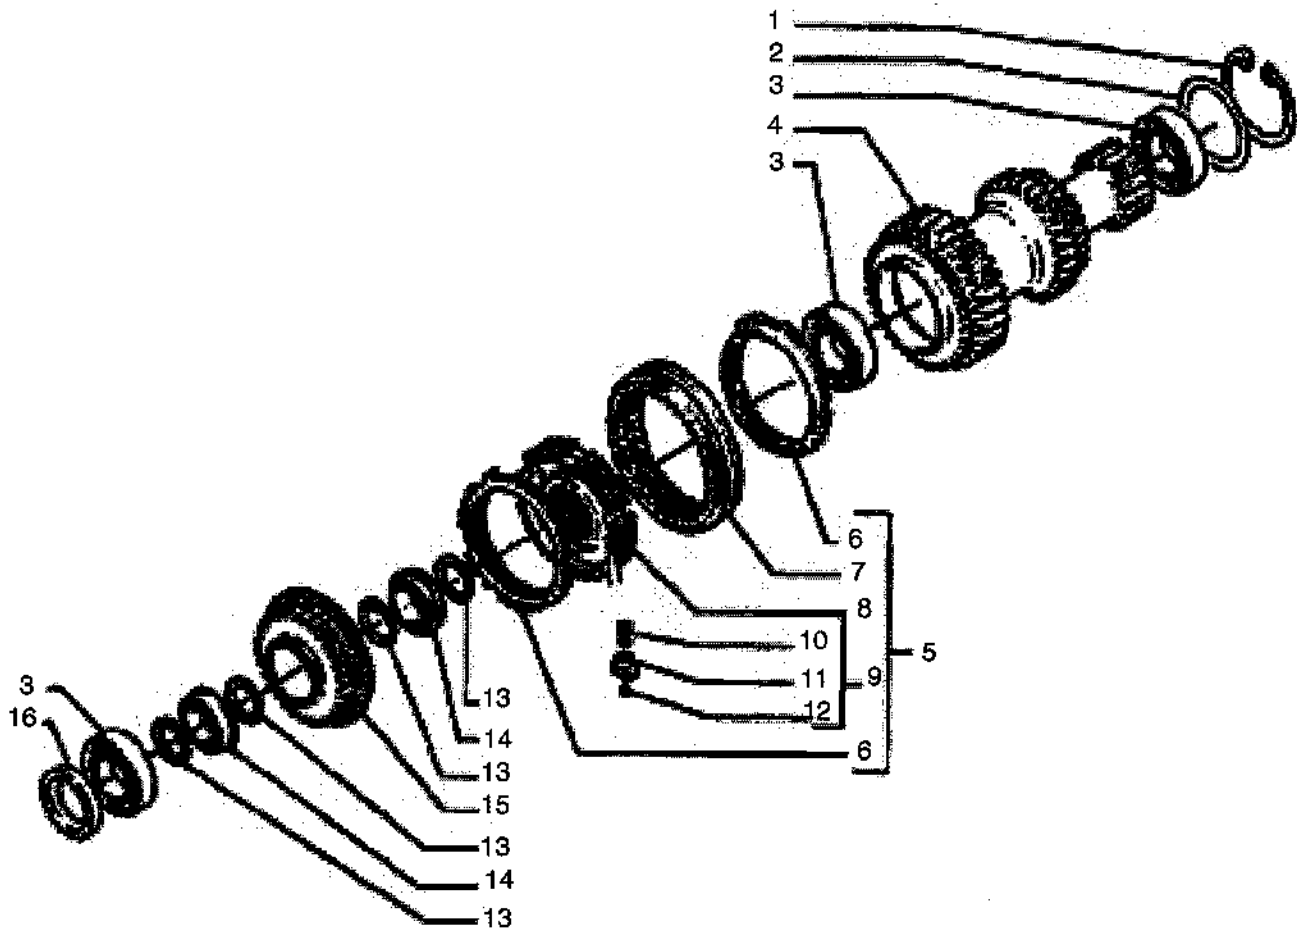

PRIMARY SHAFT

7:11

Ⓢ - SERIAL NUMBER BREAK,


✓ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL12934	Snap Ring	D90000280	1	1
2	ESL12935	Shim (0.05mm)	-	AR	AR
-	ESL12936	Shim (0.1mm)	D10063550	AR	AR
-	ESL12937	Shim (0.3mm)	D10063560	AR	AR
3	ESL12938	Bearing	D10063570	3	3
4	ESL12939	Primary Shaft	D10063580	1	1
5	ESL12940	Synchronizer Kit (Consists of Items#6,7,8,9)	D10076790	1	1
6	-	Ring (NSS)	-	2	2
7	-	Sleeve (NSS)	-	1	1
8	-	Hub (NSS)	-	1	1
9	ESL12941	Spring Kit (Includes Items#10-12)	D10081580	3	3
10	-	Spring (NSS)	-	3	3
11	-	Pad (NSS)	-	3	3
12	-	Ball (NSS)	-	3	3
13	ESL12942	Shim (0.5mm)	D10063600	AR	AR
-	ESL12945	Shim (0.3mm)	D10063640	AR	AR
-	ESL12946	Shim (0.1mm)	D10063660	AR	AR
14	ESL12943	Bearing	D10063610	2	2
15	ESL12944	Gear (Z=26)	D10063620	1	1
16	ESL12947	Oil Seal	D10063600	1	1

PRIMARY SHAFT

665 / 665 DTC

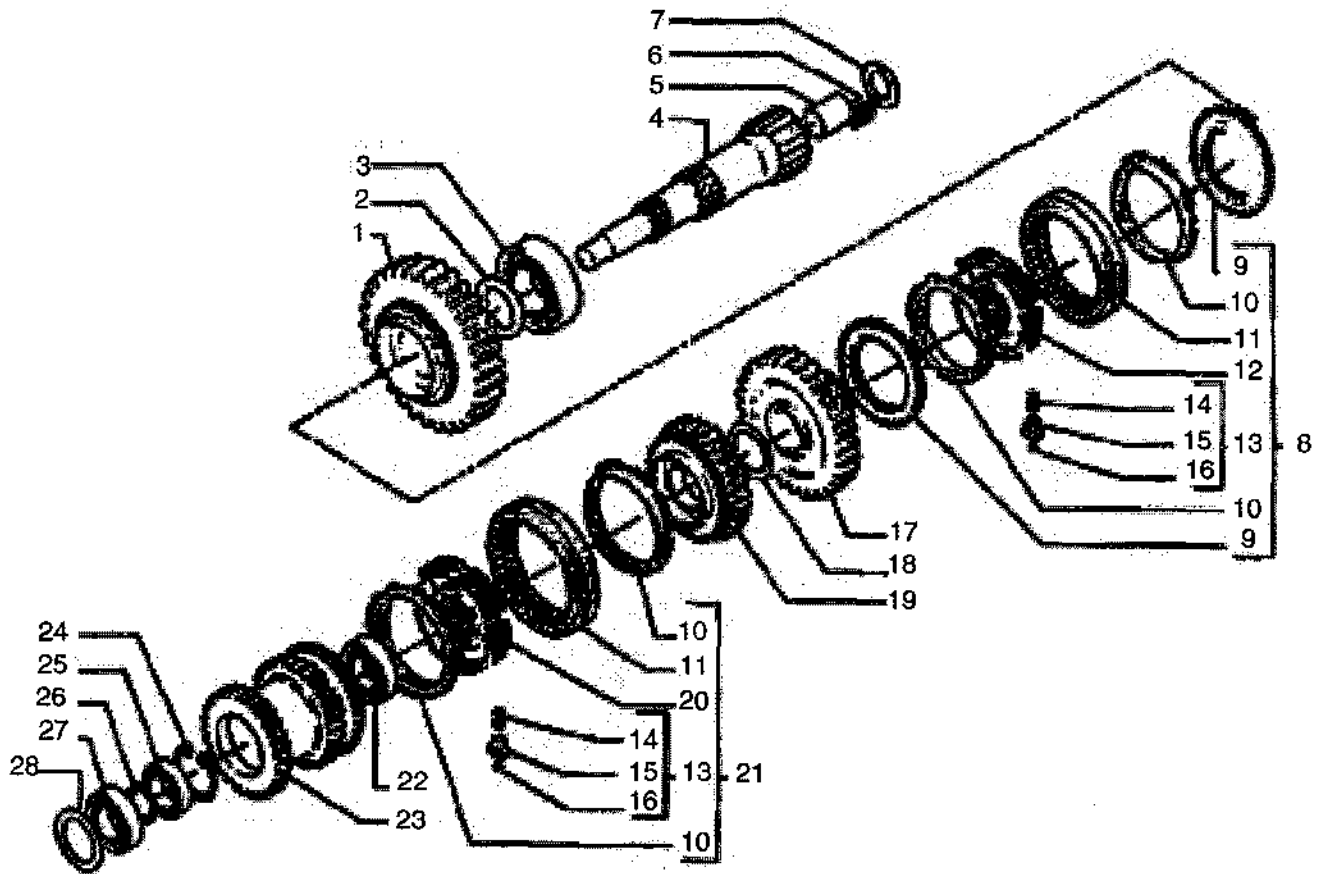

SECONDARY SHAFT

7:13

Ⓢ - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL12948	Gear (Z-44)	D10063680	1	1
2	ESL12949	Spacer	D10063690	1	1
3	ESL12950	Bearing	D10063700	1	1
4	ESL12951	Secondary Shaft (Z-20)	D10063710	1	1
5	ESL12952	Bush	D10063720	1	1
6	ESL12953	Bearing Needles	D10063730	19	19
7	ESL12954	Thrust Washer	D10063740	1	1
8	ESL12955	Synchronizer Kit	D10076800	1	1
		(Consists of Items #9-13)			
9	-	Synchronizing Ring (NSS)	-	2	2
10	-	Tapered Ring	-	4	4
11	-	Sleeve(NSS)	-	2	2
12	-	Hub(NSS)	-	1	1
13	ESL12941	Spring Kit	D10081580	6	6
		(Consists of Items #14-16 1 each)			
14	-	Spring (NSS)	-	6	6
15	-	Pad (NSS)	-	6	6
16	-	Ball (NSS)	-	6	6
17	ESL12956	Gear (Z-39)	D10063750	1	1
18	ESL12957	Spacer	D10063760	1	1
19	ESL12958	Gear (Z-33)	D10063770	1	1
20	-	Hub(NSS)	-	1	1
21	ESL12959	Synchronizer Kit	D10076810	1	1
		(Consists Of Items #10-11,13,20)			
22	ESL12960	Bearing	D10063780	1	1
23	ESL12961	Gear (Z-28/28)	D10063790	1	1
24	ESL12962	Snap Ring	D90000290	1	1
25	ESL12963	Bearing	D10063800	1	1
26	ESL12964	Spacer	D10063810	1	1
27	ESL12965	Bearing	D10063820	1	1
28	ESL12966	Shim (0.1mm)	D10063830	AR	AR
-	ESL12967	Shim (0.3mm)	D10063840	AR	AR
-	ESL12968	Shim (0.5mm)	D10063850	AR	AR

SECONDARY SHAFT

665 / 665 DTC


ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
1	ESL12854	Needle Bearing	D10063860	1	1
2	ESL12855	Shaft	D10063870	1	1
3	ESL12856	O'Ring	D10085560	1	1
4	ESL12857	Gear (Z=21)	D10063890	1	1
5	ESL12858	Pin	D93400210	1	1
6	ESL13192	Bush	D10063900	1	1
7	ESL12859	Washer	D10063910	1	1
8	ESL12860	Screw (M12x47)	D82500360	1	1

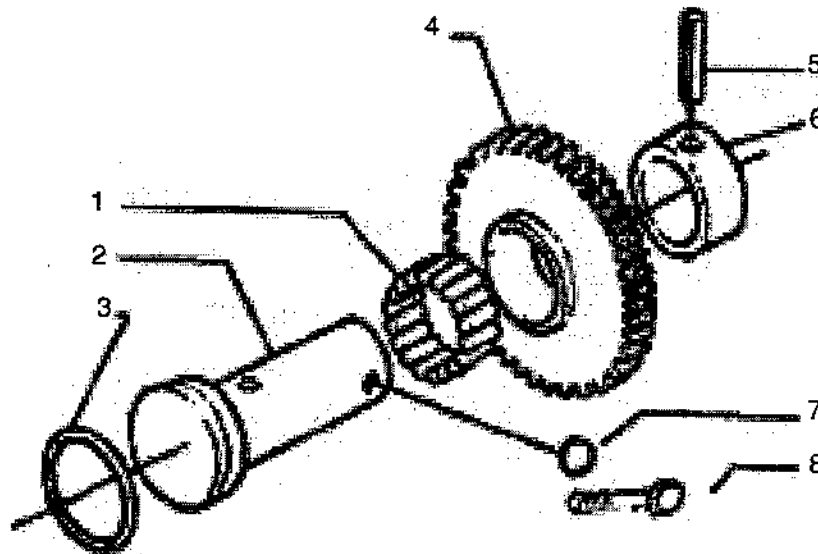

REVERSE GEAR

REAR END & P.T.O.

665 / 665 DTC

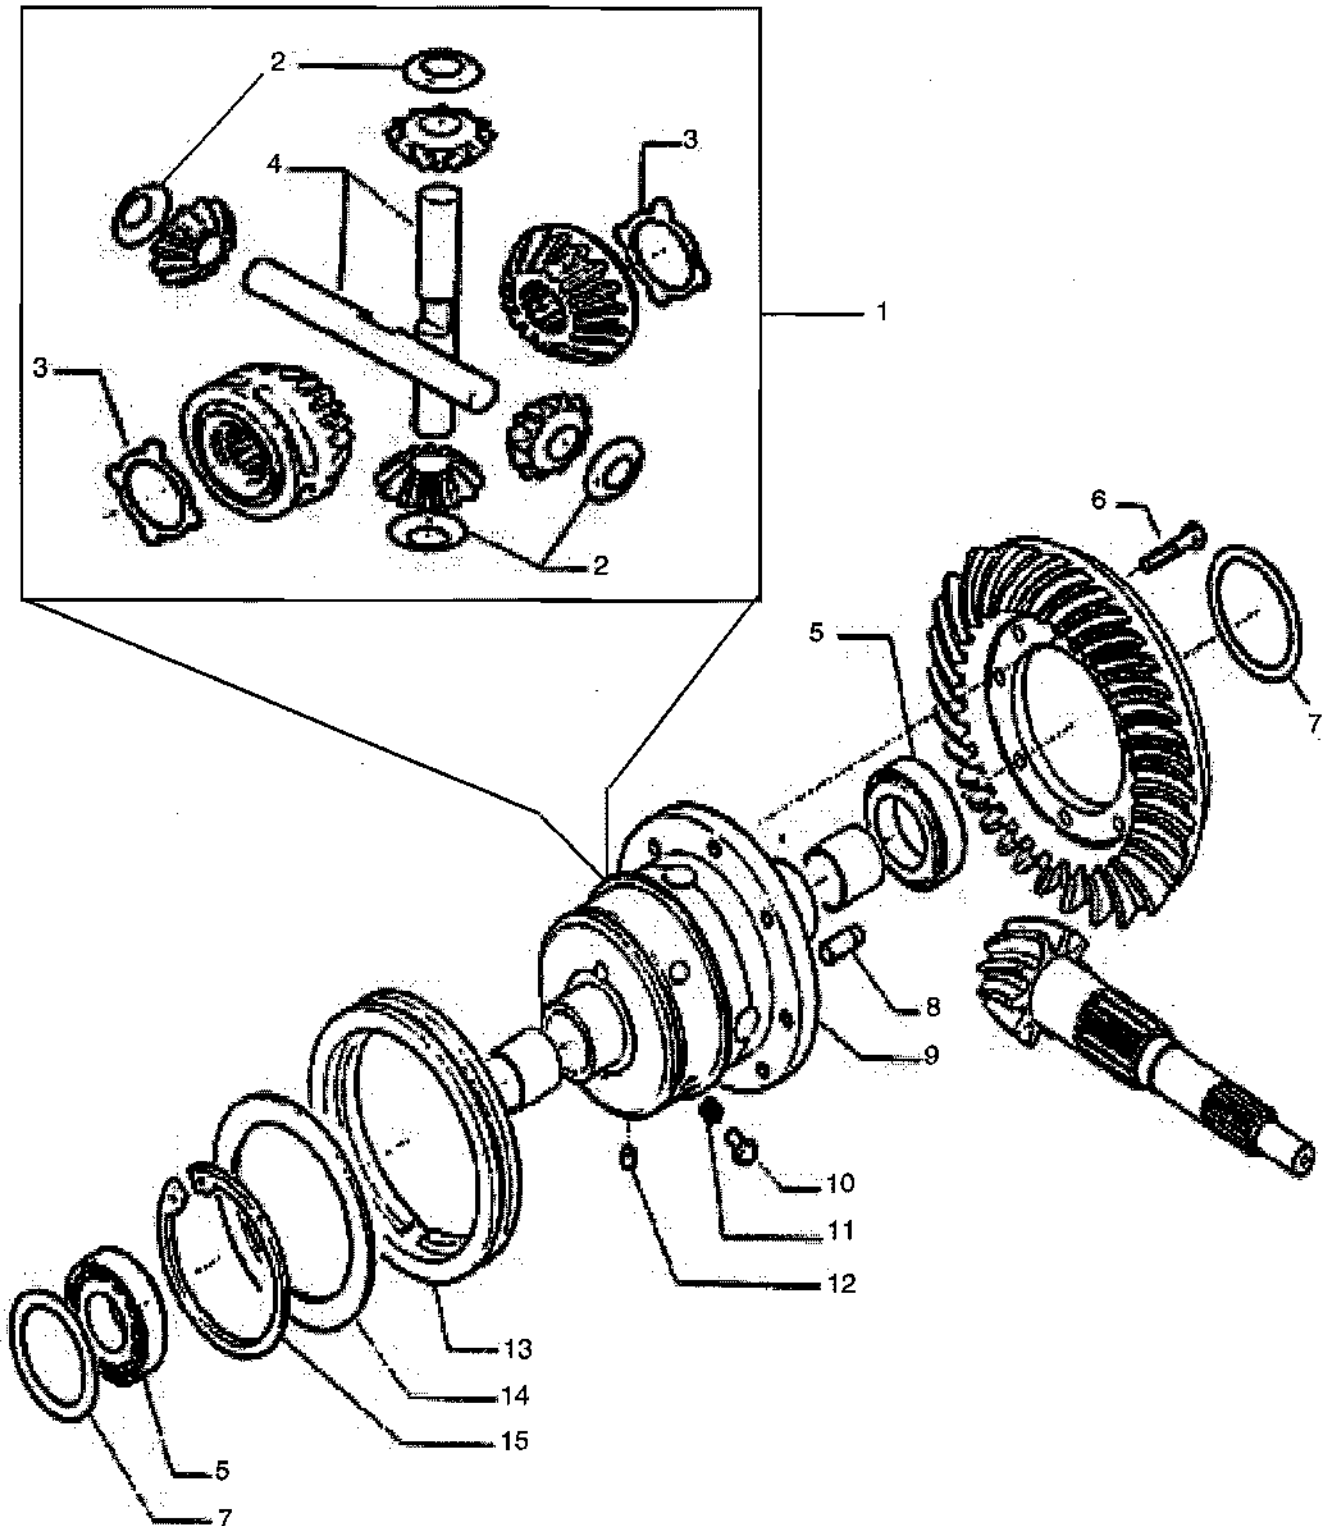

REAR DIFFERENTIAL

8:1

© - SERIAL NUMBER BREAK,

✓ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL12969	Differential Kit (Includes Items # 1-4)	D10081590	1	1
2	ESL12970	Thrust Washer	D10064160	4	4
3	ESL12971	Thrust Washer	D10064170	2	2
4	ESL12972	Shaft	D10064180	2	2
5	ESL12973	Bearing	D10064190	2	2
6	ESL12974	Bolt (M12x80)	D81500940	8	8
7	ESL12975	Shim (0.1mm)	D10064200	AR	AR
-	ESL12976	Shim (0.3mm)	D10064210	AR	AR
-	ESL12977	Shim (0.5mm)	D10064220	AR	AR
-	ESL12978	Shim (0.05mm)	D10064230	AR	AR
8	ESL13065	Pin (D12x30)	D10081640	1	1
9	ESL12979	Differential Box	D10064250	1	1
10	ESL12980	Pin	D10064260	4	4
11	ESL12981	Spring	D10064270	4	4
12	ESL12982	Pin	D10064280	1	1
13	ESL12983	Sleeve	D10064290	1	1
14	ESL12984	Flange	D10064300	1	1
15	ESL12985	Snap Ring		1	1


REAR DIFFERENTIAL

S - SERIAL NUMBER BREAK,



- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

8:2

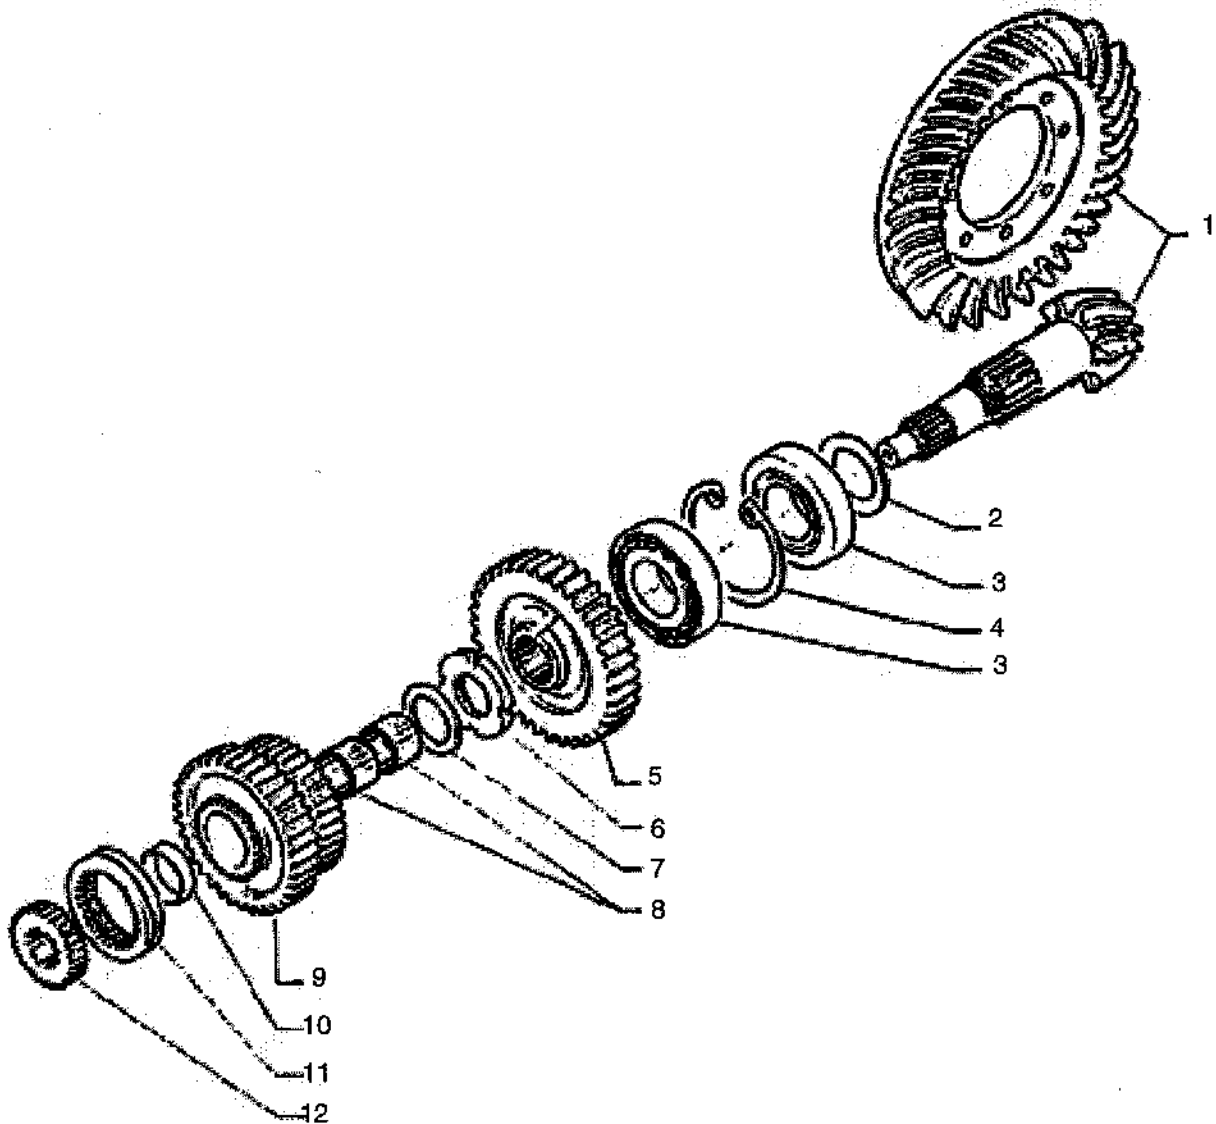

BEVEL GEAR SET

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL12996	Bevel Gear Set (Z-12/38) (Includes Items #1-2,6)	D10081610	1	1
2	ESL12997	Shim (2.5)	D10063930	4	4
-	ESL12998	Shim (2.6)	D10063940	AR	AR
-	ESL12999	Shim (2.7)	D10063950	AR	AR
-	ESL13000	Shim (2.8)	D10063960	AR	AR
-	ESL13001	Shim (2.9)	D10063970	AR	AR
-	ESL13002	Shim (3.0)	D10063990	AR	AR
-	ESL13003	Shim (3.1)	D10064000	AR	AR
-	ESL13004	Shim (3.2)	D10064010	AR	AR
-	ESL13005	Shim (3.3)	D10064020	AR	AR
-	ESL13006	Shim (3.4)	D10064030	AR	AR
-	ESL13007	Shim (3.5)	D10064040	AR	AR
3	ESL13008	Bearing	D10064060	2	2
4	ESL13009	Snap Ring	D90000300	1	1
5	ESL13010	Gear (Z-40)	D10064070	1	1
6	ESL13011	Ring Nut (45x1.5)	D10064080	1	1
7	ESL13012	Thrust Washer	D10064090	1	1
8	ESL13013	Bearing, Needle	D10064100	2	2
9	ESL13014	Gear (Z-34/26)	D10064110	1	1
10	ESL13015	Spacer	D10064120	1	1
11	ESL13016	Collar	D10064130	1	1
12	ESL13017	Gear	D10064140	1	1

BEVEL GEAR SET

S - SERIAL NUMBER BREAK ,




- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

8:4

665 / 665 DTC

ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL13018	Seal, Ring	D10064310	1	1
2	ESL13019	O'Ring	D10064330	1	1
3	ESL13020	Drive Shaft	D10064340	1	1
4	ESL12835	Plug	D10062570	1	1
5	ESL13021	Spring	D10064350	1	1
6	ESL12778	Pin (D8x36)	D87000130	1	1
7	ESL13022	Fork	D10064370	1	1
8	ESL13023	Lever Kit (Includes Item #9)	-	1	1
9	ESL12819	Bush	D10042700	1	1
10	ESL13024	Pin (D15x51)	D10064390	1	1
11	ESL12807	Washer	-	1	1
12	ESL12808	Circlip	D90000180	1	1

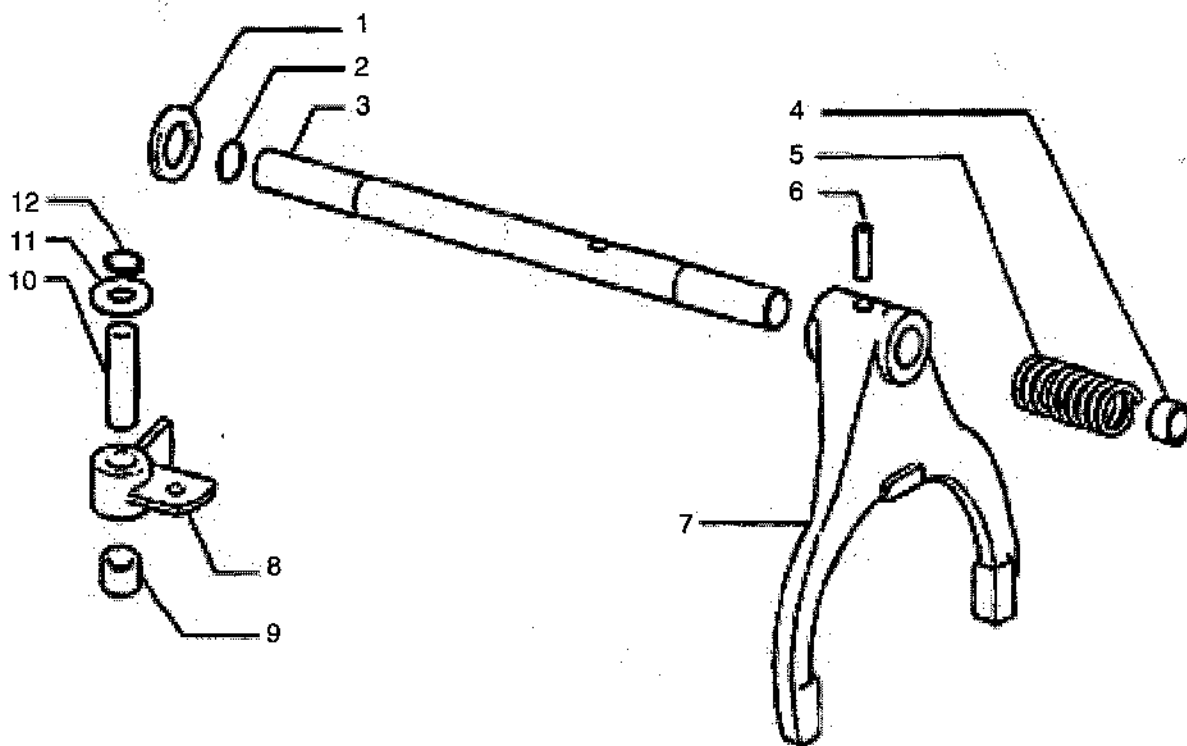


REAR DIFFERENTIAL LOCK


8:5

Ⓢ - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL13025	Pedal, Differential	D10043430	1	1
2	ESL13026	Nut, Thin (M10)	D83500520	1	1
3		Shank & Hub Assembly (NSS)	-	1	1
4	ESL13027	Pedal Assembly, Differential Lock	D10039750	1	1
5	ESL13029	Bracket Assembly	D10042480	1	1
6	N630173S8	Washer, Lock (M8)	-	2	2
7	ESL12841	Bolt (M8x1.25x25)	-	2	2
8	ESL12819	Bush	D10042700	1	1
9	ESL12808	Ring Retaining	D90000180	2	2
10	ESL12807	Washer	-	2	2
11	73919S8	Pin, Clevis	-	2	2
12	72017S8	Pin, Cotter	-	2	2
13	ESL13030	Rod & Clevis Assembly	D10042720	1	1
14	N62042S8	Nut	-	1	1
15	N662423S8	Clevis	-	1	1
16		Rod Assembly (NSS)	-	1	1
17	ESL13028	Spring Differential Lock	D10105380	1	1

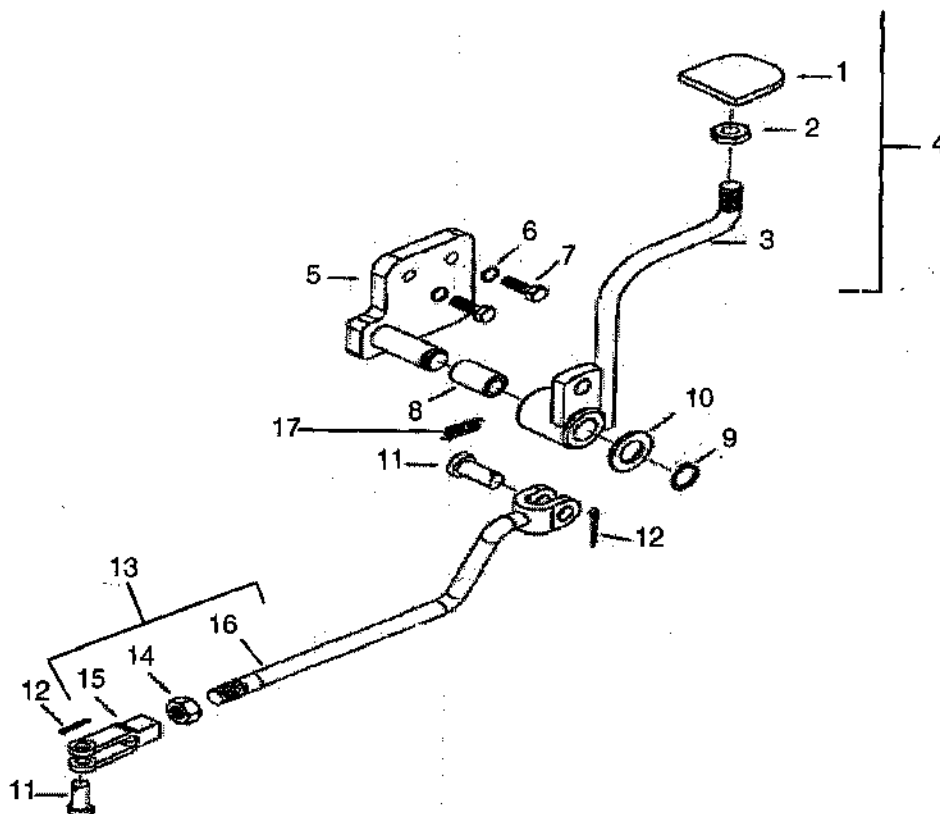

REAR DIFFERENTIAL LINKAGE

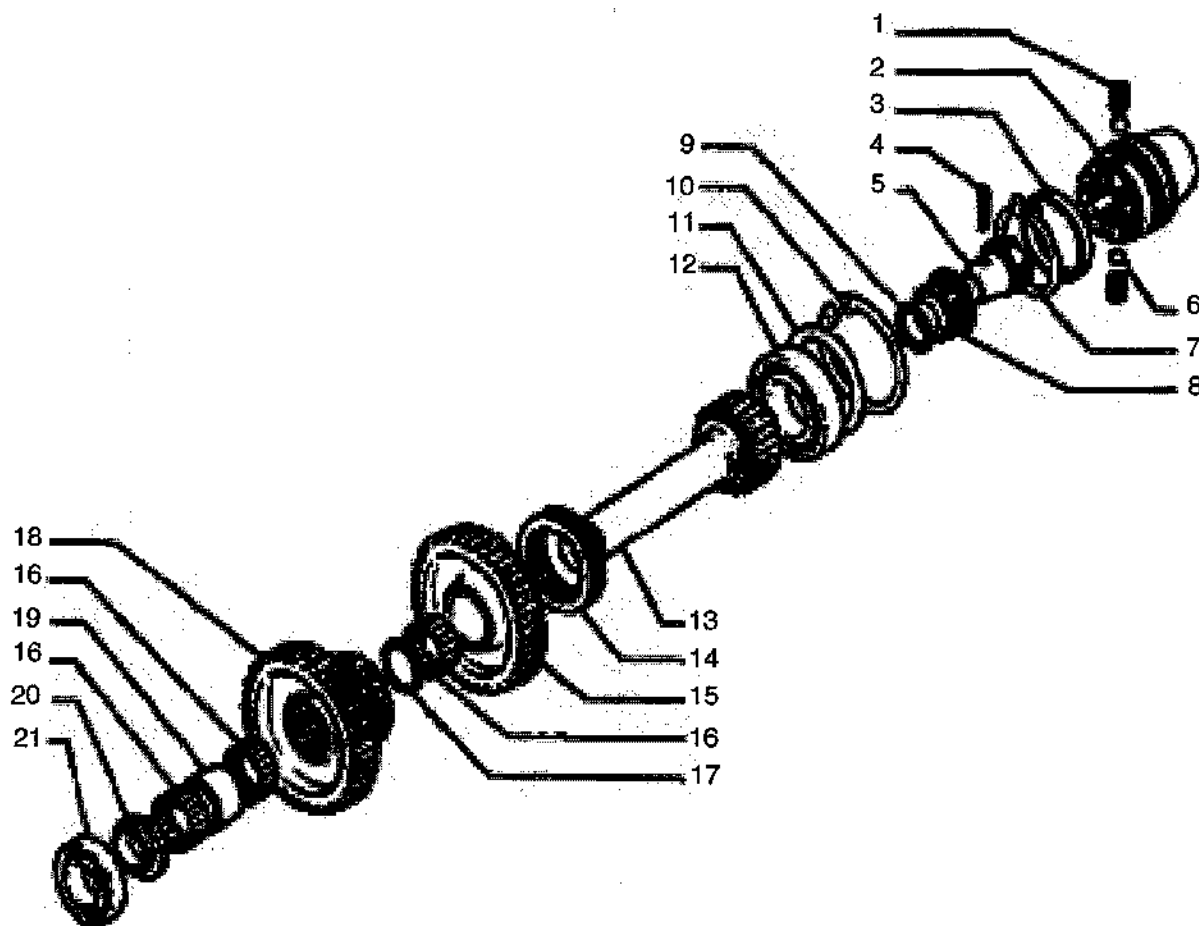

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13031	Spring	D10064400	2	2
2	ESL13032	PTO Synchronized Clutch	D10064410	1	1
3	ESL13033	Lock Ring	D10064420	1	1
4	ESL13034	Pin (D.5x26)	D10064430	2	2
5	ESL13035	PTO Clutch	D10064440	1	1
6	ESL13036	Ball (D.1/4")	D10064450	2	2
7	ESL13037	Snap Ring	D90000320	1	1
8	ESL13038	PTO Lock Ring	D10064460	1	1
9	ESL13039	Washer	D10064470	1	1
10	ESL13040	Snap Ring (D.90)	D90000360	1	1
11	ESL12975	Shim (0.10mm)	D10064200	AR	AR
-	ESL12976	Shim (0.30mm)	D10064210	AR	AR
-	ESL12977	Shim (0.50mm)	D10064220	AR	AR
12	ESL13042	Bearing	D10064480	1	1
13	ESL13043	Shaft Gear (Z-20)	D10064490	1	1
14	ESL13044	Collar	D10064500	1	1
15	ESL13045	Gear (Z-33)	D10064510	1	1
16	ESL13046	Needle Bearing	D10064520	3	3
17	ESL13047	Spacer	D10064530	1	1
18	ESL13048	Gear (Z-25/39)	D10064540	1	1
19	ESL13049	Spacer	D10064550	1	1
20	ESL13050	Washer	D10064560	1	1
21	ESL12938	Bearing	D10063570	1	1

665 / 665 DTC

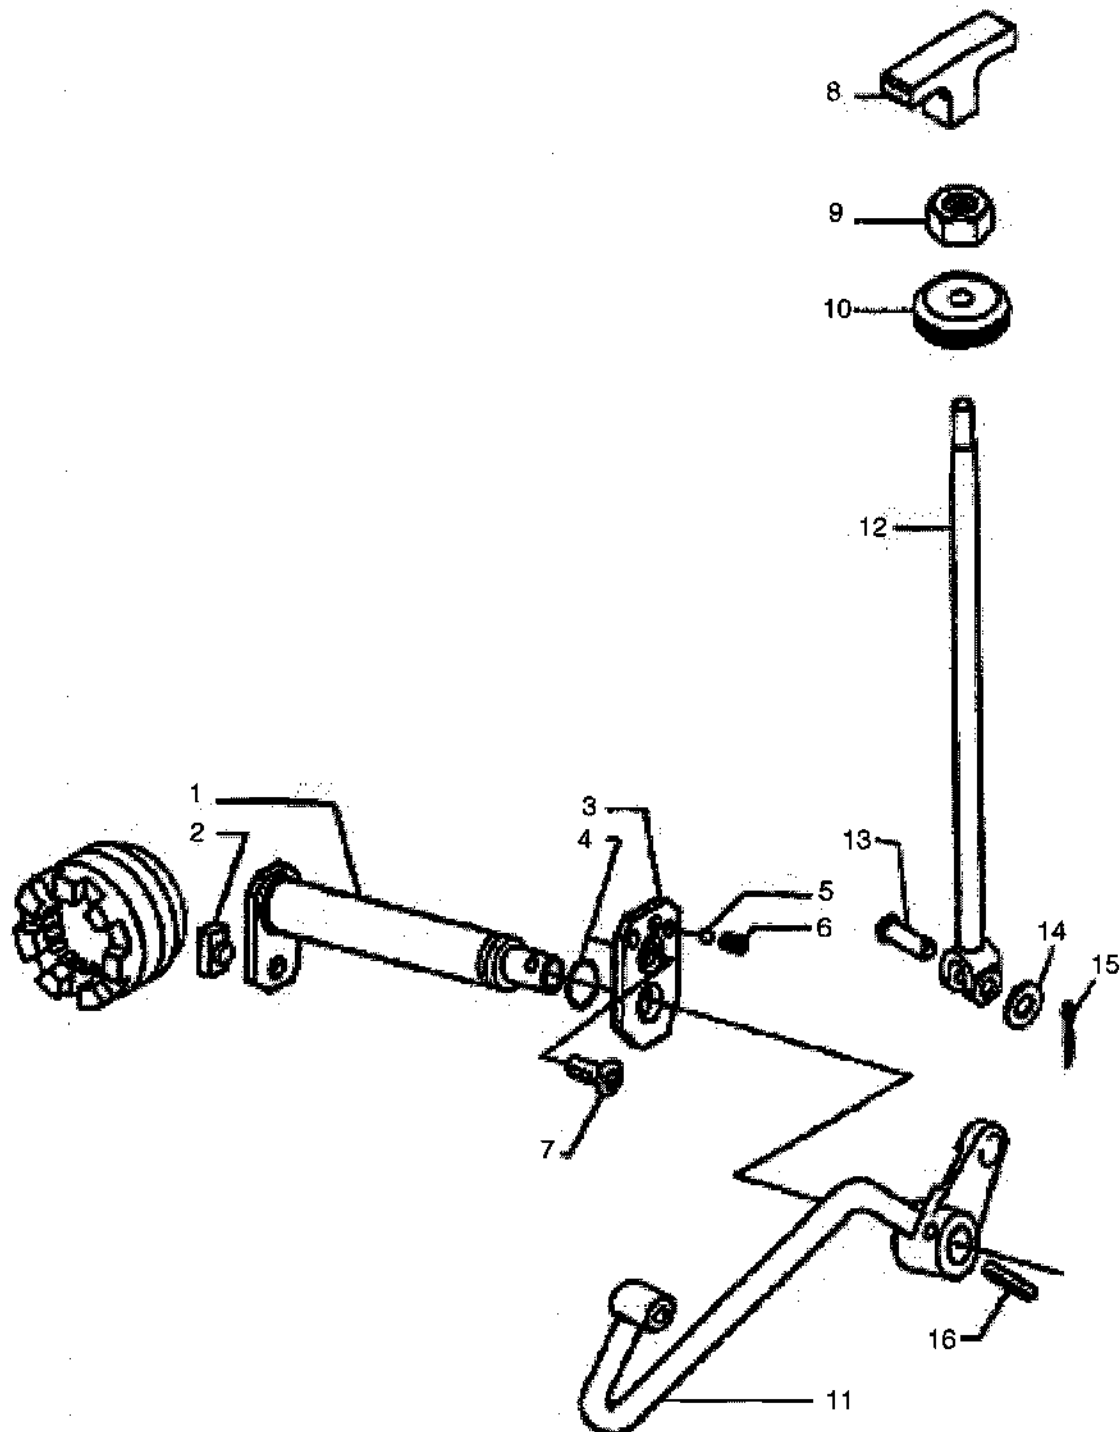

PTO OUTER CONTROLS

8:9

Ⓢ - SERIAL NUMBER BREAK, ✓ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
1	ESL13051	Shaft	D10064570	1	1
2	ESL13052	Pad	D10064580	1	1
3	ESL13053	Plate	D10064590	1	1
4	ESL13019	O'Ring	D10064330	1	1
5	ESL13036	Ball (D.1/4")	D10064450	1	1
6	ESL13031	Spring	D10064400	1	1
7	ESL13054	Screw (M8x16)	D82500430	1	1
8	ESL13335	Knob	D10042460	1	1
9	N620042S8	Nut	-	1	1
10	ESL13056	Rubber Boot	D10026950	1	1
11	ESL13057	Front Lever P.T.O.	D10081630	1	1
12	ESL13058	Rod Assembly, PTO Engaging	D10042470	1	1
13	76023S8	Pin, Clevis	-	1	1
14	44726S8	Washer	-	1	1
15	72016S8	Pin, Cotter	-	1	1
16	ESL13059	Pin (D.6x28)	D10064610	1	1

PTO OUTER CONTROLS

665 / 665 DTC


ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL13060	Oil Dip Stick	D10064680	1	1
2	ESL13061	Cover	D10064690	1	1
3	ESL13062	Plug	D10065160	1	1
4	ESL13063	Sealing Ring	D10061060	1	1
5	ESL13064	Oil Seal	D10061050	1	1
6	ESL13065	Dowel Pin	D10081640	2	2
7	ESL12672	Bolt (M10x25)	-	7	7
8	ESL13066	Plug	D10064700	1	1
9	ESL12938	Bearing	D10063570	2	2
10	ESL13067	PTO Output Shaft	D10061070	1	1
11	ESL13068	Bearing	D10064630	2	2
12	ESL13069	PTO Shaft	D10099160	1	1

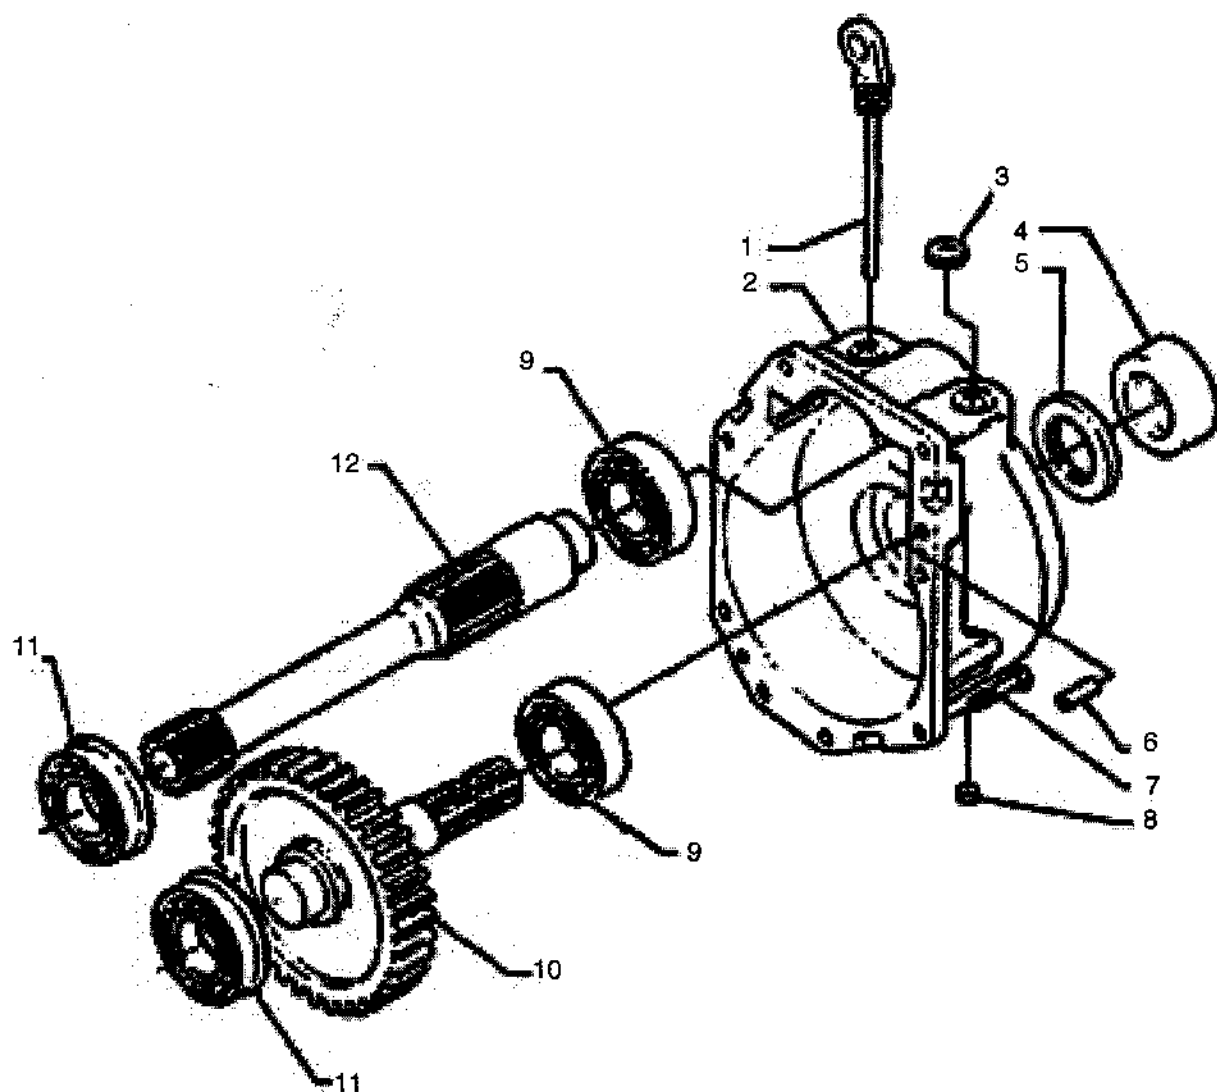

PTO (540 RPM)


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13336	Cap PTO	D10042010	1	1
2	ESL13337	Guard PTO	D10039730	1	1
3	ESL13338	Plate, Cap Mounting PTO	D10042000	1	1
4	ESL12653	Bolt (M12x1.75-25)	-	4	4
5	ESL12652	Washer (M12)	-	2	2

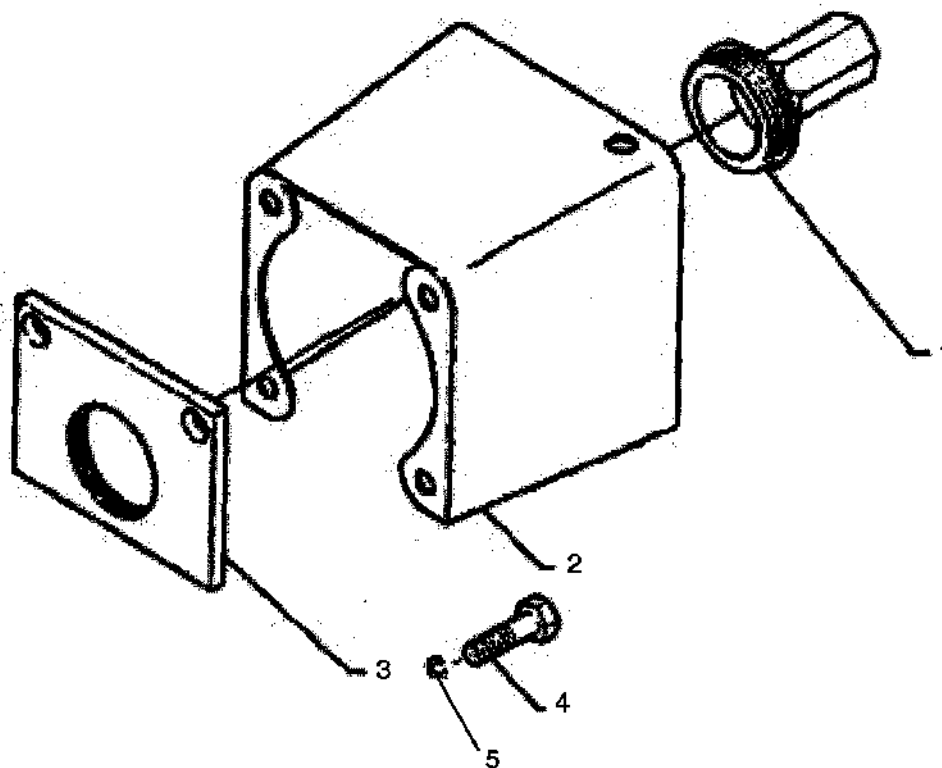

PTO GUARD

665 / 665 DTC

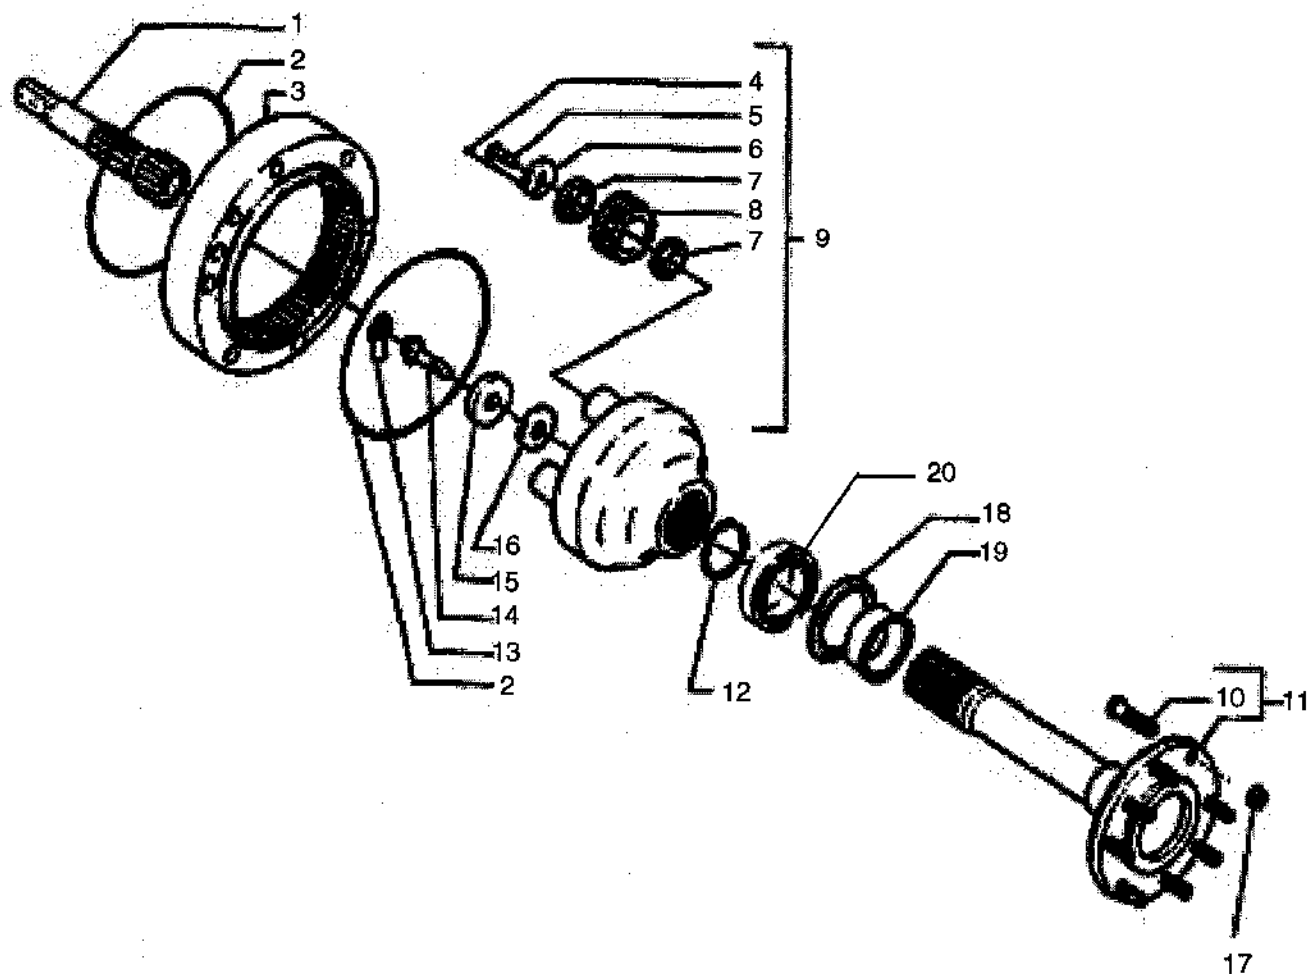

AXLE SHAFTS


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13073	Half Shaft with Gear (Z-14)	D10064780	2	2
2	ESL13074	O'Ring	D10064790	4	4
3	ESL13075	Epicyclic Ring Gear (Z-82)	D10064800	2	2
4	ESL13076	Needle Bearing	D10081650	6	6
5	ESL13077	Bolt (M10x35)	D10065690	6	6
6	ESL13078	Washer	-	6	6
7	ESL13079	Bearing	D10081660	12	12
8	ESL13080	Epicyclic Gear (Z-33)	D10081670	6	6
9	ESL13081	Planetary Carrier Assembly (Includes Items #4-8)	D10081680	2	2
10	ESL13082	Bolt, Rear Wheel	D10081690	16	16
11	ESL13083	Wheel Shaft Assembly	D10081700	2	2
12	ESL13084	Lock Ring	D10064820	2	2
13	ESL13085	Stop Screw	D10064830	2	2
14	ESL13086	Special Bolt (M16x2)	D10064840	2	2
15	ESL13087	Washer	D10064850	2	2
16	ESL13088	Shim (0.1mm)	D10064860	AR	AR
-	ESL13089	Shim (0.3mm)	D10064870	AR	AR
-	ESL13090	Shim (0.5mm)	D10064880	AR	AR
-	ESL13091	Shim (0.05mm)	D10064890	AR	AR
17	ESL13092	Nut, Wheel Bolt Rear	D10043020	16	16
18	ESL13093	Seal	D10064900	2	2
19	ESL13094	Bush	D10064910	2	2
20	ESL12993	Bearing	D10064750	2	2

AXLE SHAFTS

665 / 665 DTC

ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665DTC
1	ESL12986	Bearing	D10064720	2	2
2	ESL12987	Seal	D10064710	2	2
3	ESL12988	Pin (D15x75)	D10064730	4	4
4	ESL12989	Trumpet Housing Kit (Includes Items #1-3, 6-9)	D10081600	2	2
5	ESL12990	Bolt (M14x100)	D81500950	16	16
6	ESL12991	Grease Nipple (M8x1)	D92500080	2	2
7	ESL12992	Seal	D10064740	2	2
8	ESL12993	Bearing	D10064750	2	2
9	ESL12994	Seal	D10064760	2	2

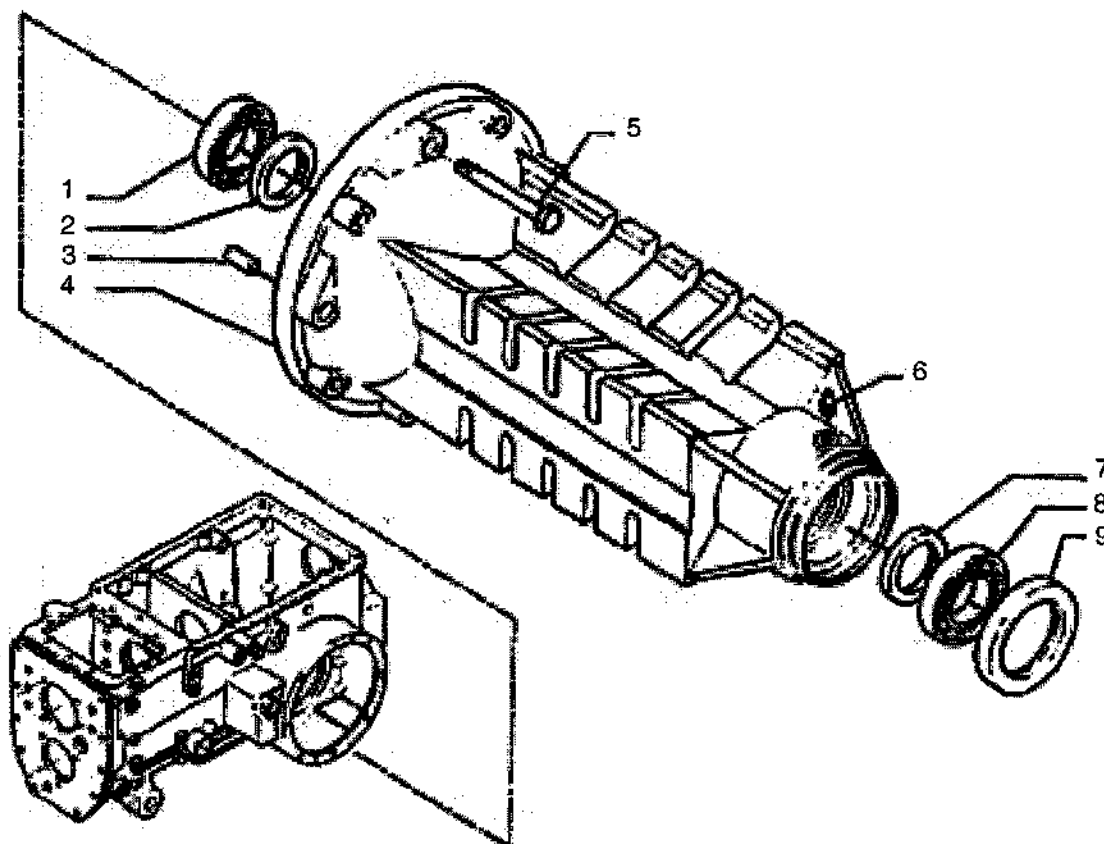


FINAL DRIVE HOUSING

8:15

Ⓢ - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
-	ESL12502	Wheel Assembly, Rear	D10045420	2	2
1	-	Disc, Rear Wheel (NSS)	-	2	2
2	ESL13092	Nut, Wheel Bolt Rear	D10043020	16	16
3	-	Rim, Rear Wheel (NSS)	-	2	2
4	ESL13433	Bolt, Rear Wheel Rim to Disc	-	12	12
5	ESL13434	Washer	-	12	12
6	ESL13435	Nut, Disc to Rim	-	12	12

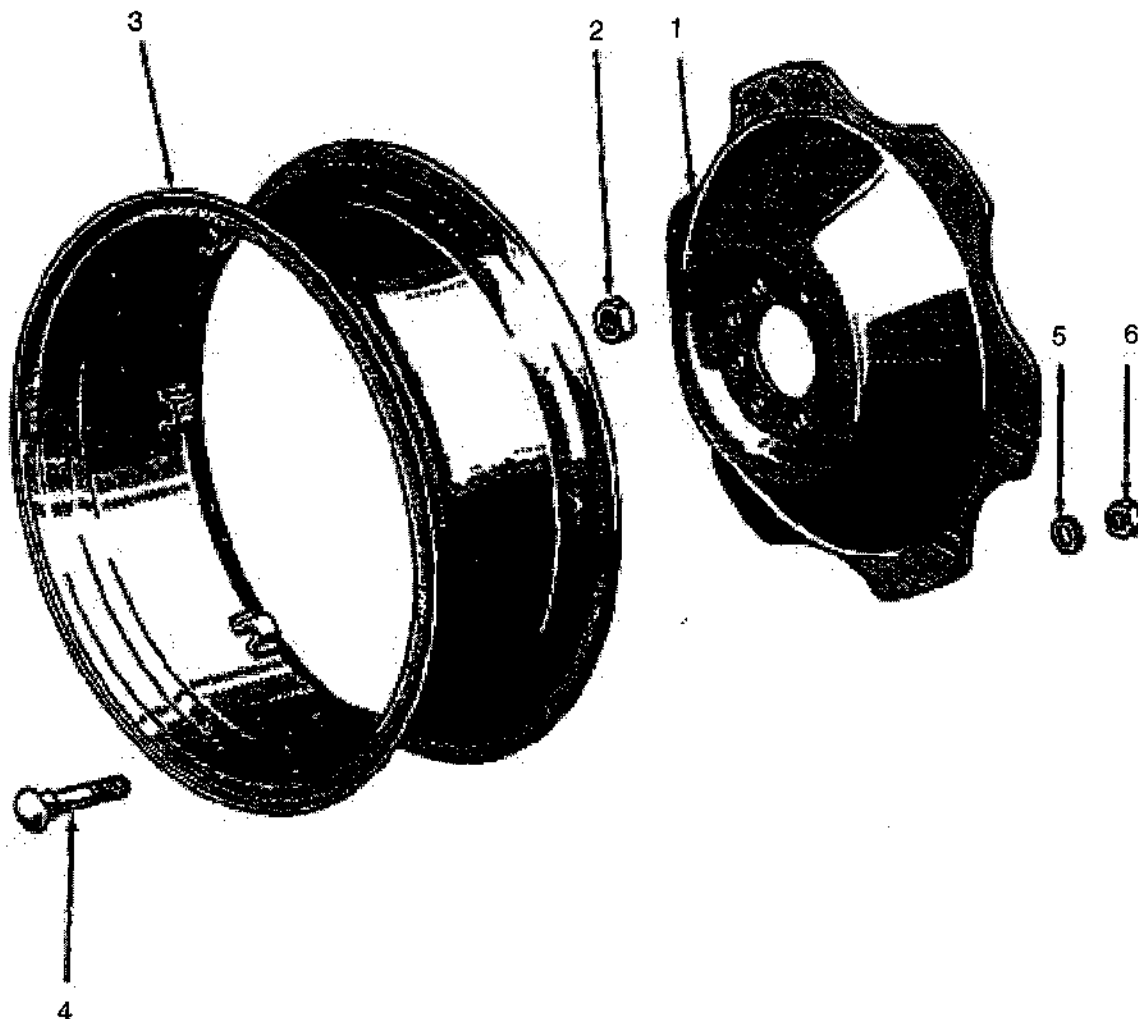

REAR WHEELS

Notes

BRAKE SYSTEM

665 / 665 DTC


ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665DTC
1	ESL13097	Pin (D11)	D10064930	2	2
2	ESL13098	Split Pin (D3.2x32)	D93400240	2	2
3	ESL13099	Tie Bar	D10081710	2	2
4	ESL13100	Brake Mechanism (Includes Items #8-12)	D10064940	2	2
5	ESL13101	Brake Disc	D10064950	8	8
6	ESL13102	Brake Drive Plate	D10064960	4	4
7	ESL13103	Support Flange	D10064970	2	2
8	ESL13686	Bolt	-	4	4
9	ESL13339	Tie Rod	-	4	4
10	ESL13340	Spring	D10103960	4	4
11	ESL13341	Ball	D10103970	10	10
12	ESL13436	Nut	D10098140	4	4
13	ESL13104	Bolt (M12x110)	D81500910	10	10
14	ESL13105	Brake Flange	D10064980	2	2
15	ESL13106	Pin (D12x50)	D10064990	4	4

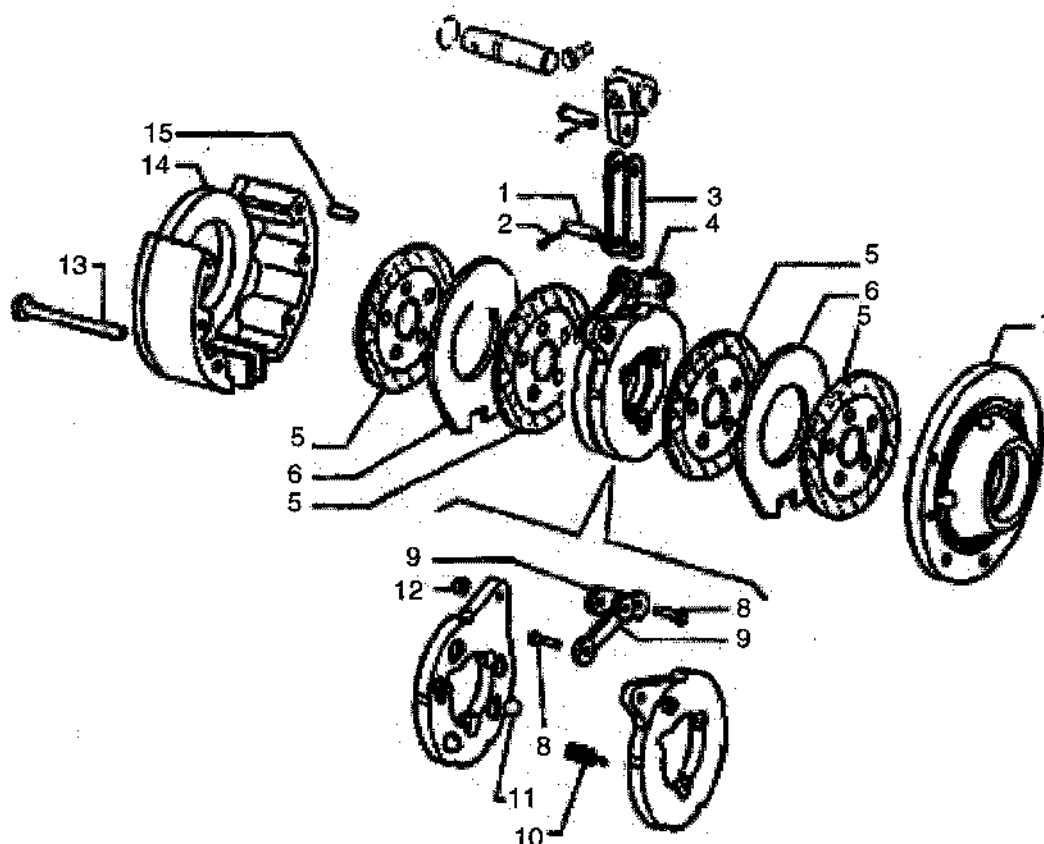


BRAKES

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL13124	Brake Lever	D10065000	2	2
2	ESL12929	Oil Seal	D10063500	2	2
3	ESL13125	Hand Brake Shaft	D10065020	1	1
4	ESL13126	Pin (D.8x36)	D10065030	3	3
5	ESL13127	Hand Brake Lever	D10065040	1	1
6	ESL13128	Brake Lever, LH	D10065050	1	1
7	ESL13129	Brake Shaft	D10065060	2	2
8	ESL13130	Seal Ring	D10065070	2	2
9	ESL13131	Pin (10x45)	D10065090	2	2
10	ESL13132	Pin (D11)	D10065100	2	2
11	ESL13098	Pin (3.2x32)	D93400240	2	2
12	ESL13133	Lever	D10065110	1	1
13	ESL13134	Special Bolt	D10065120	2	2
14	ESL13135	Brake Lever, RH	D10065130	1	1
15	ESL13136	Lever, LH	D10065140	1	1
16	ESL13137	Thrust Washer	D10065150	2	2

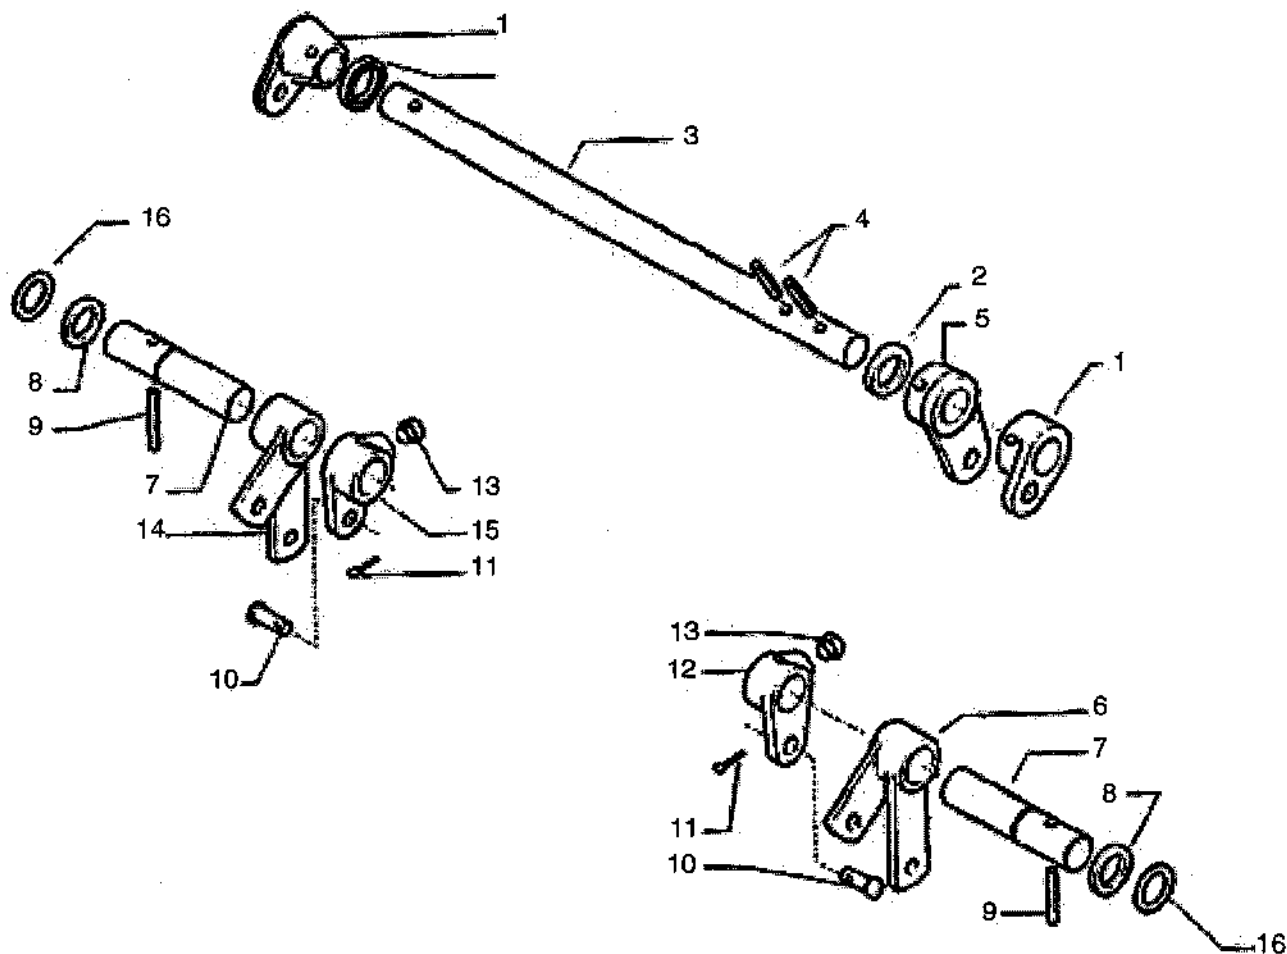
BRAKE RELEASE SYSTEM

665 / 665 DTC

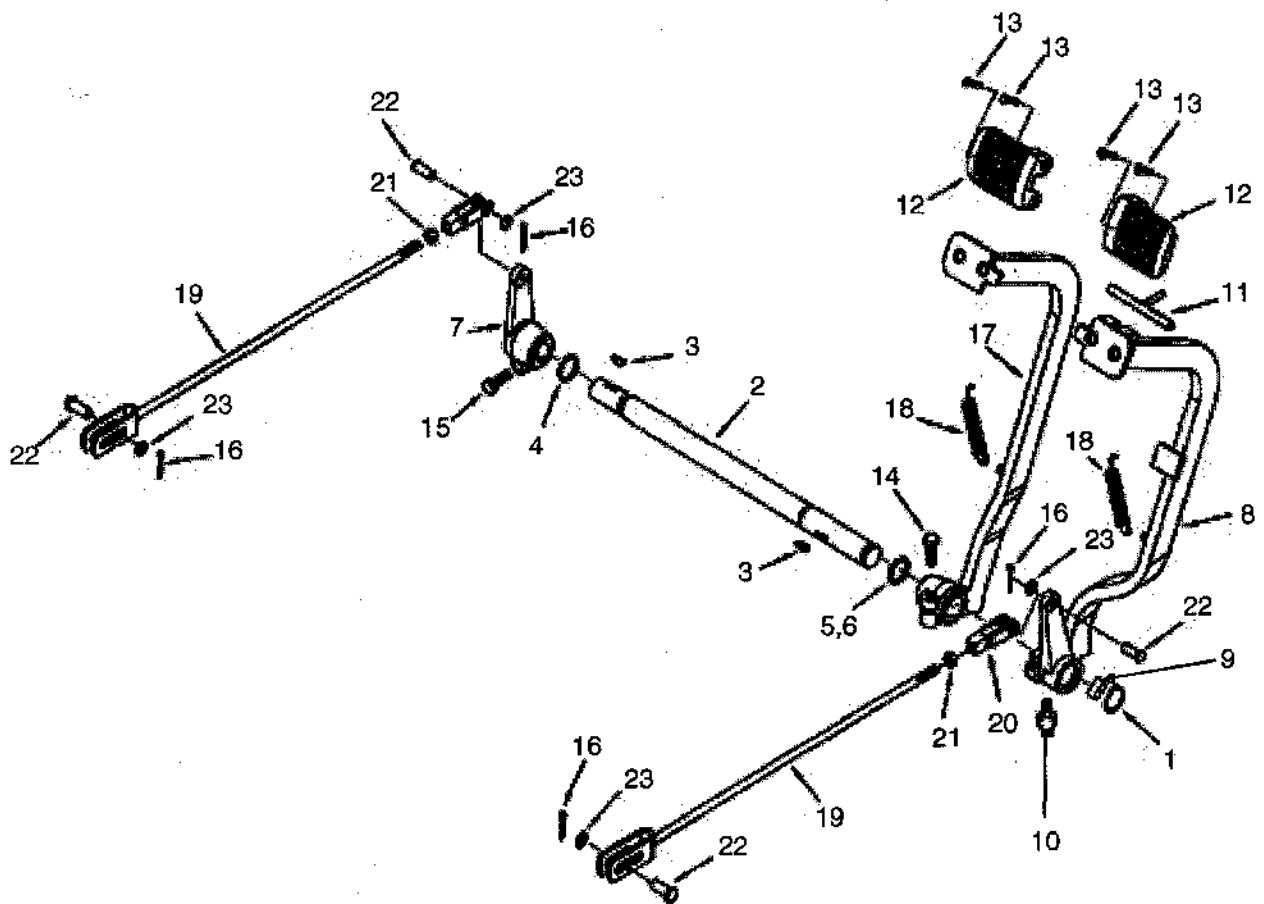

BRAKE PEDALS

9:3

Ⓢ - SERIAL NUMBER BREAK,


↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
1	ESL10983	Lock Ring	D10012470	1	1
2	ESL13107	Shaft Brake Cross	D10039740	2	2
3	ESL13304	Key (1/2x7/8)	-	2	2
4	ESL11700	Washer Brake Cross Shaft	D10012260	3	3
5	ESL13109	O'Ring	D93600120	1	1
6	ESL11238	Seal (1.25IOx0.139W) (NI)	D93600080	3	3
7	ESL13112	Lever, Brake Operating	D10042490		
8	ESL13114	Pedal Assembly Brake, RH	D10039290	1	1
9	ESL13116	Bush, Brake Pedal	D10106420	1	1
10	ESL10868	Grease Nipple (1/4-2B UNF)	D92500050	1	1
11	ESL13117	Latch Rod	-	1	1
12	ESL12798	Pedal	D10042840	2	2
13	N600212S8	Bolt (M8x1.25x35)	-	4	4
14	304743S8	Bolt , Hex (7/16-14x1.38)	-	1	1
15	58655S8	Bolt, Hex (7/16-14x1.50)	-	1	1
16	ESL12805	Pin Cotter	-	4	4
17	ESL13118	Pedal Assembly Brake, LH	D10039300	1	1
18	ESL13342	Spring, Brake Pedal Return	D10012250	2	2
19	ESL13120	Rod & Clevis Assembly, Brake Linkage (Includes Items #20-21)	-	2	2
20	97013S8	Clevis	-	2	2
21	33925S8	Nut (3/8-24)	-	2	2
22	ESL13123	Pin, Clevis	-	4	4
23	N630070S8	Washer	-	4	4

BRAKE PEDALS

665 / 665 DTC

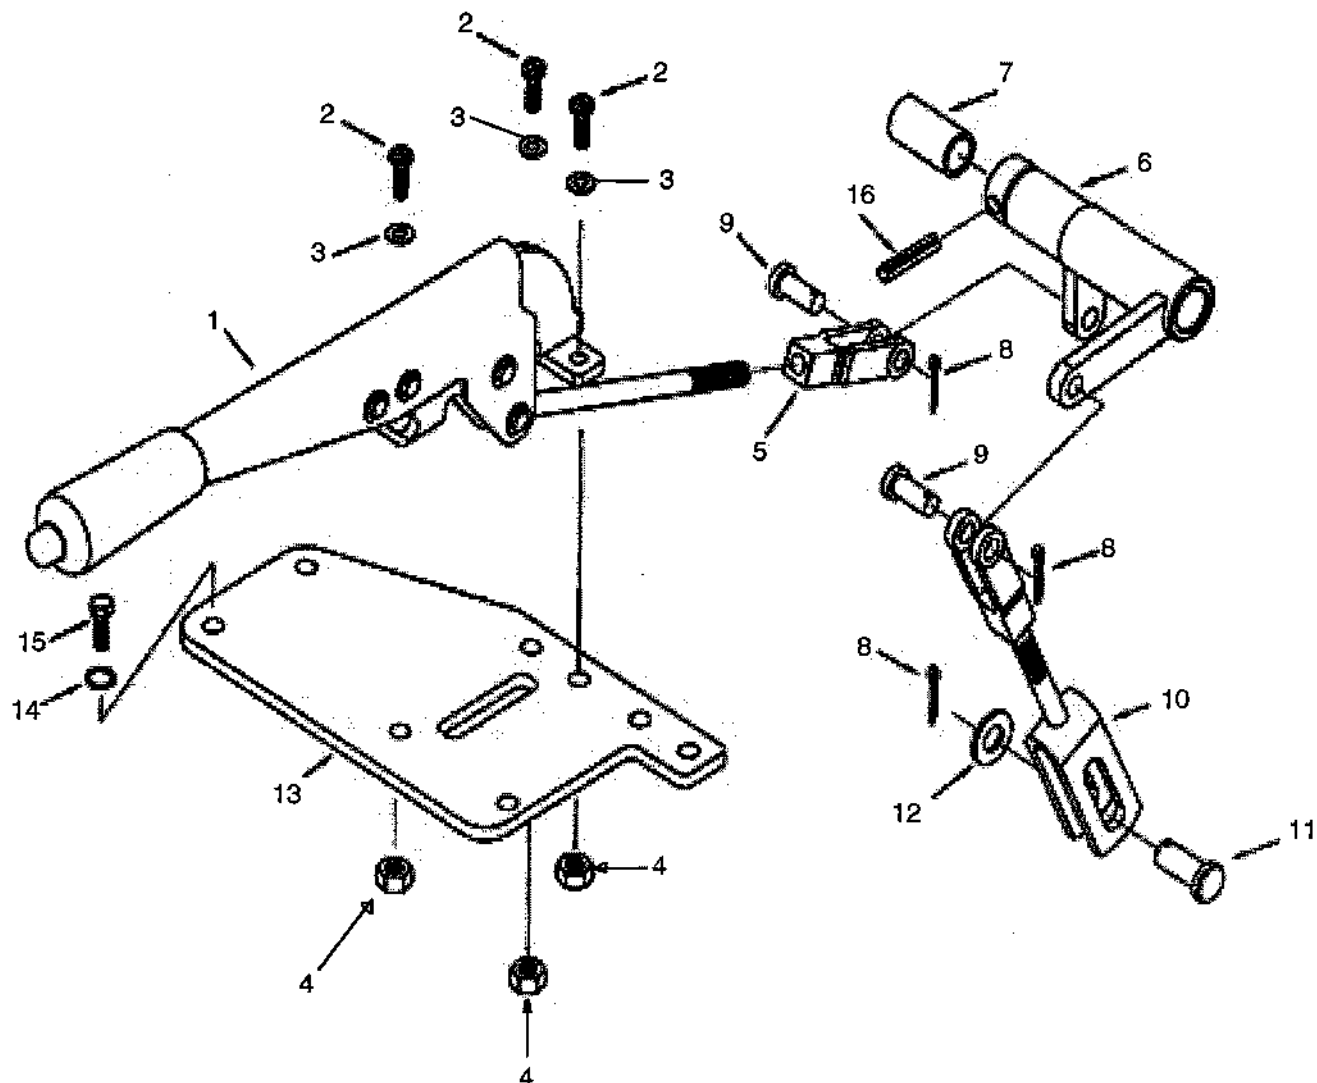

HAND BRAKE

665 / 665 DTC


ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13138	Lever Assembly, Hand Brake	D10042050	1	1
2	ESL12724	Bolt (M6)	D81500490	3	3
3	N630067S8	Washer (M6)	-	3	3
4	N620012S8	Nut (M6)	-	3	3
5	97013S8	Clevis	-	1	1
6	ESL13140	Extention Shaft, Parking Brake	-	1	1
7	ESL13437	Bush	D10042980	1	1
8	72017S8	Pin, Cotter	-	3	3
9	73979S8	Pin, Clevis	-	2	2
10	ESL13141	Rod & Clevis Assembly	D10042820	2	2
11	ESL13123	Pin, Clevis	-	1	1
12	N630070S8	Washer, Plain	-	1	1
13	ESL13142	Bracket, Lever Mounting Parking Brake	D10042210	1	1
14	N630173S8	Washer (M8)	-	2	2
15	N605531S8	Bolt (M8x1.25x20)	-	2	2
16	ESL13143	Pin, Spring	-	1	1

HAND BRAKE

Notes

HYDRAULIC SYSTEM

665 / 665 DTC

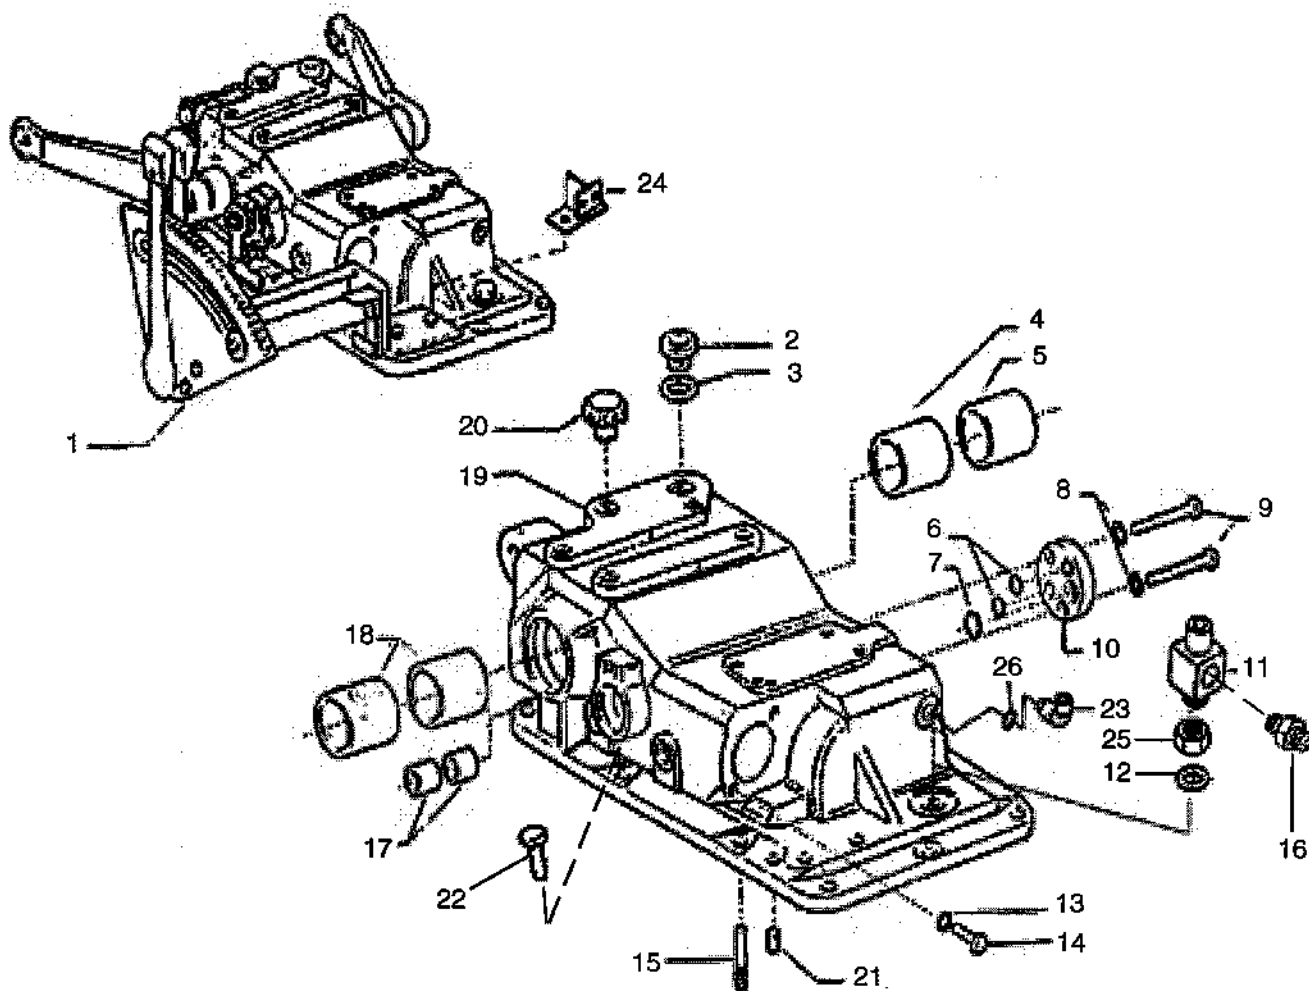

*Only for
Silicon
bottom*

HYDRAULIC BODY

10:1

Ⓢ - SERIAL NUMBER BREAK,


↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13144	Hydraulic Lift Assembly	D10039490	1	1
2	ESL13145	Plug (1/2")	D10062150	1	1
3	ESL13146	Washer	D10062220	1	1
4	ESL13147	Bush	D10061580	1	1
5	ESL13148	Bush	D10061530	1	1
6		O'Ring (NSS)	-	2	2
7		O'Ring (NSS)	-	1	1
8	ESL13149	Spring Washer	D10061350	2	2
9	ESL13150	Bolt (M10x35)	-	2	2
10	ESL13151	Flange	D10098050	1	1
11	ESL12747	Adapter Return Assembly	D10039720	1	1
12	ESL13153	Copper Washer	D10061420	1	1
13	ESL12829	Spring Washer	-	2	2
14	ESL13154	Bolt (M8-35)	D81501080	2	2
15	ESL13155	Stud (M14x61)	D10098080	6	6
16	ESL11257	Adapter	D10021160	1	1
17	ESL13157	Bush	D10062160	2	2
18	ESL13158	Bush	D10061510	2	2
19		Lift Body Assembly (NSS)	-	1	1
20	ESL13159	Plug, Vent	D10081720	1	1
21	ESL13160	Dowel Pin	D10064240	2	2
22	ESL13161	Bolt (M12x30)	D81500920		
23	ESL13643	Elbow	D10043150	1	1
24	ESL13163	Bracket Assembly, Lever Guide	-	1	1
25	ESL13164	Lock Nut	-	1	1
26	ESL10021	O'Ring	D93600070	1	1
27	ESL13156	Seal Kit (Consists of Items #6-7)	D10098110	1	1

HYDRAULIC BODY

665 / 665 DTC

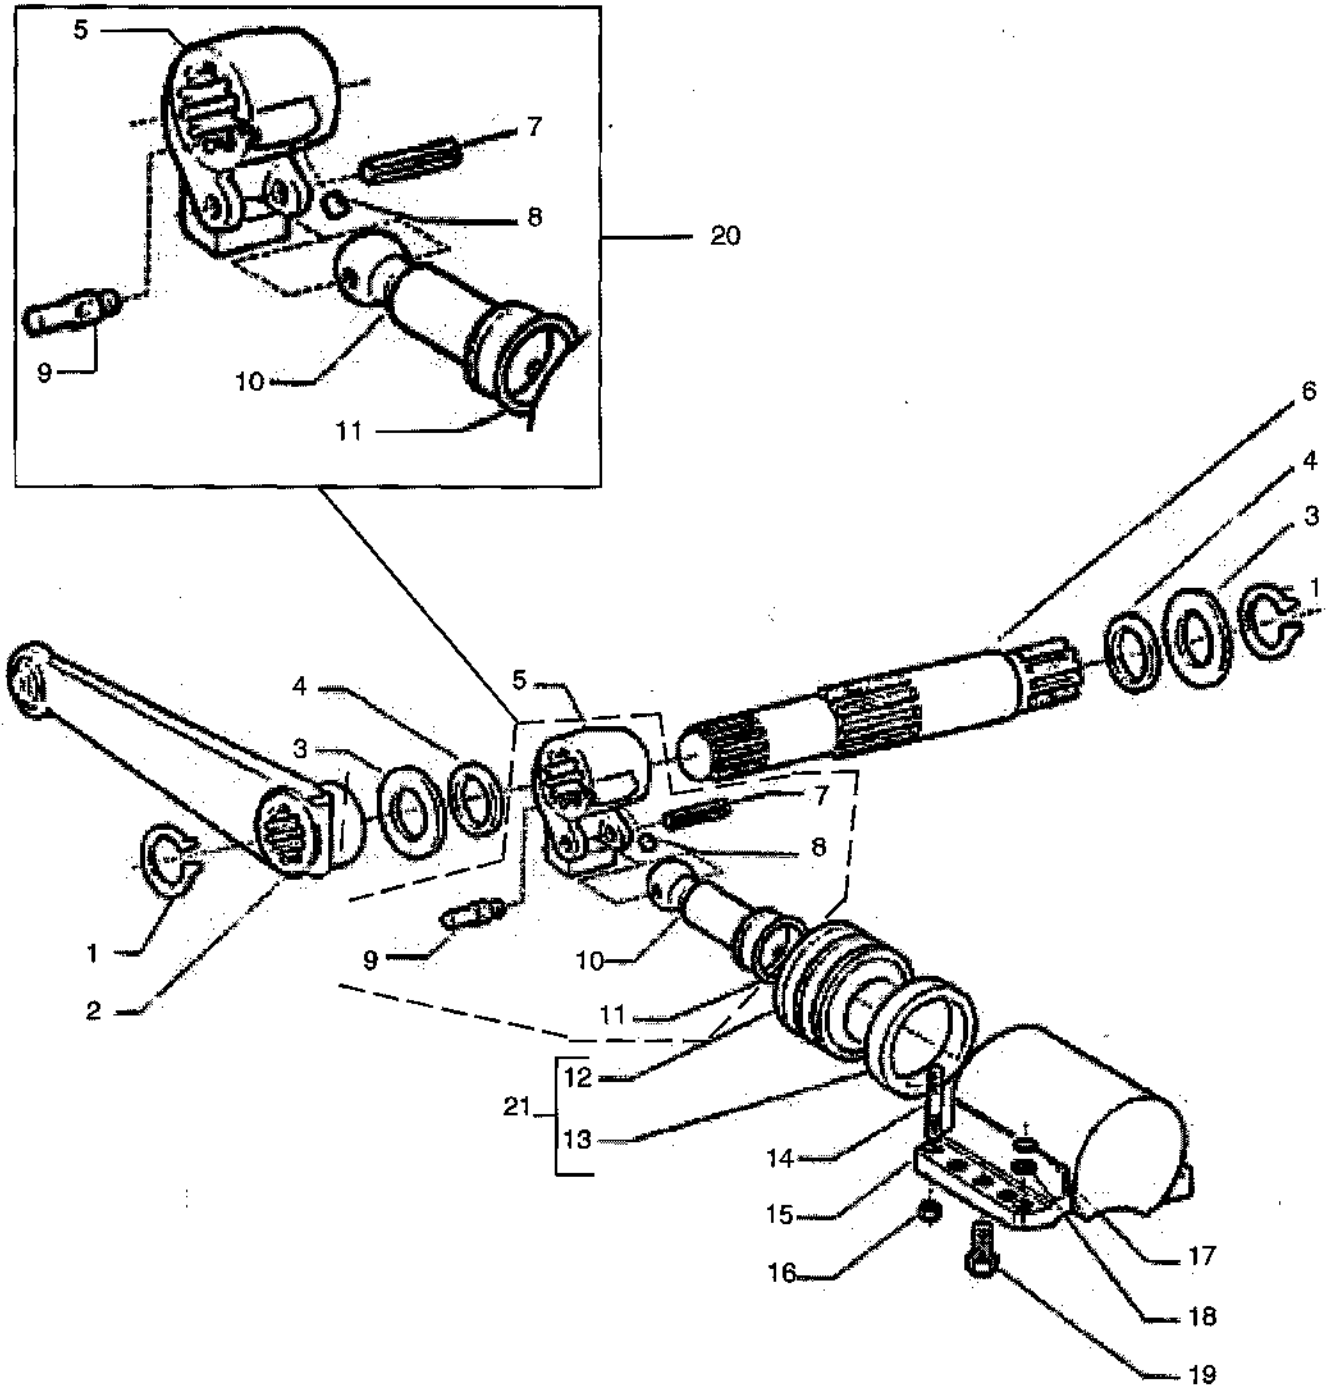

RAM CYLINDER

10:3


Ⓢ - SERIAL NUMBER BREAK,

⚡ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
1	ESL13166	Snap Ring (D55)	D90000350	2	2
2	ESL13167	Lifting Arm	D10062510	2	2
3	ESL13168	Spacer	D10067440	2	2
4	ESL13169	Oil Seal	D10061850	2	2
5	-	Lever (NSS)	-	1	1
6	ESL13170	Lifting Shaft	D10062060	1	1
7	ESL13171	Pin (D10x65)	D93400260	1	1
8	ESL13172	Grub Screw (M10x20)	D10062180	1	1
9	ESL13173	Pin	D10062050	1	1
10	-	Connecting Rod (NSS)	-	1	1
11	ESL13174	O'Ring	D10061520	1	1
12		Piston (NSS)	-	1	1
13	ESL13175	Piston Packing	D10062170	1	1
14	ESL13155	Stud (M14x61)	D10098080	6	6
15	ESL13176	Cylinder	D10061990	1	1
16	ESL13177	Nut (M14)	D83500470	6	6
17	ESL13178	O'Ring	D10061540	2	2
18	ESL13179	Ring	D10105290	2	2
19	ESL13180	Bolt (M14x35)	D81500960	2	2
20	ESL13181	Kit Connecting Rod & Lever (Consists of Items #5,7-11)	D10098120	1	1
21	ESL13182	Piston & Ring Assembly (Consists of Items #12-13)	D10081730	1	1

RAM CYLINDER

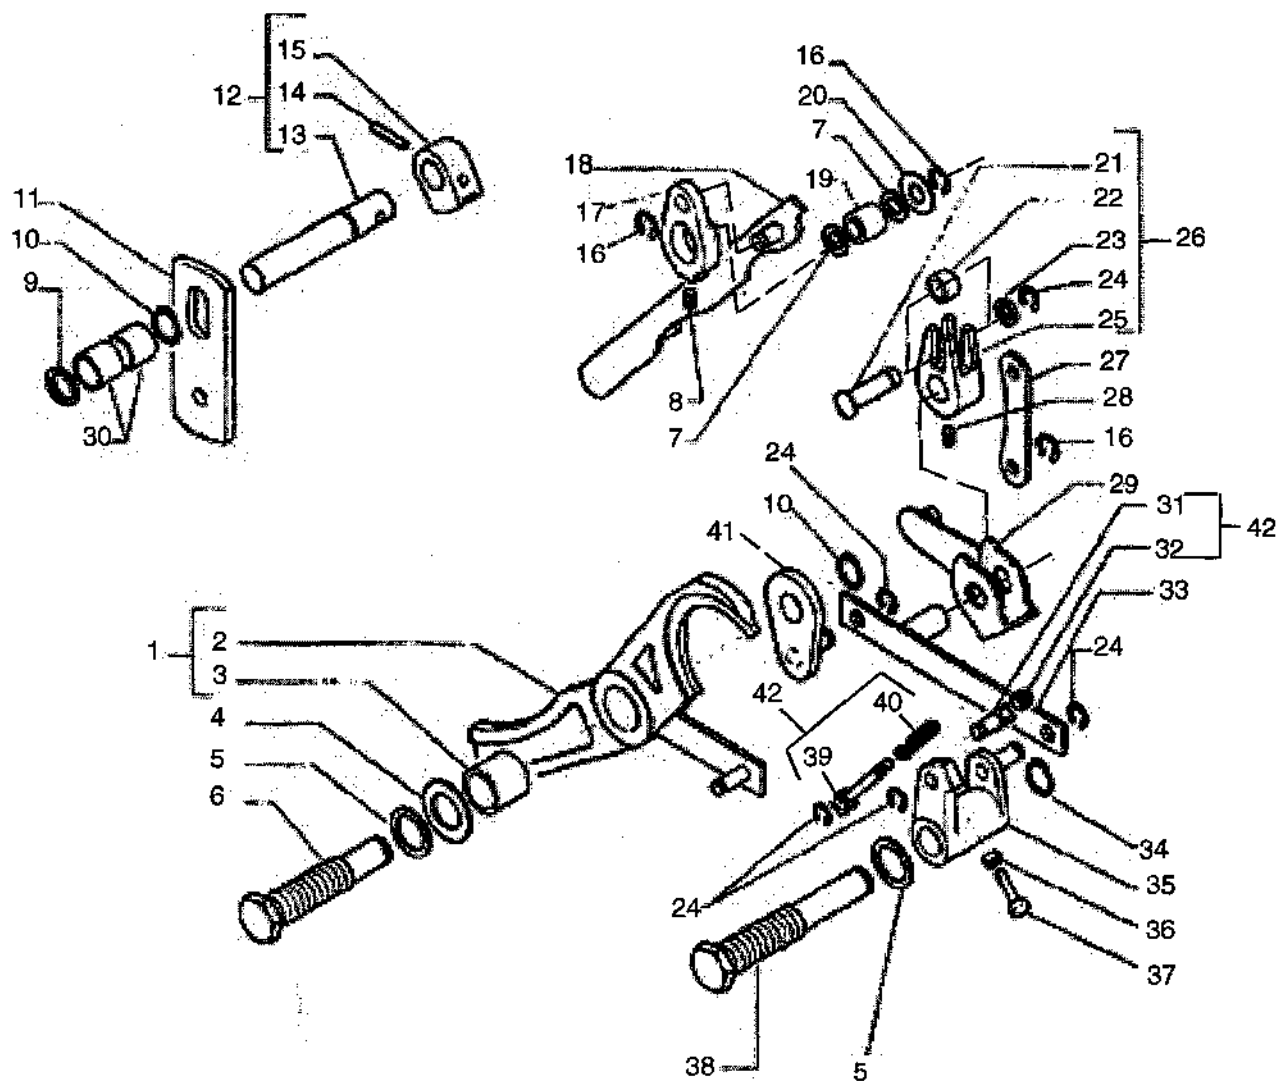


INSIDE LIFTING CONTROL

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL13183	Equalizer Assembly (Includes Items #2-3)	D10099090	1	1
2	-	Equalizer (NSS)	D10105030	1	1
3	ESL13352	Bearing	D10099150	1	1
4	ESL13184	Washer	D10061420	1	1
5	ESL13153	Washer	D10067430	2	2
6	ESL13185	Support Pin	D10099140	1	1
7	ESL13186	Washer	D10067350	2	2
8	ESL13187	Grub, Screw (M8x9)	D10067330	1	1
9	ESL13188	Sealing Ring	D90000330	1	1
10	ESL13189	Snap Ring (D16)	D10067340	2	2
11	ESL13190	Plate	D10099120	1	1
12	ESL13191	Cam Assembly (Consists of Items #13-15)	-	1	1
13	-	Shaft (NSS)	D10063900	1	1
14	ESL13192	Pin (D6x35)	-	1	1
15	-	Cam (NSS)	D90000340	1	1
16	ESL12874	Snap Ring	D10067360	3	3
17	ESL13193	Cam	D10099110	1	1
18	ESL13199	Plate Assembly (Includes Items #7,16,19-20)	-	1	1
19	-	Roller (NSS)	D10067310	1	1
20	ESL13687	Washer	-	1	1
21	-	Pin (NSS)	-	1	1
22	-	Roller (NSS)	D10067320	1	1
23	ESL13688	Washer	D10099080	1	1
24	ESL13194	Snap Ring	-	5	5
25	-	Connecting Rod (NSS)	D10099130	1	1
26	ESL13195	Connecting Rod Assembly (Includes Items #21-25)	D10067480	1	1
27	ESL13196	Link Rod	D10067420	1	1
28	ESL13197	Grub Screw (M8x12)	D10067470	1	1
29	ESL13198	Cam	D10062160	1	1
30	ESL13157	Bush	-	2	2
31	-	Shaft (NSS)	D10067510	1	1
32	N620012S8	Nut (M6)	D90000180	1	1
33	ESL13200	Plate	D10067520	1	1
34	ESL12808	Snap Ring	-	1	1
35	ESL13201	Lever	-	1	1

INSIDE LIFTING CONTROL

665 / 665 DTC

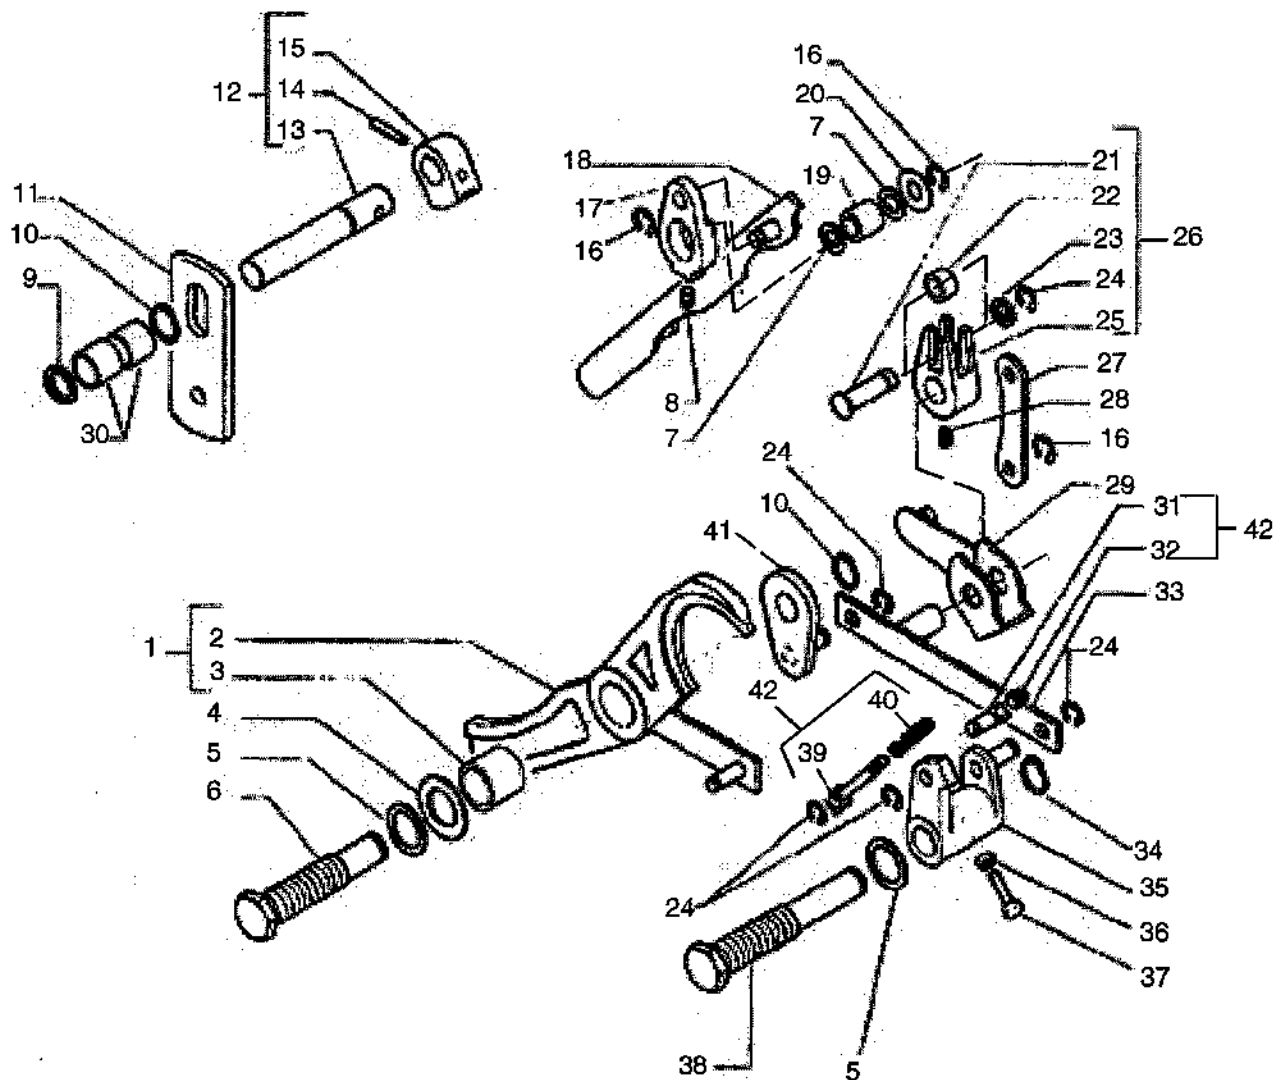

INTERNAL LIFT CONTROL

10:7

Ⓢ - SERIAL NUMBER BREAK, ↖ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
36	N620013S8	Nut (M8)	-	1	1
37	ESL12865	Bolt (M8x25)	-	1	1
38	ESL13202	Support Pin	D10067520	1	1
39	-	Pin (NSS)	-	1	1
40	-	Spring (NSS)	-	1	1
41	ESL13203	Shackle	D10067550	1	1
42	ESL13204	Pin & Spring Assembly (Includes of Items #31-32,39-40)	D10105370	1	1

INTERNAL LIFT CONTROL


S - SERIAL NUMBER BREAK ,



- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

10:8

665 / 665 DTC

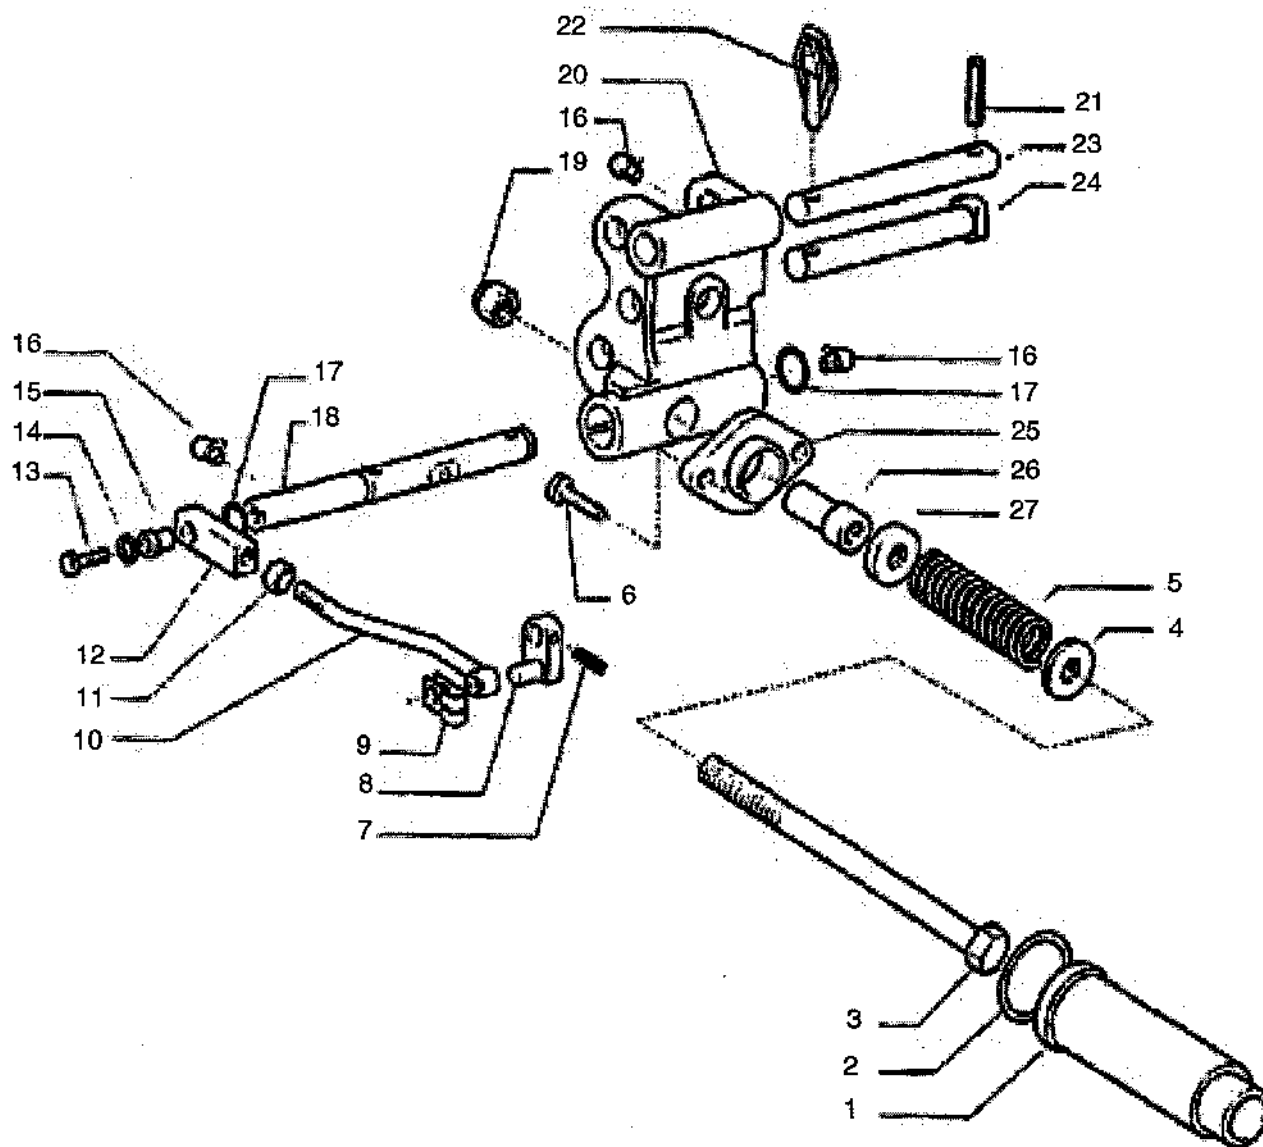

DRAFT SENSOR

10:9


Ⓢ - SERIAL NUMBER BREAK ,

↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13205	Spring Cover	D10061640	1	1
2	ESL13206	O'Ring	D10061700	1	1
3	ESL13207	Rod	D10062190	1	1
4	ESL13208	Washer	D10061710	1	1
5	ESL13209	Spring	D10062480	1	1
6	N605559S8	Bolt (M12x30)	-	2	2
7	ESL13059	Pin (D5x25)	D10064610	1	1
8	ESL13210	Lever	D10062430	1	1
9	ESL13211	Lock Washer	D10061790	1	1
10	ESL13212	Rod	D10062070	1	1
11	34053S8	Nut (M10)	-	1	1
12	ESL13213	Plate	D10061800	1	1
13	ESL13154	Bolt (M8x35)	D81501080	1	1
14	N630173S8	Spring Washer	-	1	1
15	ESL13214	Bush	D10061840	1	1
16	ESL13215	Grease Nipple (M10x1)	D92500060	3	3
17	ESL13216	O'Ring	D10061460	2	2
18	ESL13207	Shaft	D10062190	1	1
19	ESL13177	Nut (M12)	D83500470	1	1
20	ESL13217	Bracket -3rd Point	D10061500	1	1
21	ESL13192	Pin (D6x35)	D10063900	2	2
22	ESL13218	Lock Pin (D10)	D10098130	2	2
23	ESL13219	Pin - 3rd Point	D10062410	1	1
24	ESL13220	Pin - 3rd Point	D10098090	1	1
25	ESL13221	Flange	D10061730	1	1
26	ESL13222	Bush	D10062420	1	1
27	ESL13223	Washer	D10061740	1	1

DRAFT SENSOR

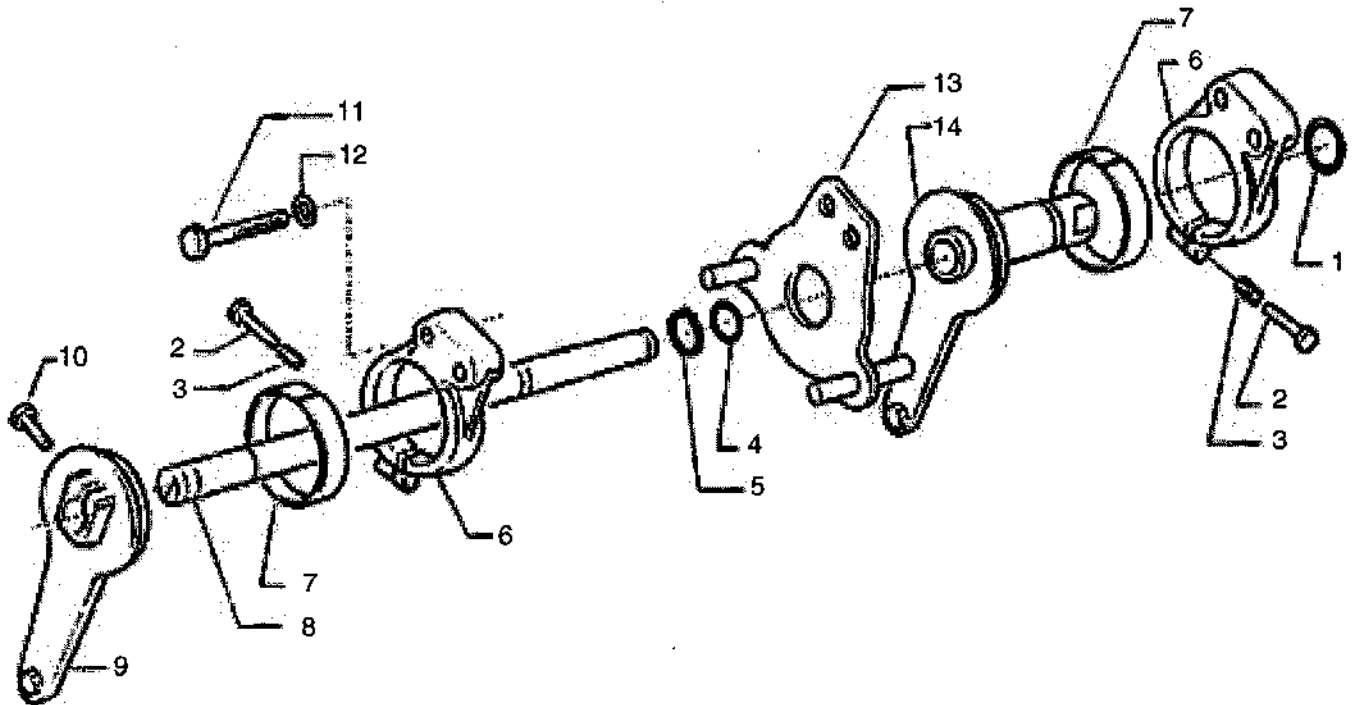

OUTER LIFTING CONTROL

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
1	ESL13224	O'Ring	D10061450	1	1
2	ESL13225	Bolt (M6x40)	D81501010	2	2
3	ESL13226	Spring	D10061600	2	2
4	ESL13178	O'Ring	D10061540	1	1
5	ESL12874	Snap Ring	D93000340	1	1
6	ESL13228	Support	D10061630	2	2
7	ESL13229	Clutch Ring	D10061590	2	2
8	ESL13230	Position Drive Shaft	D10062110	1	1
9	ESL13231	Lever	D10062120	1	1
10	ESL13232	Bolt (M10x30)	-	1	1
11	ESL13233	Bolt (M8x55)	D81501100	2	2
12	N630173S8	Spring Washer	-	2	2
13	ESL13236	Flange	D10061490	1	1
14	ESL13235	Stress Drive Shaft	D10062390	1	1


OUTER LIFTING CONTROL

S - SERIAL NUMBER BREAK ,



- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

10:12

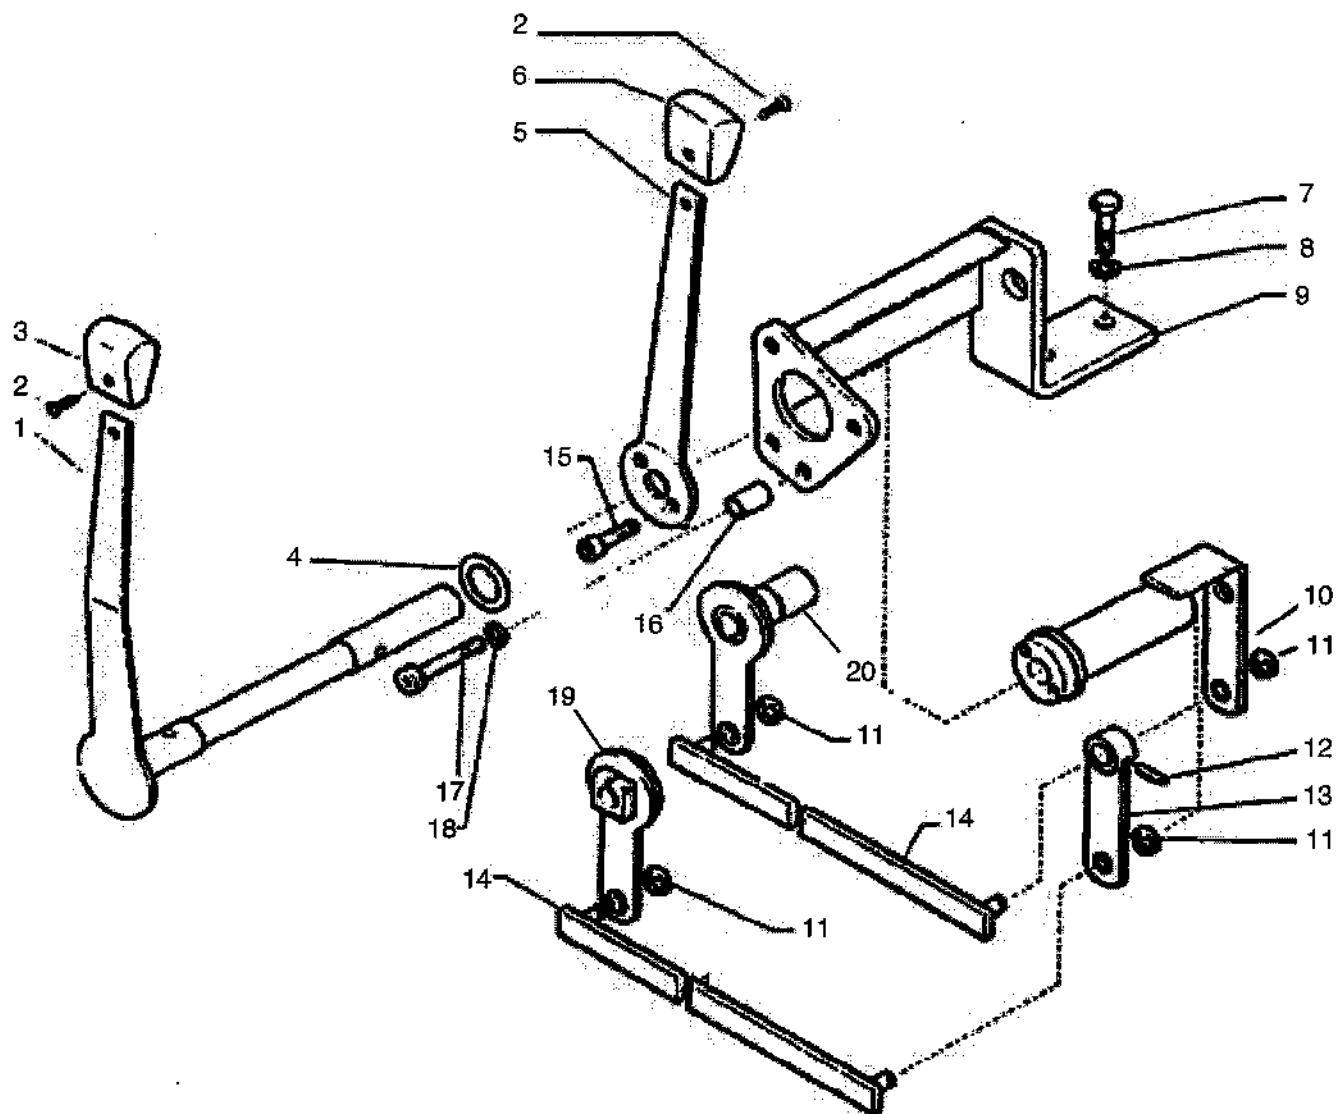


OUTER LIFTING CONTROL LEVERS

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
1	ESL13236	Drive Lever	D10061490	1	1
2	ESL13237	Screw (M3.5x13)	D82500380	2	2
3	ESL13238	Knob (Yellow)	-	1	1
4	ESL13239	Washer	-	1	1
5	ESL13240	Drive Lever	D10098040	1	1
6	ESL13241	Knob (Red)	-	1	1
7	ESL12672	Bolt (M10x25)	-	2	2
8	N630174S8	Spring Washer	-	2	2
9	ESL13242	Support	D10062490	1	1
10	ESL13243	Drive Shaft	D10062130	1	1
11	ESL13244	Snap Ring	D10081740	4	4
12	ESL12880	Pin (D.6x25)	D93400250	1	1
13	ESL13245	Lever	D10062140	1	1
14	ESL13246	Rod	D10062500	2	2
15	ESL12073	Bolt (M6x16)	D81500360	2	2
16	ESL13247	Spacer	D10098060	4	4
17	N600212S8	Bolt (M8x35)	-	4	4
18	N630173S8	Spring Washer	-	4	4
19	ESL13231	Lever	D10062120	1	1
20	ESL13235	Stress Drive Shaft	D10062390	1	1

OUTER LIFTING CONTROL LEVERS

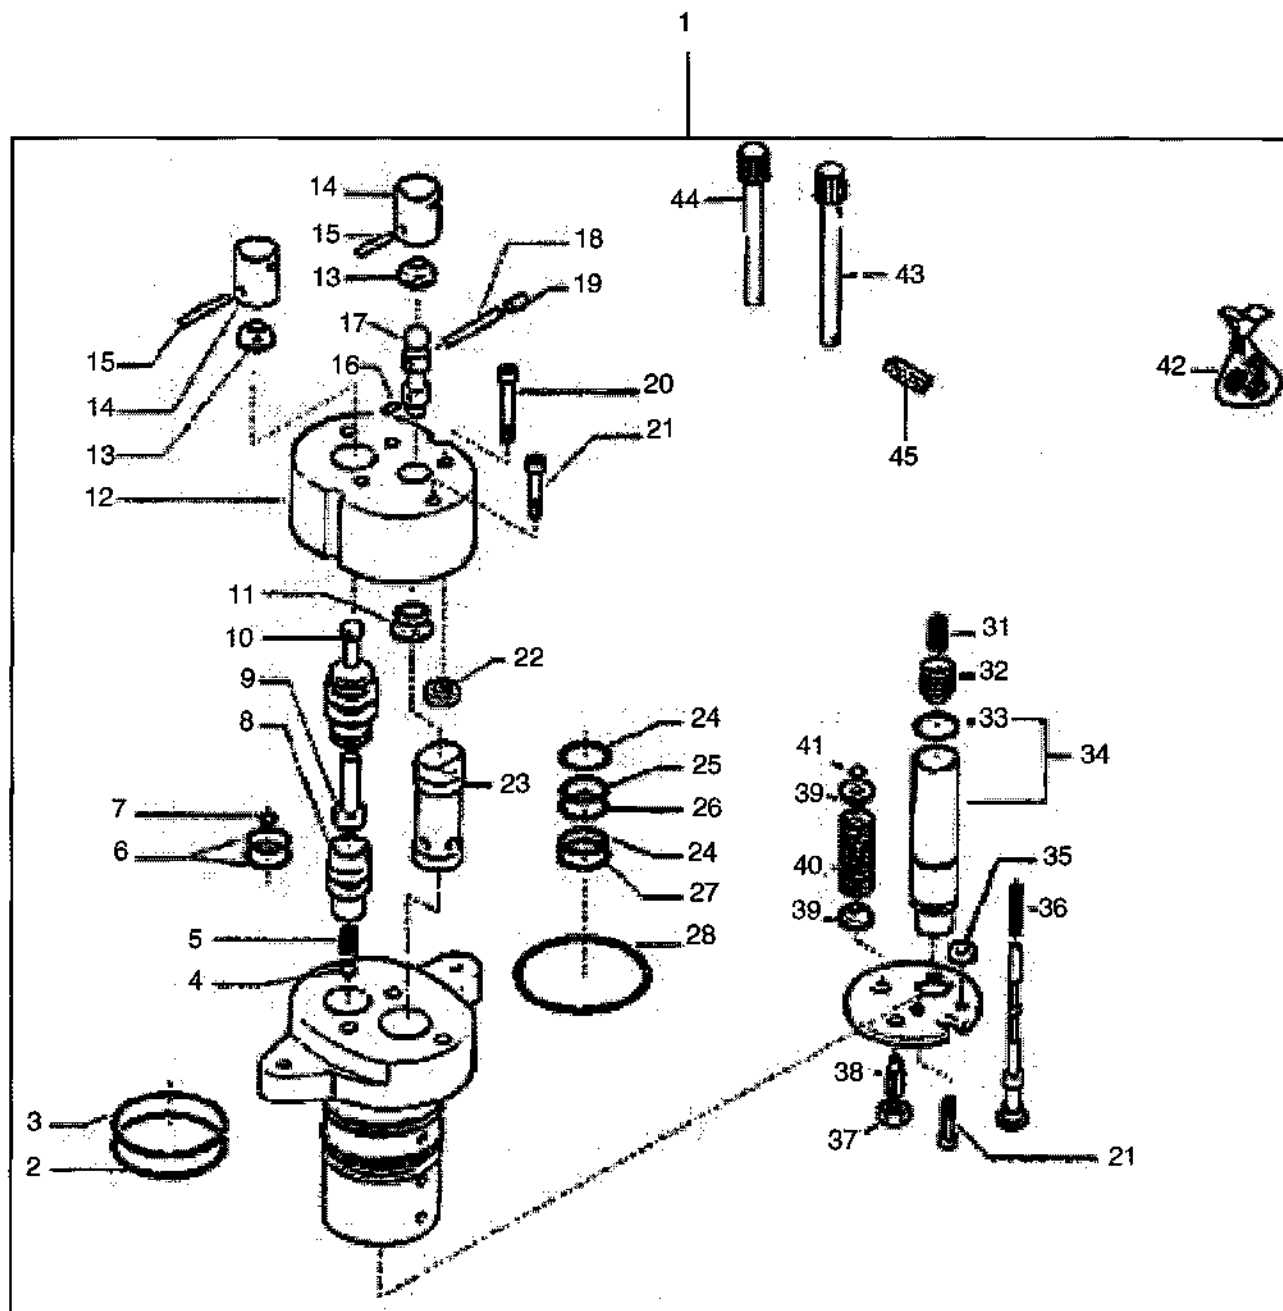


*NOTE: Item No. 29 and Item No. 30 do not show as such but the description on page 129 shows what these items consists of.

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL13248	Distributor, Assembly	D10068010	1	1
2	ESL13363	Ring	-	1	1
3	ESL13364	O'Ring	-	2	2
4	ESL13365	Ball (11/32)	-	1	1
5	ESL13366	Spring	-	1	1
6	-	O'Ring (NSS)	-	2	2
7	-	O'Ring (NSS)	-	1	1
8	-	Seal, Block (NSS)	-	1	1
9	-	Piston (NSS)	-	1	1
10	-	Push Rod (NSS)	-	1	1
11	-	Ring Nut (NSS)	-	1	1
12	-	Cover (NSS)	-	1	1
13	-	Boot (NSS)	-	2	2
14	ESL13374	Joint	-	2	2
15	ESL13375	Pin	-	2	2
16	-	Pin (NSS)	-	2	2
17	-	Push Rod (NSS)	-	1	1
18	-	Pin (NSS)	-	1	1
19	-	Cap (NSS)	-	1	1
20	ESL12100	Bolt (M6x16)	-	2	2
21	ESL13380	Bolt (M6x25)	-	5	5
22	-	Bush (NSS)	-	2	2
23	-	Valve (NSS)	-	1	1
24	-	O'Ring (NSS)	-	2	2
25	-	Ring (NSS)	-	1	1
26	-	O'Ring (NSS)	-	1	1
27	-	Ring (NSS)	-	1	1
28	-	O'Ring (NSS)	-	1	1
29	ESL13249	Repair Kit, Sensitivity Regulation (Includes Items #11,13,16-17)	D10005850	1	1
30	ESL13250	Repair Kit, Block Seat Assembly (Includes Items#6-8)	D10005860	1	1
31	-	Spring (NSS)	-	1	1
32	-	Differential Valve (NSS)	-	1	1
33	-	O'Ring (NSS)	-	1	1
34	ESL13391	Differential Valve Seal Assembly (NSS)	-	1	1
35	-	Seat (NSS)	-	2	2
36	-	Spring (NSS)	-	1	1
37	ESL13394	Nut (M8)	-	2	2
38	ESL13395	Grub, Screw (M8x16)	-	2	2

MAIN DISTRIBUTION VALVE

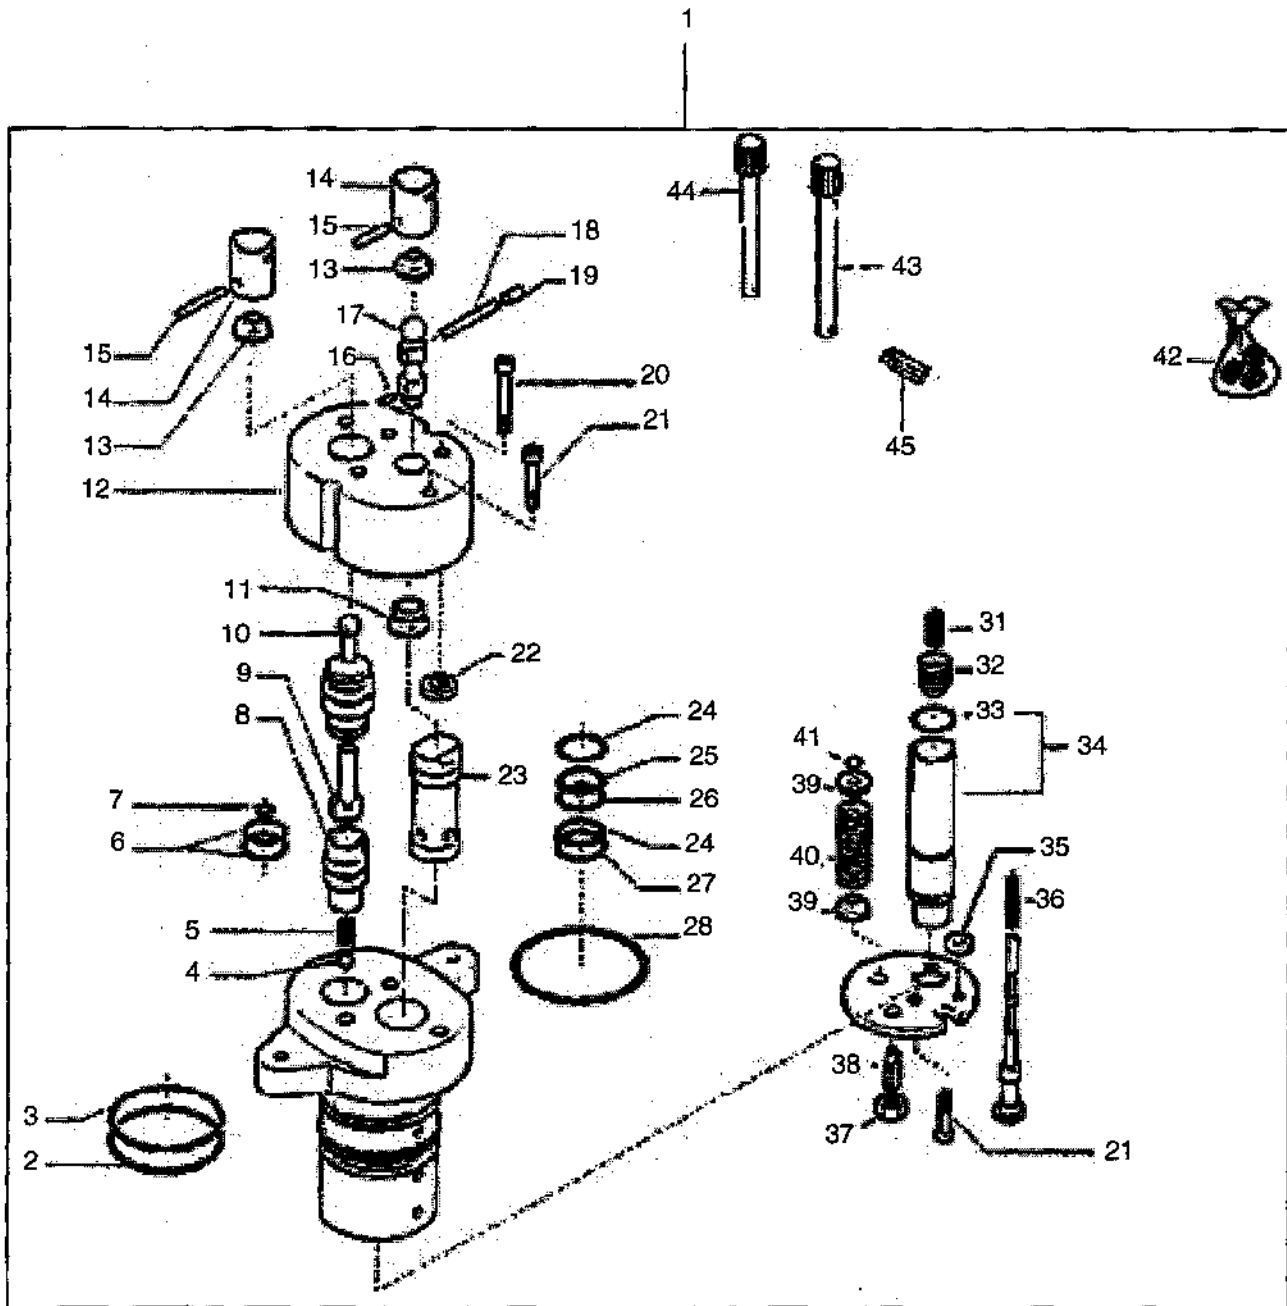

*NOTE: Item No. 29 and Item No. 30 do not show as such but the description on page 129 shows what these items consists of.

MAIN DISTRIBUTION VALVE

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
39	-	Spring Guide (NSS)	-	4	4
40	-	Spring (NSS)	-	2	2
41	-	Ball (5/16) (NSS)	-	2	2
42	ESL13251	Oil Seal Kit (Includes Items #24-28,33,35-36)	D10098070	1	1
43	ESL13252	Lever Assembly, Flow Control Valve	-	1	1
44	ESL13401	Lever Assembly, Flow Control Valve	-	1	1
45	ESL13402	Roll Pin	-	2	2

MAIN DISTRIBUTION VALVE


S - SERIAL NUMBER BREAK ,



- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

10:18

665 / 665 DTC

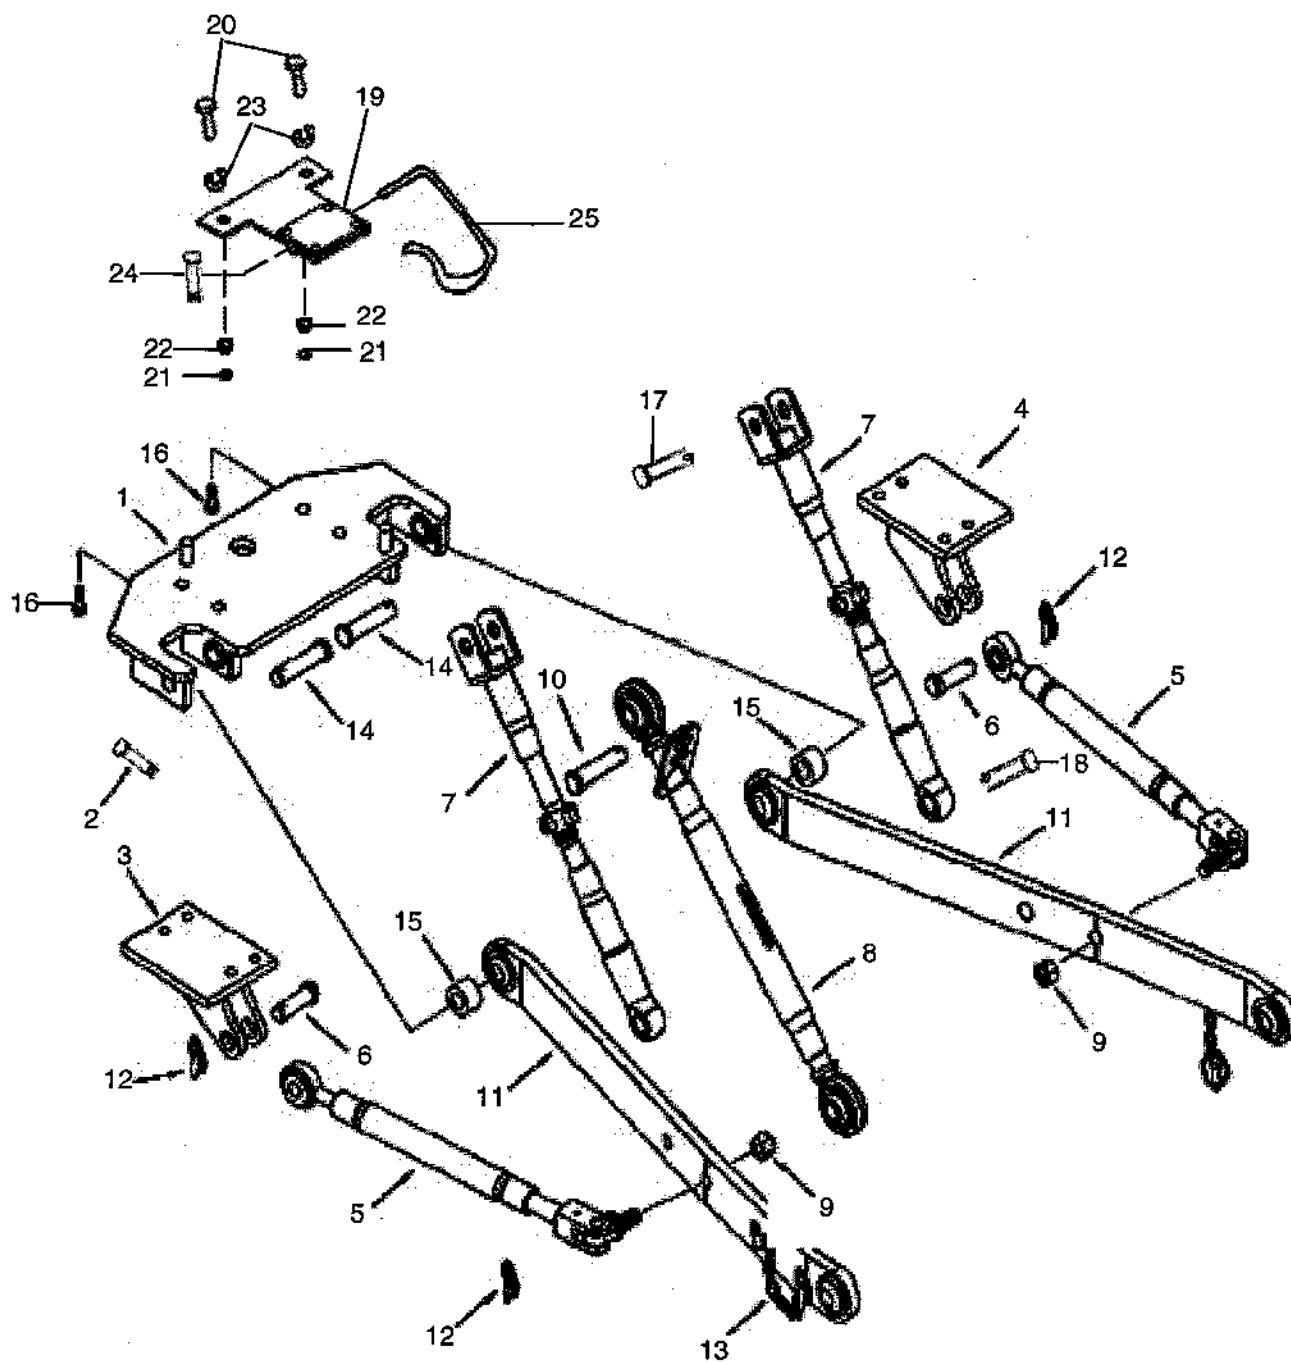

HYDRAULIC LIFT LINKAGES

10:19

Ⓢ - SERIAL NUMBER BREAK ,




- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13254	Support, Lower Link Mounting	-	1	1
2	ESL12778	Roll Pin	D87000130	2	2
3	ESL13255	Bracket, Stay Bar, LH	D10039340	1	1
4	ESL13256	Bracket, Stay Bar, RH		1	1
5	ESL13257	Stay Bar Assembly	D10048380	2	2
6	ESL13258	Pin	D10043010	2	2
7	ESL13259	Lift Rod Assembly	D10048370	2	2
8	ESL13260	Link Assembly, Upper Lift	-	1	1
9	ESL13731	Nut	D83000290	2	2
10	ESL13262	Pin, Upper Lift	D10043230	2	2
11	ESL13263	Lower Link	-	2	2
12	ESL13264	Linch Pin	D10042600	6	6
13	ESL13265	Chain & Clip Assembly	D10043220	4	4
14	ESL13266	Pin, Fulcrum	-	2	2
15	ESL13267	Spacer	-	2	2
16	ESL13269	Screw, Self Locking(M16)	-	4	4
17	ESL14186	Pin, Lift Rod, Upper	-	2	2
18	ESL14187	Pin, Lift Rod, Lower	-	2	2
19	ESL14188	Bracket, Top Link	D10047760	1	1
20	304648S8	Bolt, Hex Head (5/16-18x3/4)	-	4	4
21	33797S8	Nut, Hex (5/16-18)	-	4	4
22	34806S8	Washer, Lock (5/16)	-	4	4
23	44720S8	Washer, Flat (1/4)	-	4	4
24	72004S8	Pin, Cotter (3/32x1/2)	-	1	1
25	903560	Hook, Center Link	-	1	1

665 / 665 DTC

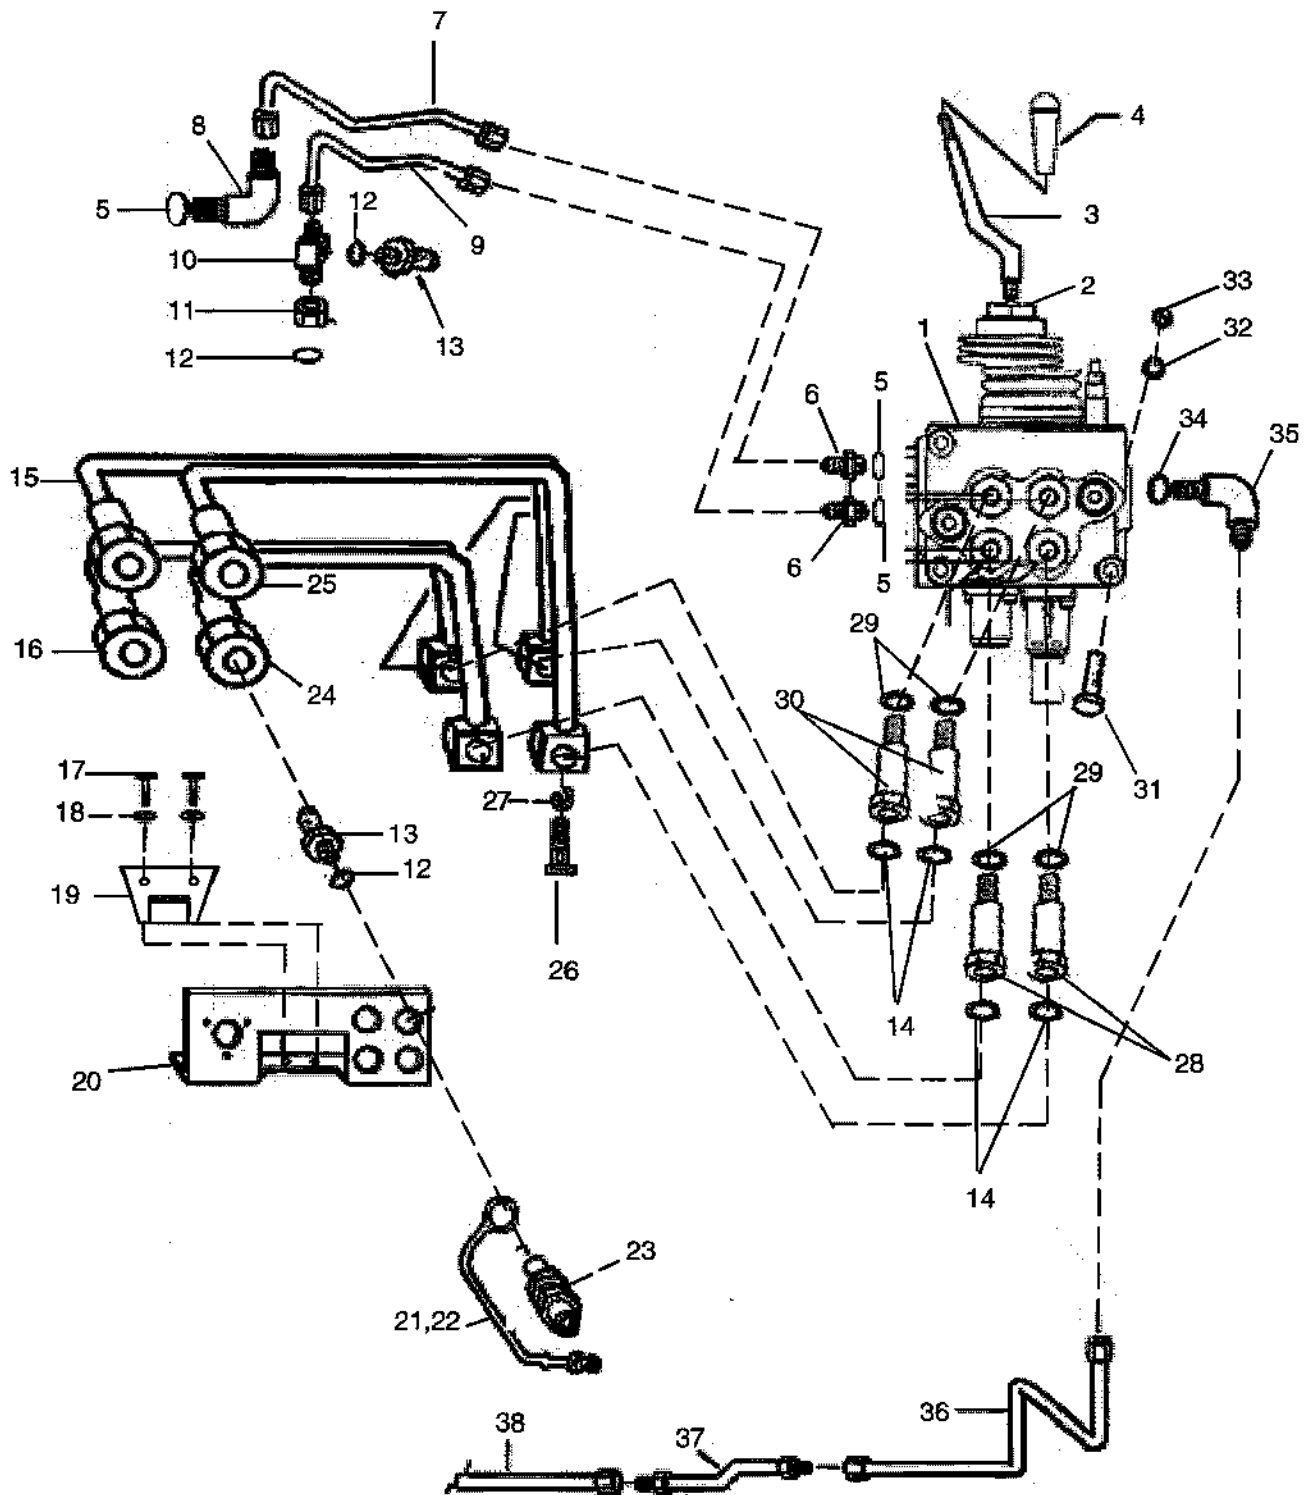

DOUBLE ACTING SPOOL VALVE

10:21


Ⓢ - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL13644	Valve Assembly, Hydraulic Control	D10044310	1	1
2	ESL13645	Nut, Hex (M12x1.75)	-	1	1
3	ESL13646	Lever	-	1	1
4	ESL12687	Knob	D10042450	1	1
5	ESL10008	'O'Ring	D93600190	3	3
6	ESL13648	Adapter	D10044040	2	2
7	ESL13649	Tube Assembly, Spool Valve to Hydraulic Lift	D10044210	1	1
8	ESL13643	Elbow	D10043150	1	1
9	ESL13650	Tube Assembly, (Spool Valve to Housing	D10044220	1	1
10	ESL12747	Adapter, Return	D10039720	1	1
11	ESL13164	Lock Nut	-	1	1
12	ESL10021	'O'Ring	D93600070	1	1
13	ESL11257	Adapter	D10021160	5	5
14	ESL10022	'O'Ring	D10027170	5	5
15	ESL13651	Tube Assembly, (Hydraulic Control Valve, LH Upper	D10044090	1	1
16	ESL13652	Tube Assembly, (Hydraulic Control Valve, LH Lower	D10044110	1	1
17	ESL12897	Bolt, Hex (M10x1.5x30)	D81500370	2	2
18	N630174S8	Washer, Lock (M10)	-	2	2
19	ESL13268	Bracket	-	1	1
20	ESL13654	Bracket, Coupling Mounting	D10043440	1	1
21	ESL13655	Dust Plug, Red	-	2	2
22	ESL13656	Dust Plug, Blue	D10105250	2	2
23	ESL12604	Coupling Assembly, Red	D10026100	2	2
-	ESL12605	Coupling Assembly, Blue	-	2	2
24	ESL13657	Tube Assembly, (Hydraulic Control Valve, RH Lower	D10044120	1	1
25	ESL13658	Tube Assembly, (Hydraulic Control Valve, RH Upper	D10044100	1	1
26	311113S8	Banjo Bolt	-	4	4
27	86438S8	'O'Ring	-	4	4
28	ESL13659	Adapter, Big	D10044160	2	2
29	ESL13660	Sealing Washer	-	4	4
30	ESL13661	Adapter, Small	D10044150	2	2
31	ESL13662	Bolt, Hex (M8x1.25x60)	-	3	3
32	N630068S8	Washer, Lock (M8)	-	3	3
33	N620013S8	Nut, Hex (M8)	-	3	3
34	ESL13665	Sealing Washer	-	1	1
35	ESL13666	Elbow	D10044030	1	1
36	ESL13667	Tube Assembly, (Hydraulic Pump Pressure)	-	1	1
37	ESL12757	Tube Assembly, Tap Off	D10044260	1	1
38	ESL13668	Tube Assembly, (Hydraulic Pump Pressure)	D10044240	-	-
-	ESL12756	Tube Assembly, (Hydraulic Pump Pressure)	D10046970	1	1

DOUBLE ACTING SPOOL VALVE

665 / 665 DTC

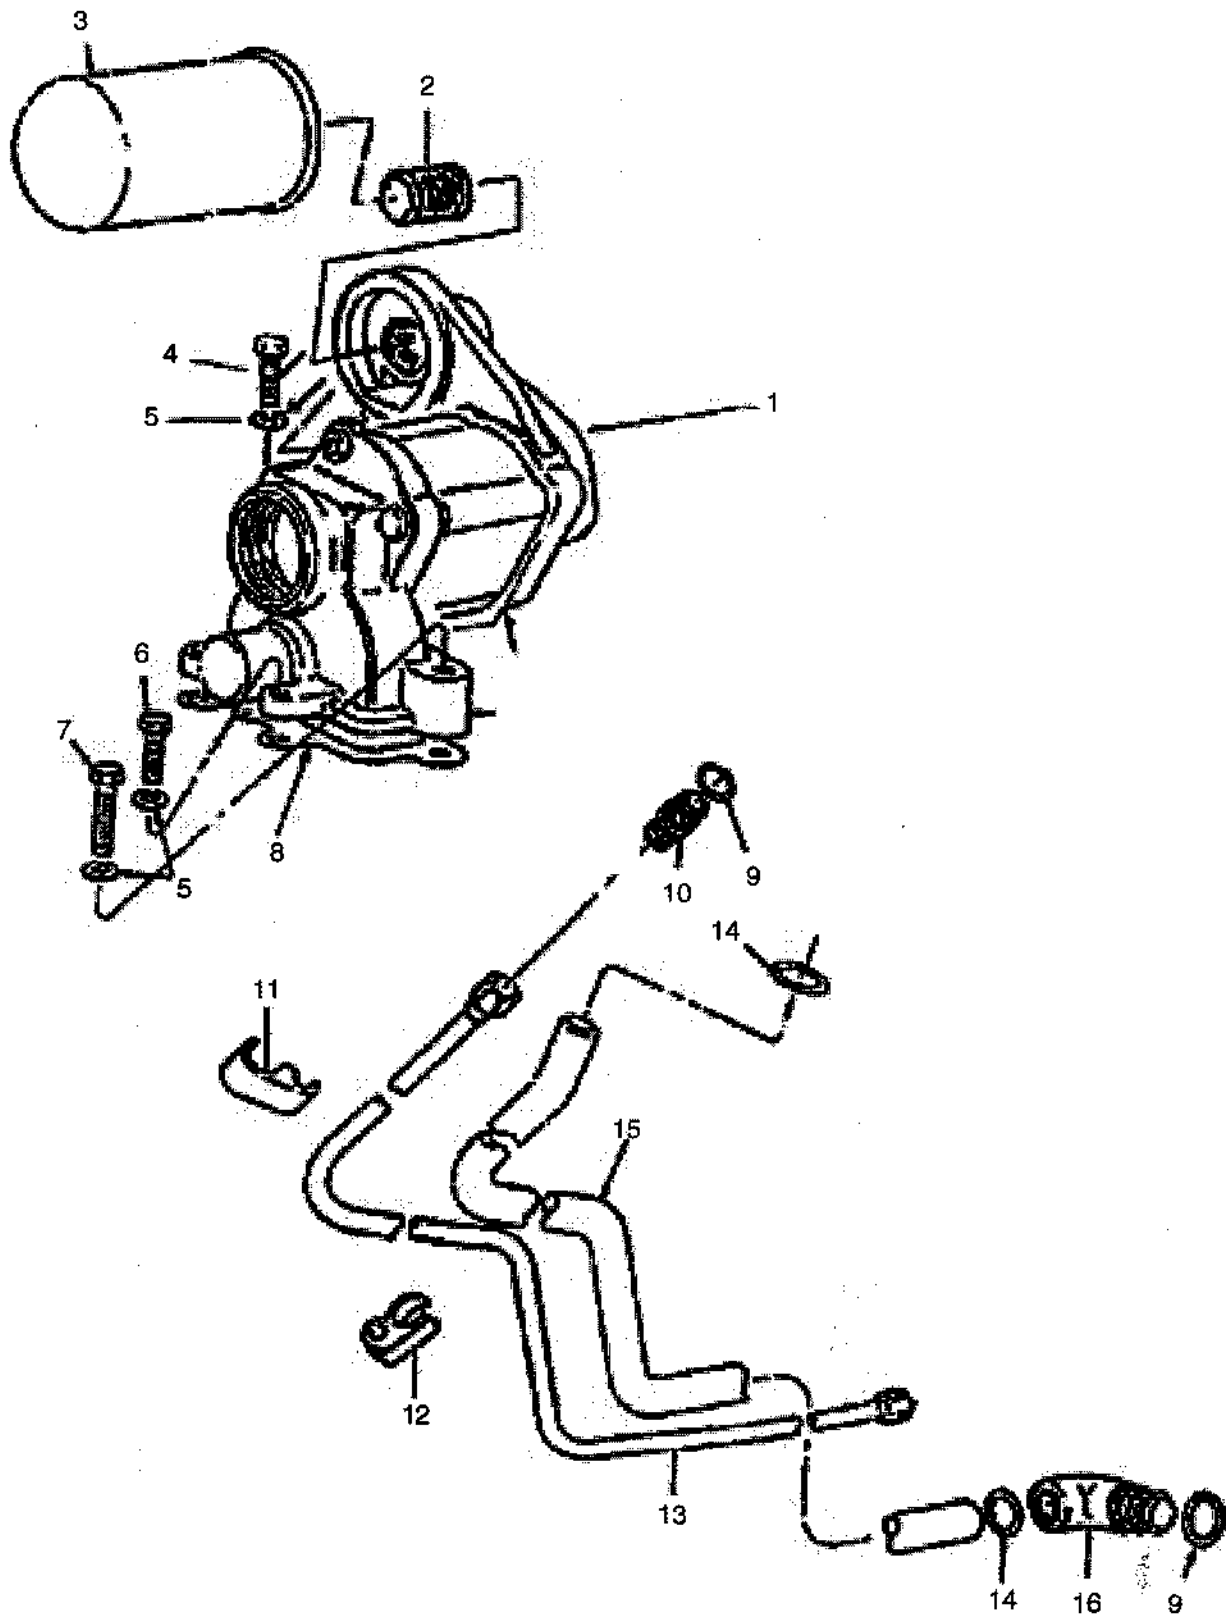

HYDRAULIC PUMP

10:23

© - SERIAL NUMBER BREAK,

✓ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC


ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
1	ESL11276	Pump Assembly, Hydraulic	D10026150	1	1
2	ESL13284	Adapter, Filter	-	1	1
3	ESL11255	Filter Assembly	D10026160	1	1
4	ESL12448	Bolt, Hex Head (3/8-16x1.50)	-	1	1
5	34807S8	Washer, Lock (3/8)	-	4	4
6	304760S8	Bolt, Hex Head (3/8-16x1.50)	-	22	22
7	ESL11927	Bolt, Hex Head (3/8-16x2.38)	D10021580	2	2
8	ESL13703	Gasket, Pump to Block	D10013140	1	1
9	ESL11270	O'Ring	D93600020	2	2
10	ESL11257	Connector (1/2-3/4-16)	D10021160	1	1
11	ESL11263	Grommet, Hydraulic Pump, Pipe Support	D10012190	1	1
12	ESL11258	Grommet, Hydraulic Pump, Pipe Support	D10012210	1	1
13	ESL13668	Tube, Pump Pressure	D10044240	1	1
14	ESL11238	O'Ring (1.125 IDx0.139)	D93600080	2	2
15	ESL13671	Tube, Pump Inlet	-	1	1
16	ESL12749	Elbow, Hydraulic Tube Inlet	D10042570	1	1

HYDRAULIC PUMP

Notes

ELECTRICALS, GAUGES & LIGHT SYSTEM


665 / 665 DTC

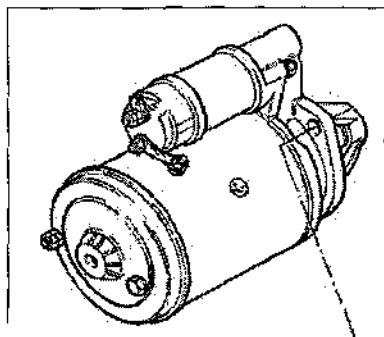

52



49 50

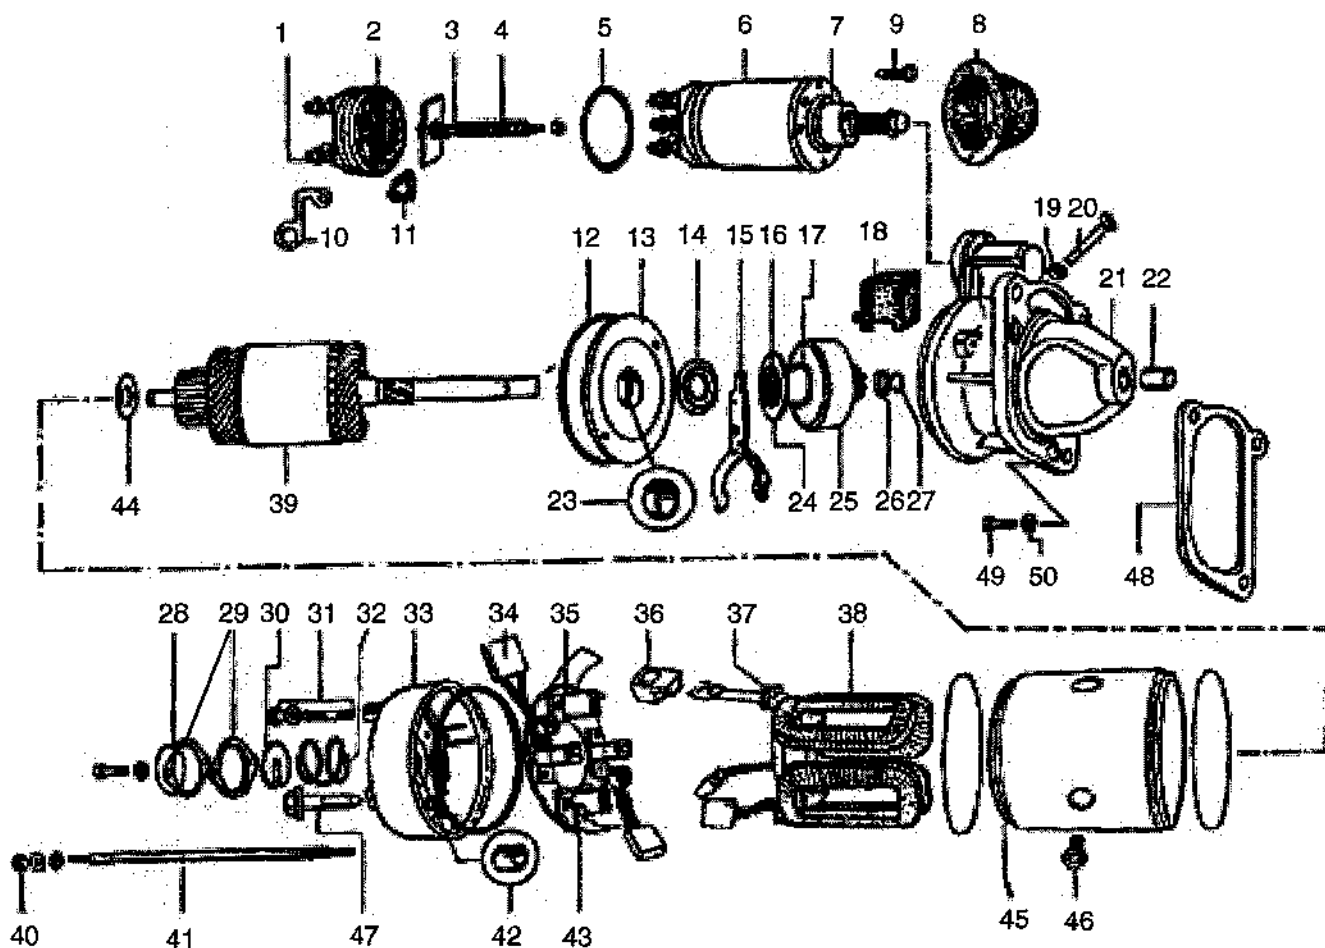


STARTER MOTOR & RELAY ASSEMBLY

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	-	Main Terminal (Solenoid) (NSS)	D10011870	2	2
2	-	Terminal Base Assembly (NSS)	-	1	1
3	-	Spindle Assembly (NSS)	D92500050	1	1
4	-	Plunger Return Spring (NSS)	-	1	1
5	ESL13444	Sealing Ring (Solenoid)	D10012460	1	1
6	ESL13445	Solenoid Switch Assembly	-	1	1
7	-	Plunger Assembly (NSS)	D10058800	1	1
8	-	Shroud (NSS)	D10026870	1	1
9	-	Screw (Solenoid Fixing) (NSS)	D10107500	3	3
10	ESL13449	Connector	D10089660	1	1
11	-	Seal (NSS)	-	1	1
12	ESL13451	Sealing Ring (DE & CE)	-	2	2
13	-	Intermediate Bracket Assembly (NSS)	-	1	1
14	ESL13453	Oil Seal	D10107510	1	1
15	-	Engaging Lever Assembly (NSS)	-	1	1
16	-	Jump Ring (Pinion) (NSS)	D10012620	1	1
17	-	Spring Pinion (NSS)	D10017310	1	1
18	-	Gommet (NSS)	D10012620	1	1
19	-	Nut (Pivot) (NSS)	D10017310	1	1
20	-	Pivot Pin (NSS)	-	1	1
21	-	Fixing Bracket Assembly (NSS)	D10012180	1	1
22	ESL13461	Bearing Bush (Fixing Bracket)	D10012130	1	1
23	ESL13462	Bearing Bush (Inter Bracket)	D10012610	1	1
24	-	Operating Plate (Pinion) (NSS)	D10012160	1	1
25	ESL13464	Drive Assembly	D10021930	1	1
26	ESL13465	Thrust Collar	D93100050	1	1
27	ESL13466	Jump Ring	-	1	1
28	-	End Cover (NSS)	-	1	1
29	ESL13468	Seal (End Cover)	-	2	2
30	-	C'Washer (NSS)	-	1	1
31	ESL13470	Earth Terminal	D10105220	1	1
32	-	Spring (End Cover) (NSS)	-	1	1
33	-	C & E Bracket Assembly (NSS)	D10092220	1	1
34	ESL13473	Brush Set	D10058810	1	1
35	ESL13474	Brush Carrier Assembly	-	1	1
36	ESL13475	Lead Assembly	-	1	1
37	-	Grommet (NSS)	-	1	1
38	ESL13477	Field Coil Assembly	-	1	1
39	ESL13478	Armature Assembly	-	1	1
40	ESL13479	Nut (Fixing Stud)	-	2	2

STARTER MOTOR & RELAY ASSEMBLY


665 / 665 DTC

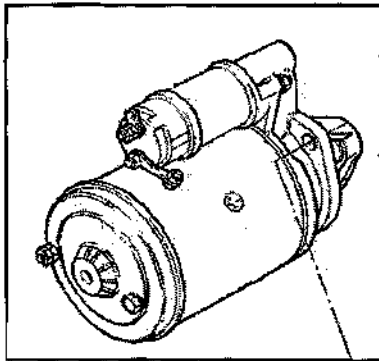

52



49 50

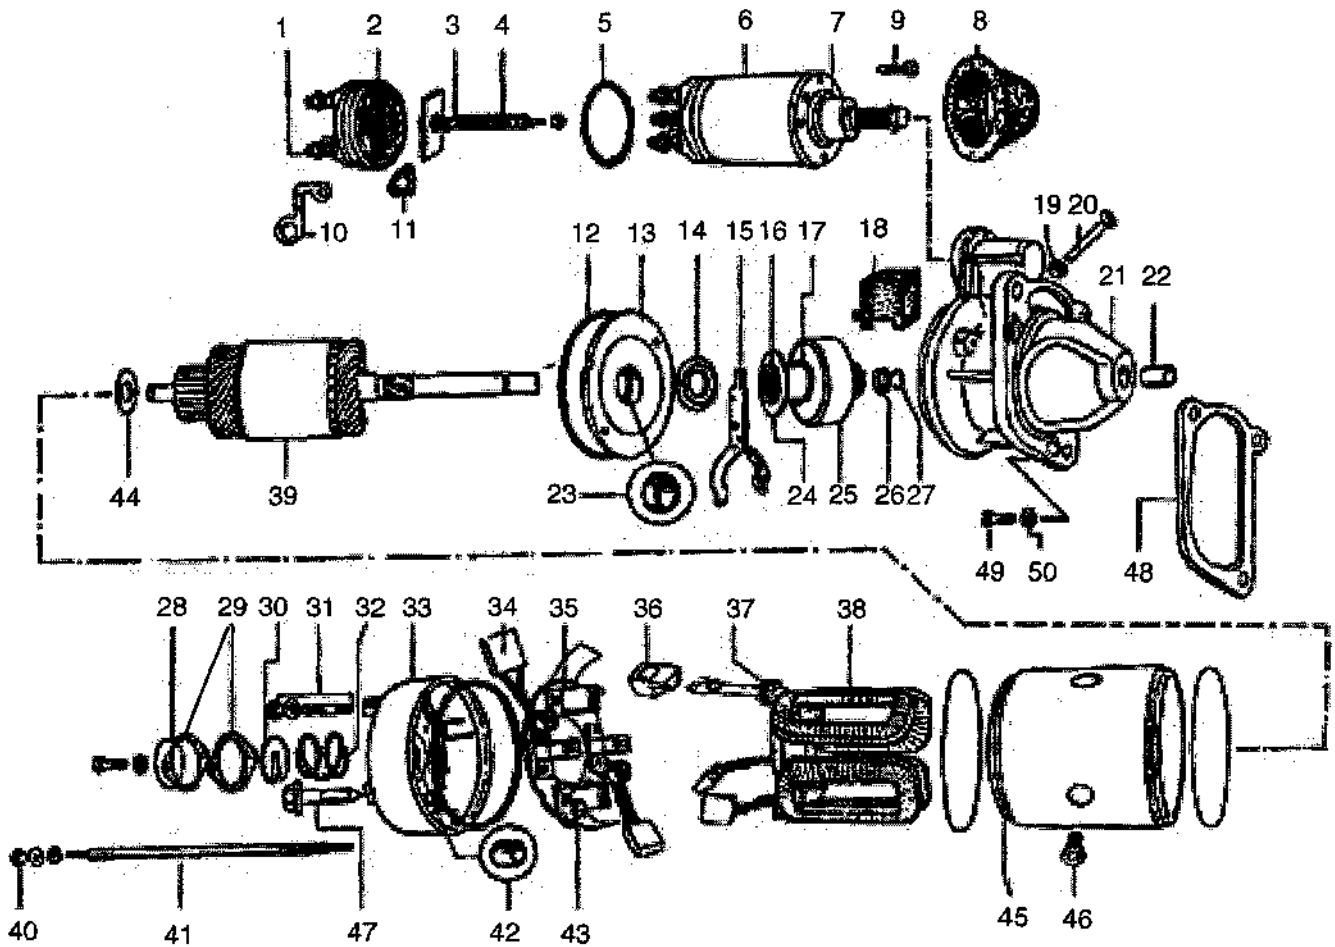


STARTER MOTOR & RELAY ASSEMBLY

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
41	-	Fixing Stud (NSS)	-	1	1
42	ESL13481	Bearing Bush	-	1	1
43	ESL13482	Brush Spring	-	4	4
44	-	Stop Washer (NSS)	-	1	1
45	-	Insulation Yoke (NSS)	-	1	1
46	-	Pole Screw (NSS)	-	4	4
47	-	Screw (NSS)	-	2	2
48	ESL13487	Gasket Starter Motor	D10017570	1	1
49	304722S8	Bolt, Hex Head (3/8-16x1.25)	-	3	3
50	34807S8	Washer, Lock (3/8)	-	3	3
51	ESL11461	Clip, Wiring (NI)	D10019390	1	1
52	ESL12587	Starter Motor Assembly	D10026880	1	1

STARTER MOTOR & RELAY ASSEMBLY

665 / 665 DTC

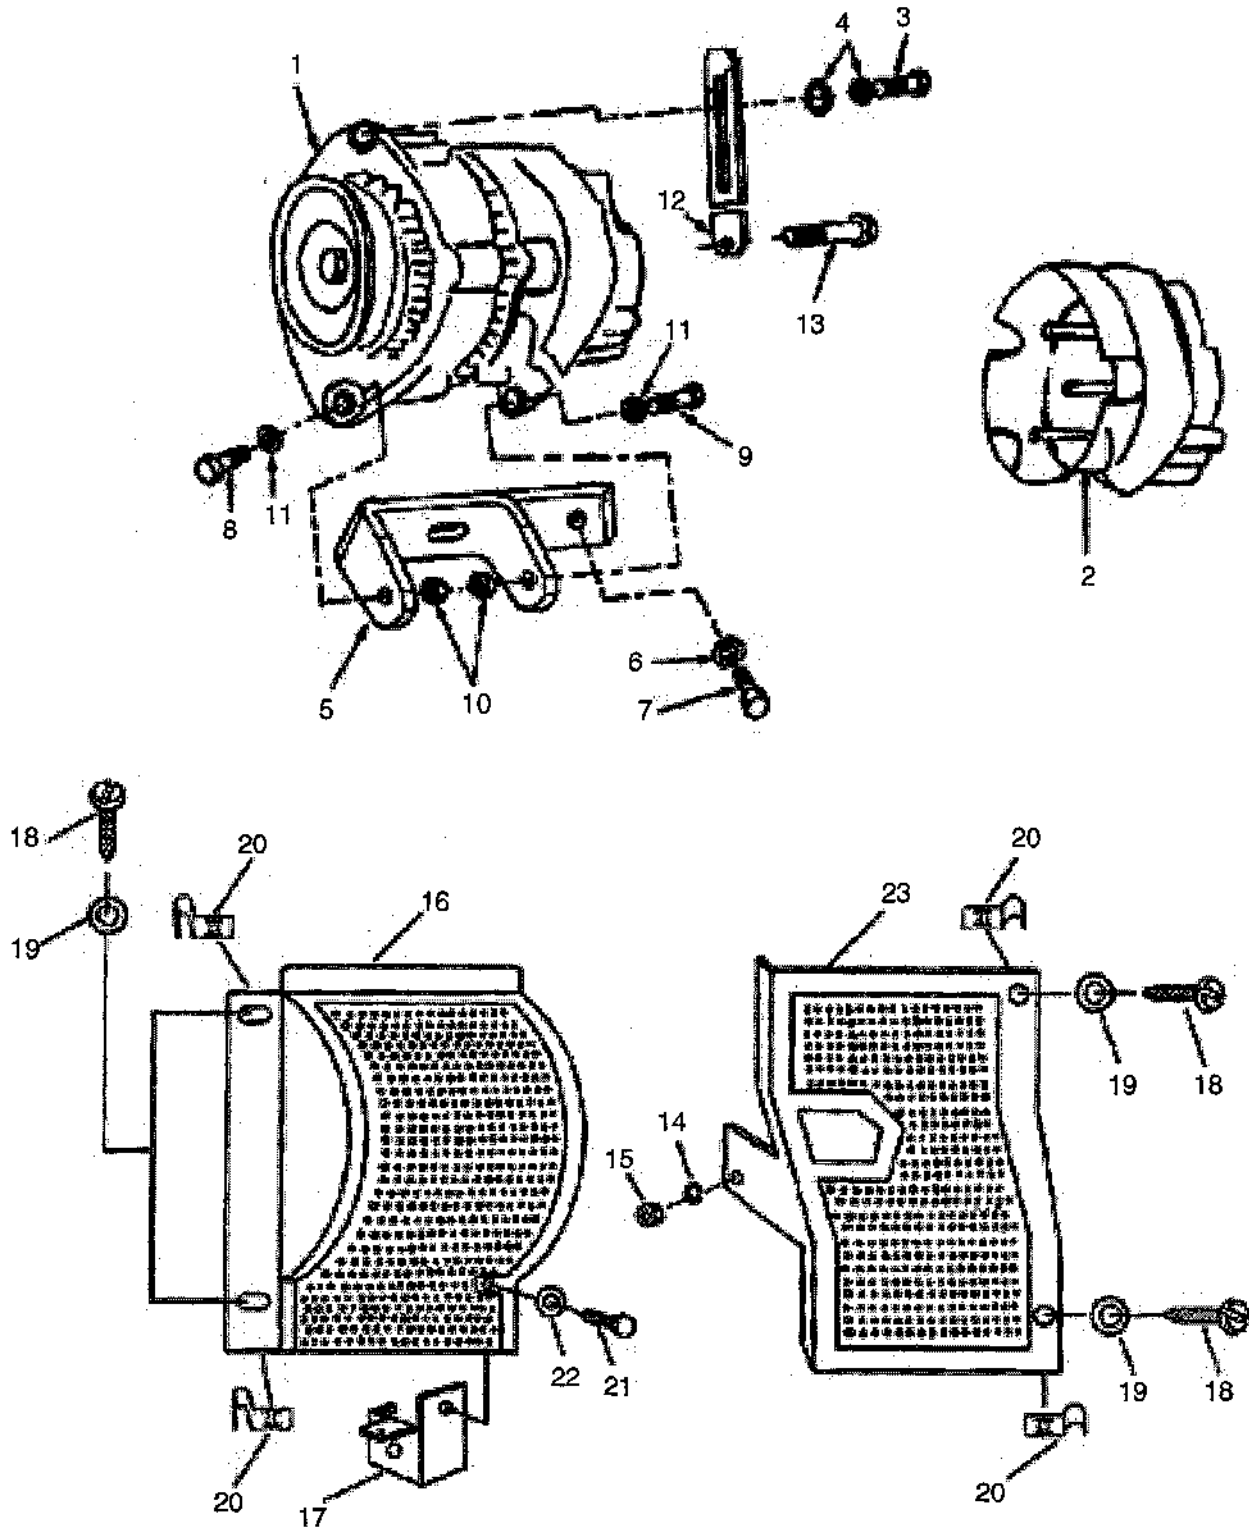

ALTERNATOR & GUARD

11:5


Ⓢ - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL12537	Alternator & Regulator Assembly	D10026590	1	1
2	ESL11332	Shield Alternator	-	1	1
3	E602189S8	Bolt, Hex (M8x1.25x30)	-	1	1
4	ESL11720	Washer, Flat (M8x19x3)	D85500130	2	2
5	ESL11960	Bracket Mounting Alternator	-	1	1
6	ESL11719	Washer, Bracket Mounting	D10021570	2	2
7	42997S8	Bolt, Hex (3/8-16x0.875)	-	2	2
8	ESL11955	Bolt (M10-1.5x90)	D81500290	1	1
9	N600313S8	Bolt (M10-1.5x40)	-	1	1
10	N620014S8	Nut (M10-1.5)	-	2	2
11	ESL11956	Washer (M10)	D85500140	2	2
12	ESL12539	Arm, Alternator Belt Adjusting	D10010960	1	1
13	304739S8	Bolt, Hex (5/16-18x1.375)	-	1	1
14	34791S8	Washer, Hex (5/16)	-	1	1
15	33797S8	Nut, Hex (5/16-18)	-	1	1
16	ESL13491	Guard, Alternator & Fan, LH	D10017090	1	1
17	ESL13492	Bracket Assembly	D10010940	1	1
18	ESL12040	Screw, Pan Head (1/4-14x2.00)	D82000060	4	4
19	ESL12046	Washer, Flat (1/4)	D85500100	4	4
20	ESL12042	Nut, Spring U (1/2-14)	D83000250	4	4
21	ESL12073	Bolt, Hex Head (M6-1x16)	D81500360	1	1
22	N630067S8	Washer, Flat (M6)	-	1	1
23	ESL12001	Guard Assembly Alternator & Fan, RH	D10059210	1	1

ALTERNATOR & GUARD

665 / 665 DTC

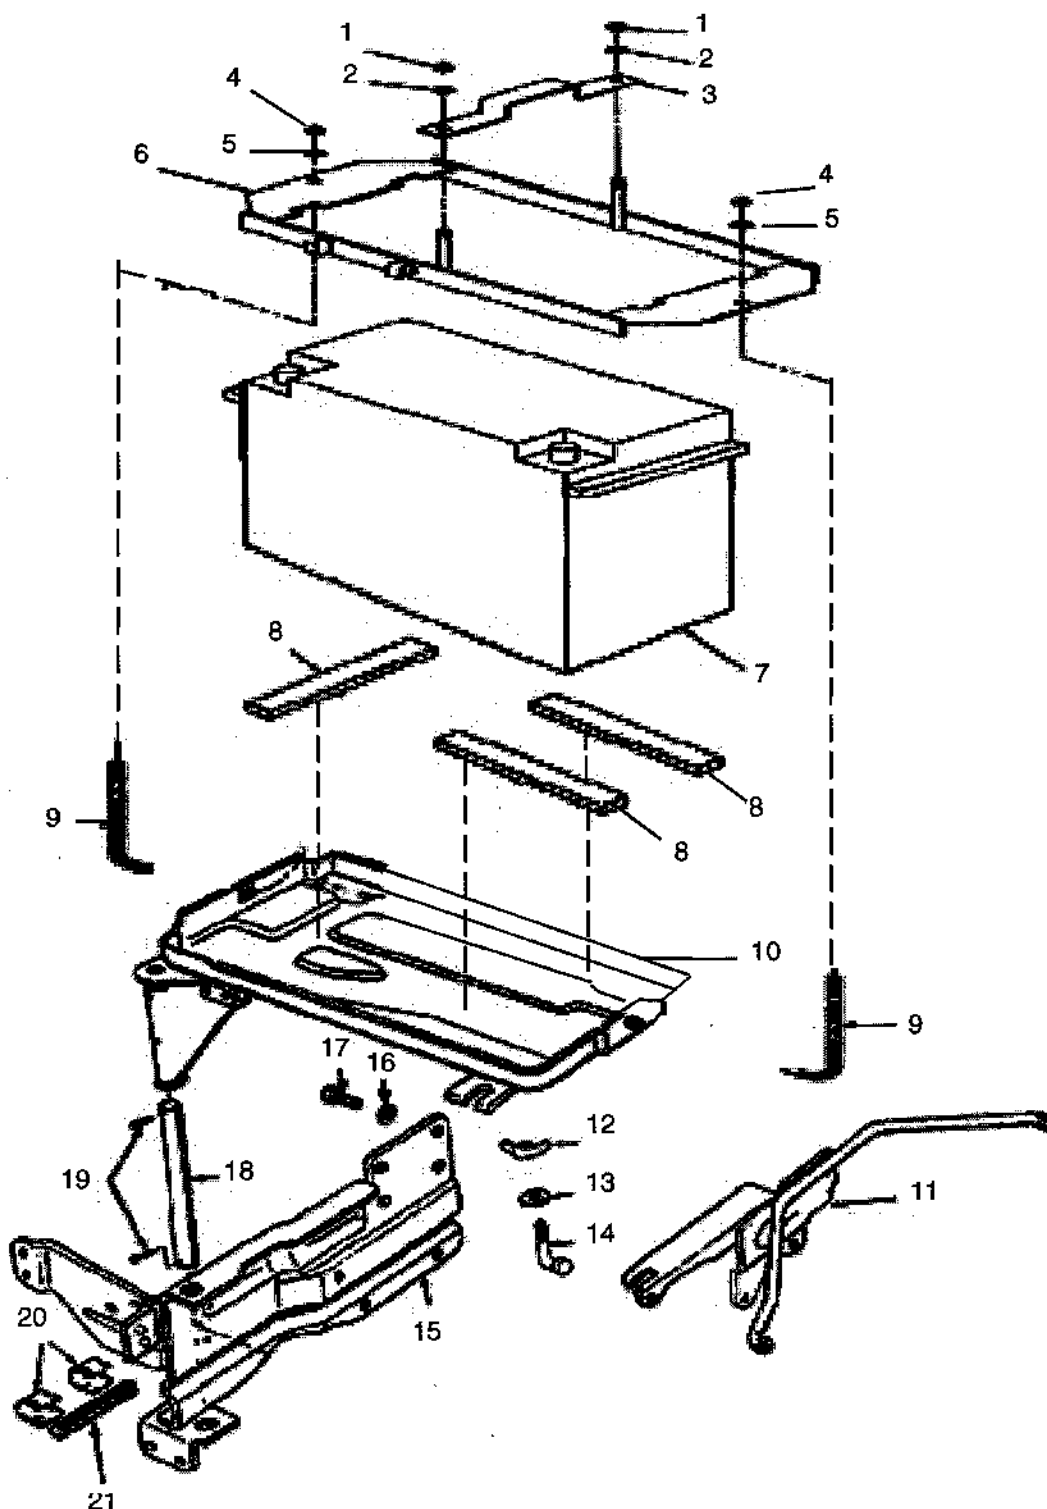


BATTERY & BATTERY SUPPORT

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	33796S8	Nut, Hex Head (1/4)	-	2	2
2	44719S8	Washer, Flat (1/4)	-	2	2
3	ESL12547	Top Plate, Battery Hold Down	D10026260	1	1
4	383705S8	Nut, Hex Lock (5/16-18)	-	2	2
5	44722S8	Washer, Flat (5/16)	-	3	3
6	ESL12545	Clamp, Battery Hold Down	D10026280	1	1
7	799716	Battery Assembly	-	1	1
8	ESL12548	Pad Battery	D10026290	3	3
9	ESL12546	Rod, Battery Hold Down	D10026270	2	2
10	ESL12285	Tray Assembly, Battery	-	1	1
11	ESL11352	Support, Radiator Shell Upper	D10013330	1	1
12	388769S	Nut, Wing (5/16-18)	-	1	1
13	44724S8	Washer, Flat (5/16)	-	1	1
14	ESL11773	Bolt, Battery Hold Down	D10065740	1	1
15	ESL11342	Bracket Assembly, Battery Support	D10017320	1	1
16	34808S8	Washer, Lock (7/16)	-	4	4
17	304652S8	Bolt, Hex Head (7/16-14x0.75)	-	4	4
18	ESL11350	Pin, Battery Tray	D10018210	1	1
19	ESL13674	Pin, Cotter (5/32x1.25)	-	2	2
20	ESL11354	Clip, Battery Cable Pad	D10018400	1	1
21	ESL11353	Pad, Battery Cable	D10018390	1	1
22	ESL11357	Terminal, Battery Cable, Positive (NI)	-	1	1
23	ESL11356	Cover, Terminal Insulation (NI)	-	1	1
24	ESL11358	Terminal, Battery Cable, Earth (NI)	-	1	1
25	ESL11355	Boot, Terminal Insulation (NI)	-	1	1
26	23017S2	Bolt, Terminal (5/16-18x1.25) (NI)	-	2	2
27	33797S2	Nut, Hex, Terminal (5/16-18) (NI)	-	2	2

BATTERY & BATTERY SUPPORT

665 / 665 DTC

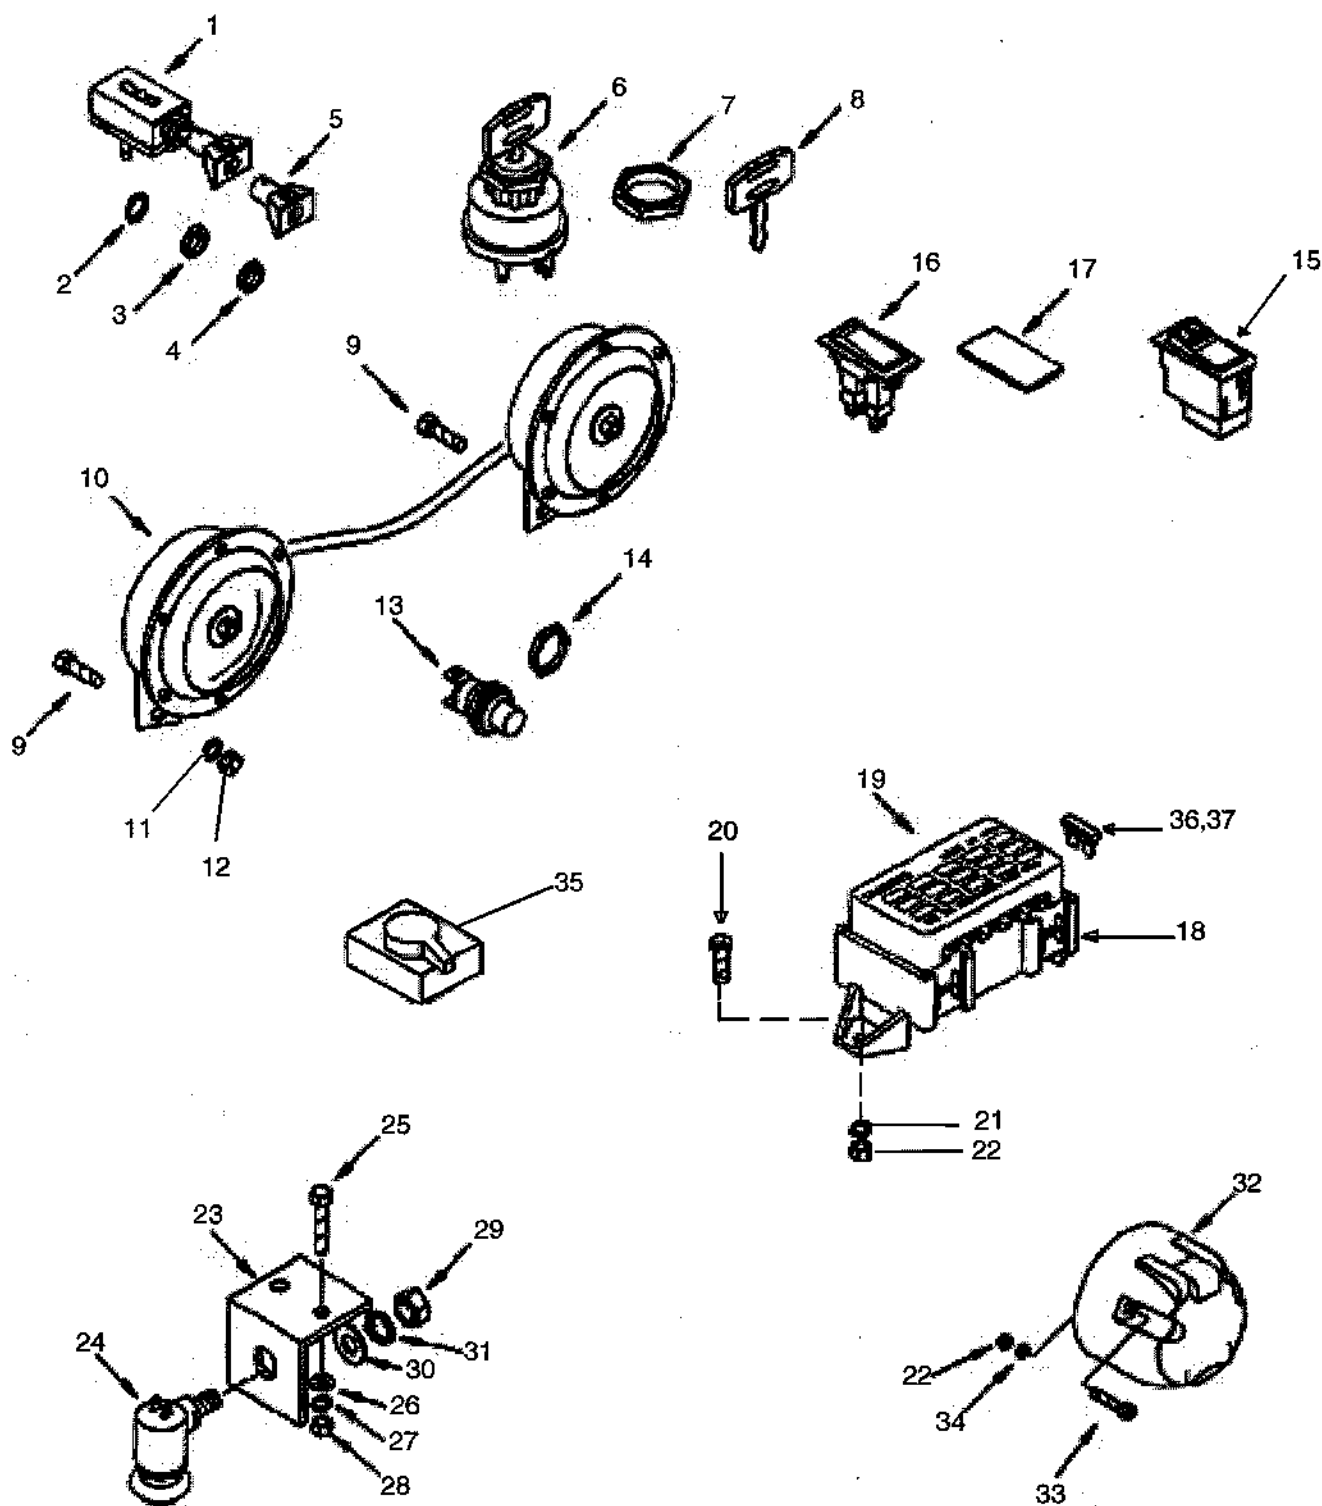

ELECTRICAL SWITCHES

11:9


Ⓢ - SERIAL NUMBER BREAK, ✓ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
1	ESL13498	Switch Assembly, Lighting	D10019310	1	1
2	ESL11723	Washer	-	1	1
3	ESL11819	Nut, Lighting Switch	-	1	1
4	ESL11820	Nut, Lighting Switch	-	1	1
5	ESL11360	Knob, Light Switch	-	1	1
6	ESL13499	Switch Assembly, Heat & Starter	-	1	1
7	ESL11821	Nut, Starter Switch	-	-	1
8	ESL11362	Key, Ignition Lock	-	1	1
9	304682S8	Bolt, Hex Head (5/16-18x1.00)	-	2	2
10	ESL11365	Horn Assembly, Dual Tone	D10017850	1	1
11	34941S8	Washer (5/16)	-	2	2
12	33799S8	Nut (5/16)	-	2	2
13	ESL13501	Button Assembly, Horn Blowing	-	1	1
14	ESL12454	Nut, Horn Blowing	-	1	1
15	ESL11364	Switch Assembly, Emergency Warning	D10017860	1	1
16	ESL12573	Switch Assembly, Worklamp	D10026520	1	1
17	ESL11372	Grommet	-	1	1
18	ESL11374	Fuse Box Assembly (Includes Item #19)	-	1	1
19	ESL13734	Cover, Fuse Box	D10105130	1	1
20	ESL11887	Screw, Pan Head (M10-24*0.62)	D82000030	2	2
21	34803S8	Washer, Lock (M10)	-	2	2
22	34053S8	Nut, Hex (M10-24)	-	5	5
23	ESL13503	Bracket, Stop Lamp Switch Mounting	-	-	-
24	ESL13504	Switch Assembly, Stop Lamp	D10016930	1	1
25	N606321S8	Bolt Carriage (M8x1.25x20)	-	2	2
26	44722S8	Washer, Flat (5/16)	-	2	2
27	N630173S8	Washer, Lock (M8)	-	2	2
28	N620013S8	Nut (M8)	-	2	2
29	ESL12017	Nut (3/8-16)	D83000020	1	1
30	ESL12074	Washer, Flat	D85000090	1	1
31	34807S8	Washer, Lock	-	1	1
32	ESL11381	Socket Assembly	D10026380	1	1
33	54049S8	Screw (10-24x11.12)	-	3	3
34	34903S8	Washer, Lock Internal Tooth (10)	-	3	3
35	ESL13676	Flasher - Indicator Assembly	-	1	1
36	ESL13735	Fuse (10A)	-	2	2
37	ESL13736	Fuse (15A)	-	4	4

ELECTRICAL SWITCHES


665 / 665 DTC

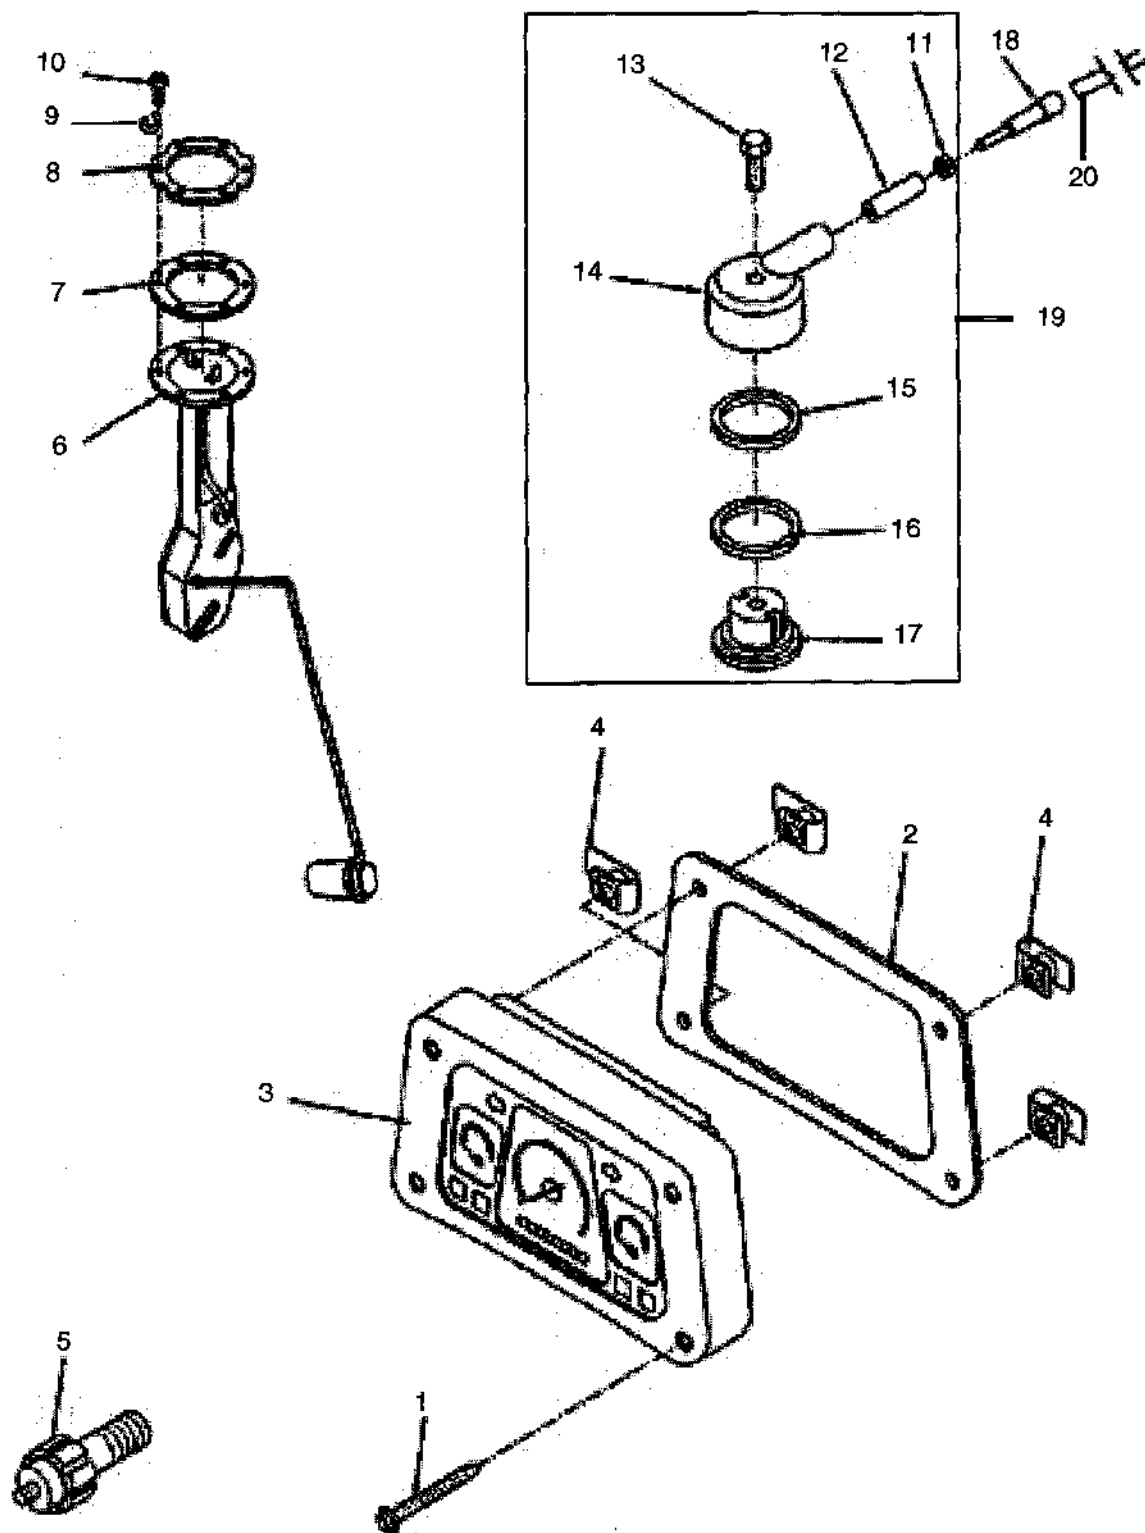

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL11889	Screw, Bezel Retaining	-	4	4
2	ESL13505	Gasket, Instrument Cluster	D10026480	1	1
3	ESL13506	Cluster Assembly, Instrument	D10043880	1	1
4	ESL11823	Nut, Bezel Retaining	-	4	4
5	ESL11400	Switch Assembly, Oil Pressure	-	1	1
6	ESL13511	Float Assembly, Fuel Tank Sender	D10026550	1	1
7	ESL13510	Gasket, Fuel Tank Sender	D10042440	1	1
8	ESL13509	Clip	-	1	1
9	ESL12559	Washer, Fuel Tank Float	D10021990	5	5
10	ESL11890	Screw, Hex Head (10-32*0.625)	D10101730	5	5
11	ESL13514	Seal, Tachodrive Adapter	-	1	1
12	ESL13515	Bearing Bush, Shaft Adapter	-	1	1
13	N605531S8	Bolt, Hex Head (M8x1.25-20)	-	1	1
14	-	Body, Tachodrive Shaft (NSS)	-	1	1
15	ESL11408	O'Ring	D93600210	1	1
16	ESL11407	Ring, Tachodrive Shaft	D10069960	1	1
17	-	Base, Tachodrive Adapter (NSS)	-	1	1
18	ESL11409	Shaft & Cable Assembly	-	1	1
19	ESL13518	Adapter Assembly, Tachodrive	D10069730	1	1
20	ESL13715	Cable Assembly, Tachometer (Up to Serial Number 304173)	-	1	1
-	ESL13716	Cable Assembly, Tachometer (From Serial Number 304174)	D10081520	1	1

665 / 665 DTC

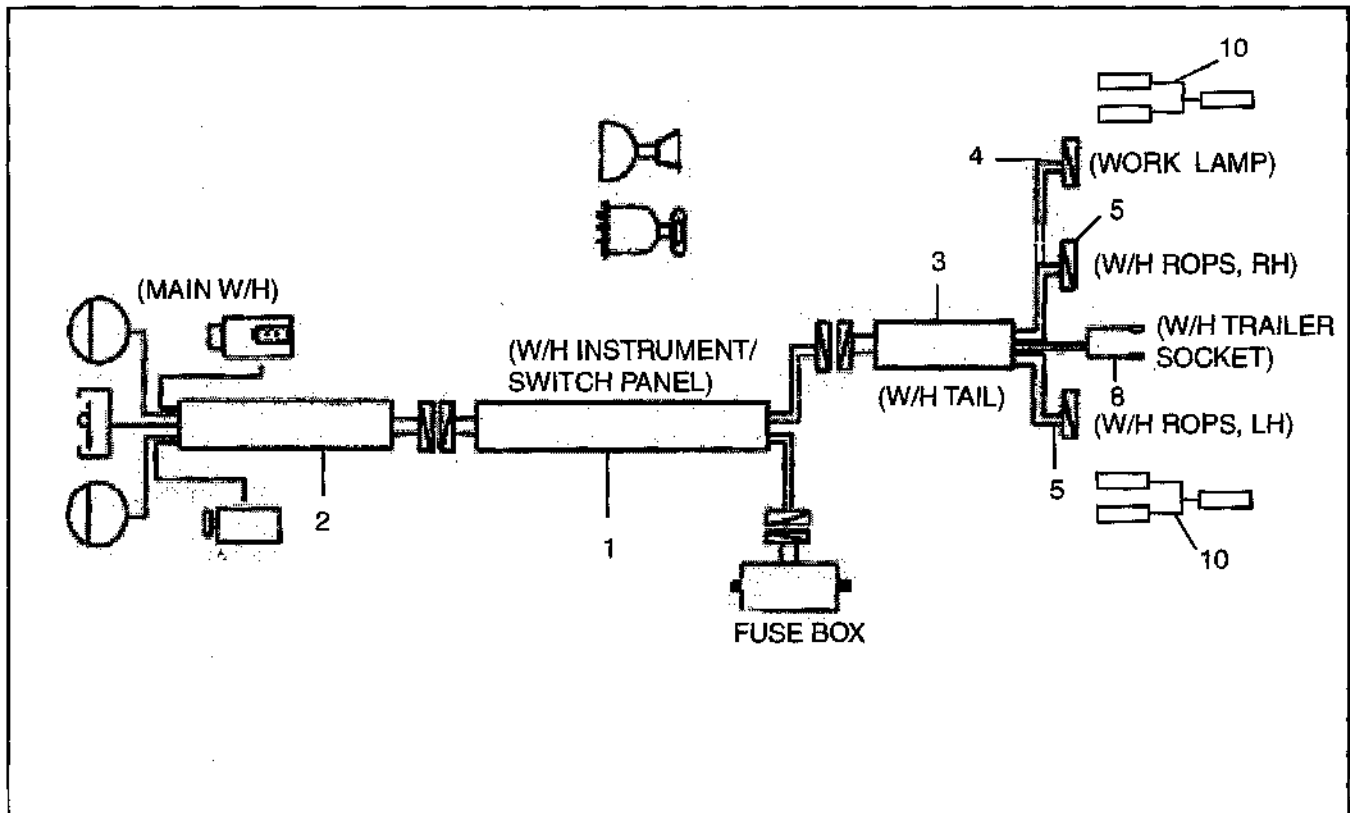

WIRING HARNESS SYSTEM

11:13

© - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL12569	Wiring Harness, Instrument Panel (Up to Serial Number 304173)	D10027780	1	-
-	ESL13711	Wiring Harness, Instrument Panel (From Serial Number 304174)	D10026510	1	-
2	ESL12568	Wiring Harness, Main (Up to Serial Number 304173)	D10027790	1	-
-	ESL13705	Wiring Harness, Main (From Serial Number 304174)	D10026610	1	-
3	ESL13521	Wiring Harness, Tail (Up To Serial Number 304173 - FT70) (Up To Serial Number 303811 - FT80)	-	1	1
-	ESL13708	Wiring Harness, Tail (From Serial Number 304174 - FT70) (From Serial Number 303812 - FT80)	D10043910	1	1
4	ESL12564	Wiring Harness, Work Lamp (Up To Serial Number 304173 - FT70) (Up To Serial Number 303811 - FT80)	-	1	1
-	ESL13710	Wiring Harness, Work Lamp (From Serial Number 304174 - FT70) (From Serial Number 303812 - FT80)	D10044080	1	1
5	ESL12565	Wiring Harness, ROPS Lamp (Up To Serial Number 304173 - FT70) (Up To Serial Number 303811 - FT80)	D10026640	2	2
-	ESL13707	Wiring Harness, ROPS Lamp, RH (From Serial Number 304174 - FT70) (From Serial Number 303812 - FT80)	D10026620	1	1
-	ESL13709	Wiring Harness, ROPS Lamp, LH (From Serial Number 304174 - FT70) (From Serial Number 303812 - FT80)	D10026630	1	1
6	ESL11449	Clip, Harness to Hydraulic Pipe (NI)	-	4	4
7	ESL11450	Clip, Harness to Hydraulic Pipe (NI)	-	4	4
8	ESL13704	Wiring Harness, Trailer Socket (From Serial Number 304174 - FT70) (From Serial Number 303812 - FT80)	D10026370	1	1
9	ESL12567	Wiring Harness, Earth	D100226640	1	1
10	906323	Brake Light Diode Assembly	-	2	2

WIRING HARNESS SYSTEM

665 / 665 DTC

ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665DTC
1	ESL12571	Head Lamp Assembly	D10028030	1	1
2	ESL13523	Bulb, Headlamp (12 volts)	D10105050	2	2
3	ESL12572	Worklamp Assembly	-	1	1
4	ESL13524	Bulb, Worklamp	D10105060	1	1
5	ESL11471	Plate, Worklamp Mounting	D10017520	1	1
6	ESL11775	Bolt (3/8-24UNF)	D10018380	2	2
7	44726S8	Washer, Flat (3/8)	-	2	2
8	ESL11791	Nut, Nyloc (3/8-24-UNF)	-	2	2
9	ESL13525	Grommet (For Fender Hole) (NI)	D10018640	1	1
10	ESL13737	Screw, Head Lamp Adjusting	-	6	6
11	ESL13738	Spring	-	6	6

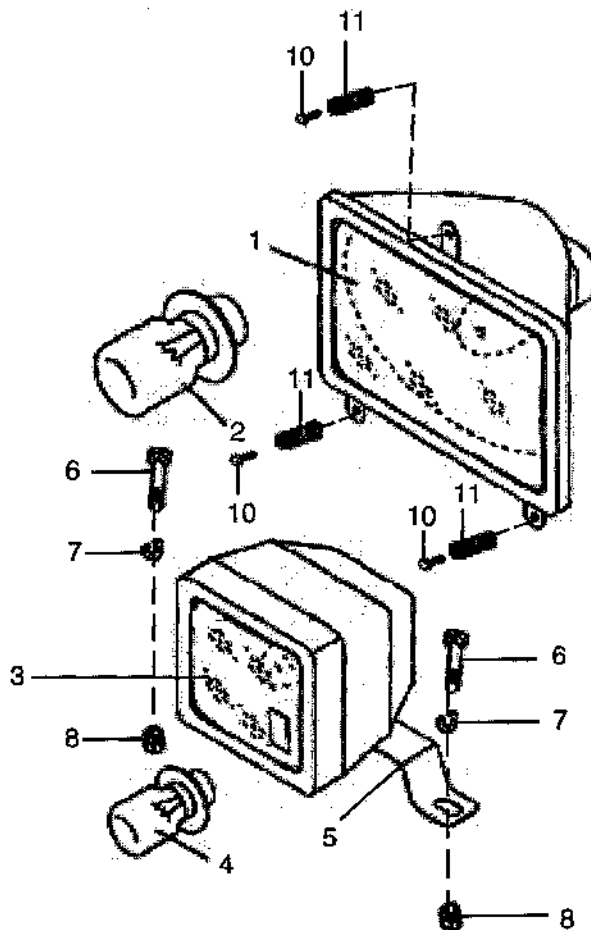


HEAD LAMP & WORK LAMP

11:15

Ⓢ - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

SHEET METAL & ACCESSORIES

665 / 665 DTC

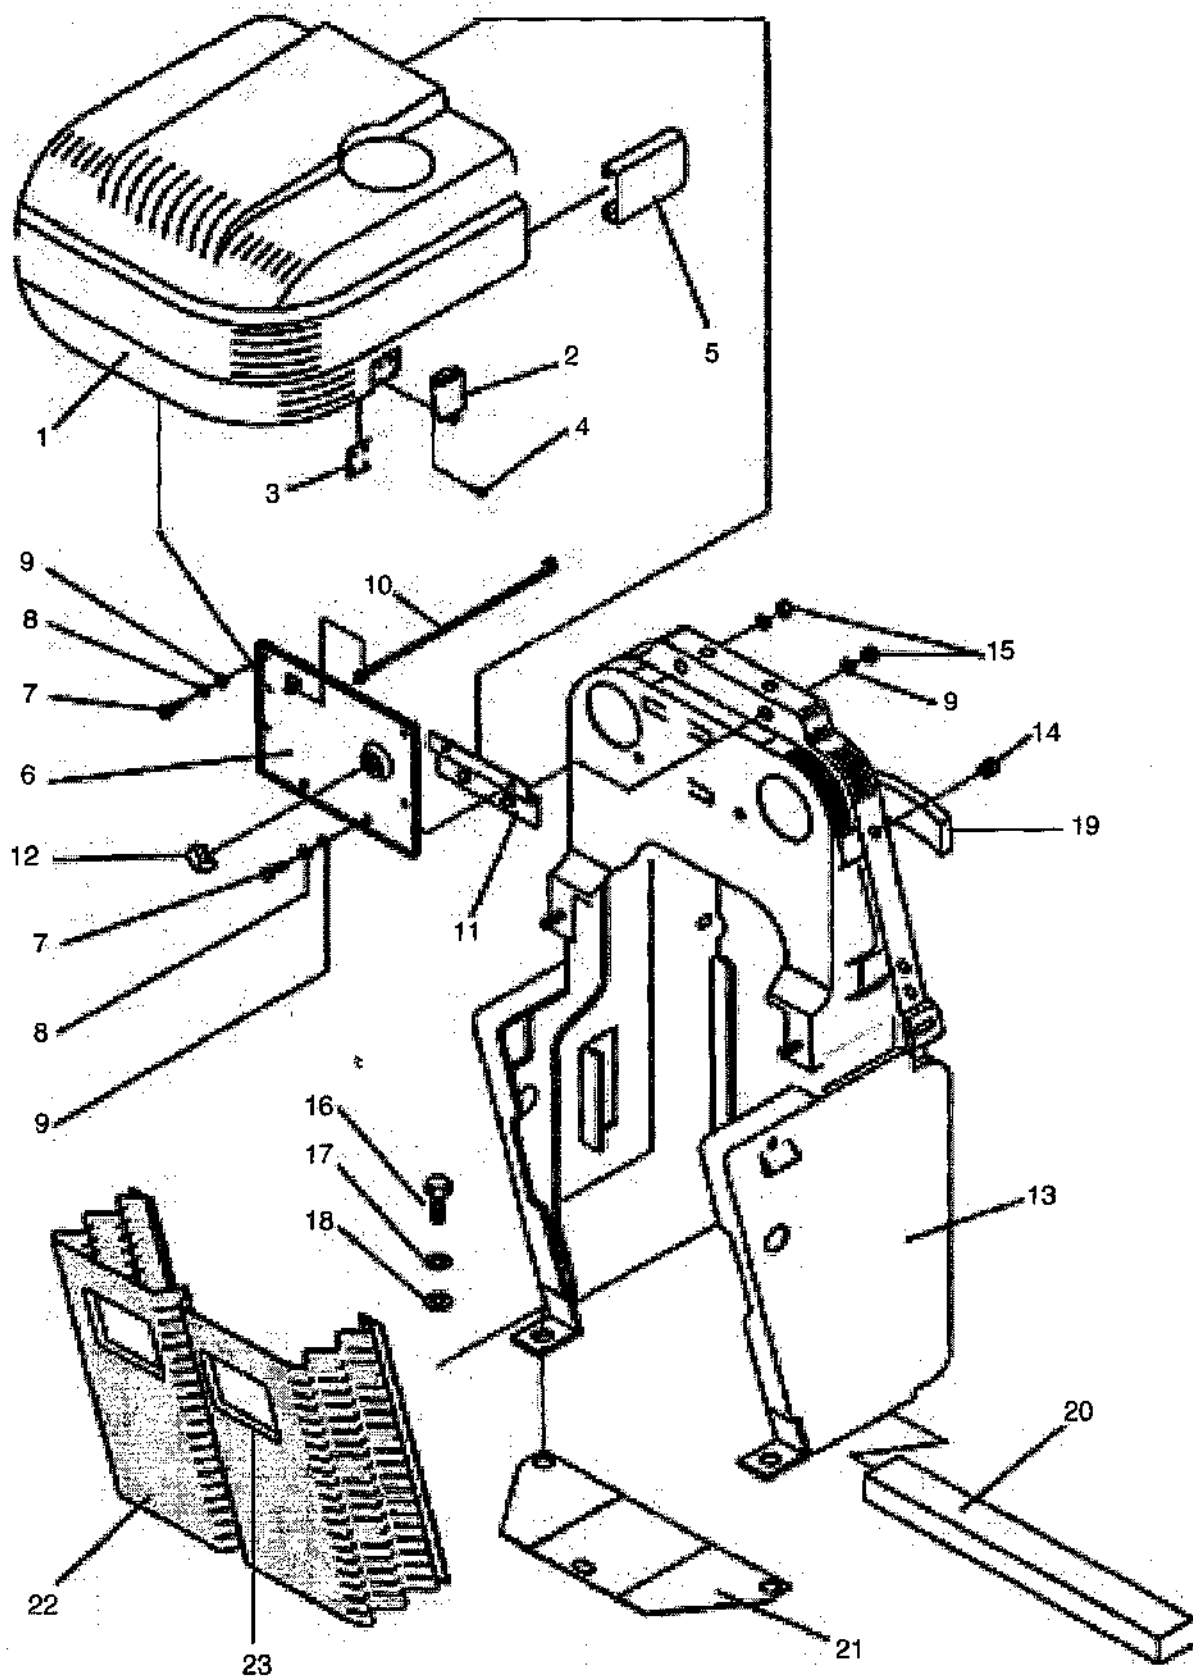

RADIATOR SHELL

12:1


Ⓢ - SERIAL NUMBER BREAK ,

↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL11498	Panel Assembly, Hood Top	-	1	1
2	ESL13537	Latch Assembly, Hood	D10016980	1	1
3	ESL11500	Plate Hood Latch	D10018630	1	1
4	ESL13718	Rivet, Hood Latch	-	4	4
5	ESL11499	Bumper	-	6	6
6	ESL11502	Plate, Hood Top Front	-	1	1
7	ESL11937	Bolt, Hex Head (M6x1.00-12)	-	6	6
8	N630317S8	Washer, External Tooth	-	6	6
9	N630067S8	Washer, Flat (M6)	-	8	8
10	ESL11504	Prop, Hood Top Front Panel	-	1	1
11	ESL13719	Hinge Assembly, Hood Top Front Panel	D10018090	1	1
12	ESL11505	Bumper, Hood Top	D10026930	1	1
13	ESL11490	Shell Assembly, Radiator	-	1	1
14	ESL13538	Pad, Hood Mounting	-	14	14
15	N620012S8	Nut (M6x1.0)	-	2	2
16	304650S8	Bolt, Hex Head (3/8-16x0.75)	-	4	4
17	44728S8	Washer, Flat (3/8)	-	4	4
18	34942S8	Washer, Flat Tooth (3/8)	-	4	4
19	ESL11493	Seal Radiator	D10017770	1	1
20	ESL11494	Seal Radiator	D10026230	1	1
21	ESL11519	Baffle Assembly, Front Axle Support	D10018150	1	1
22	ESL12609	Grill Assembly, Front	D10026900	1	1
23	ESL12610	Rubber Beading, Head Lamp	D10026670	1	1

RADIATOR SHELL

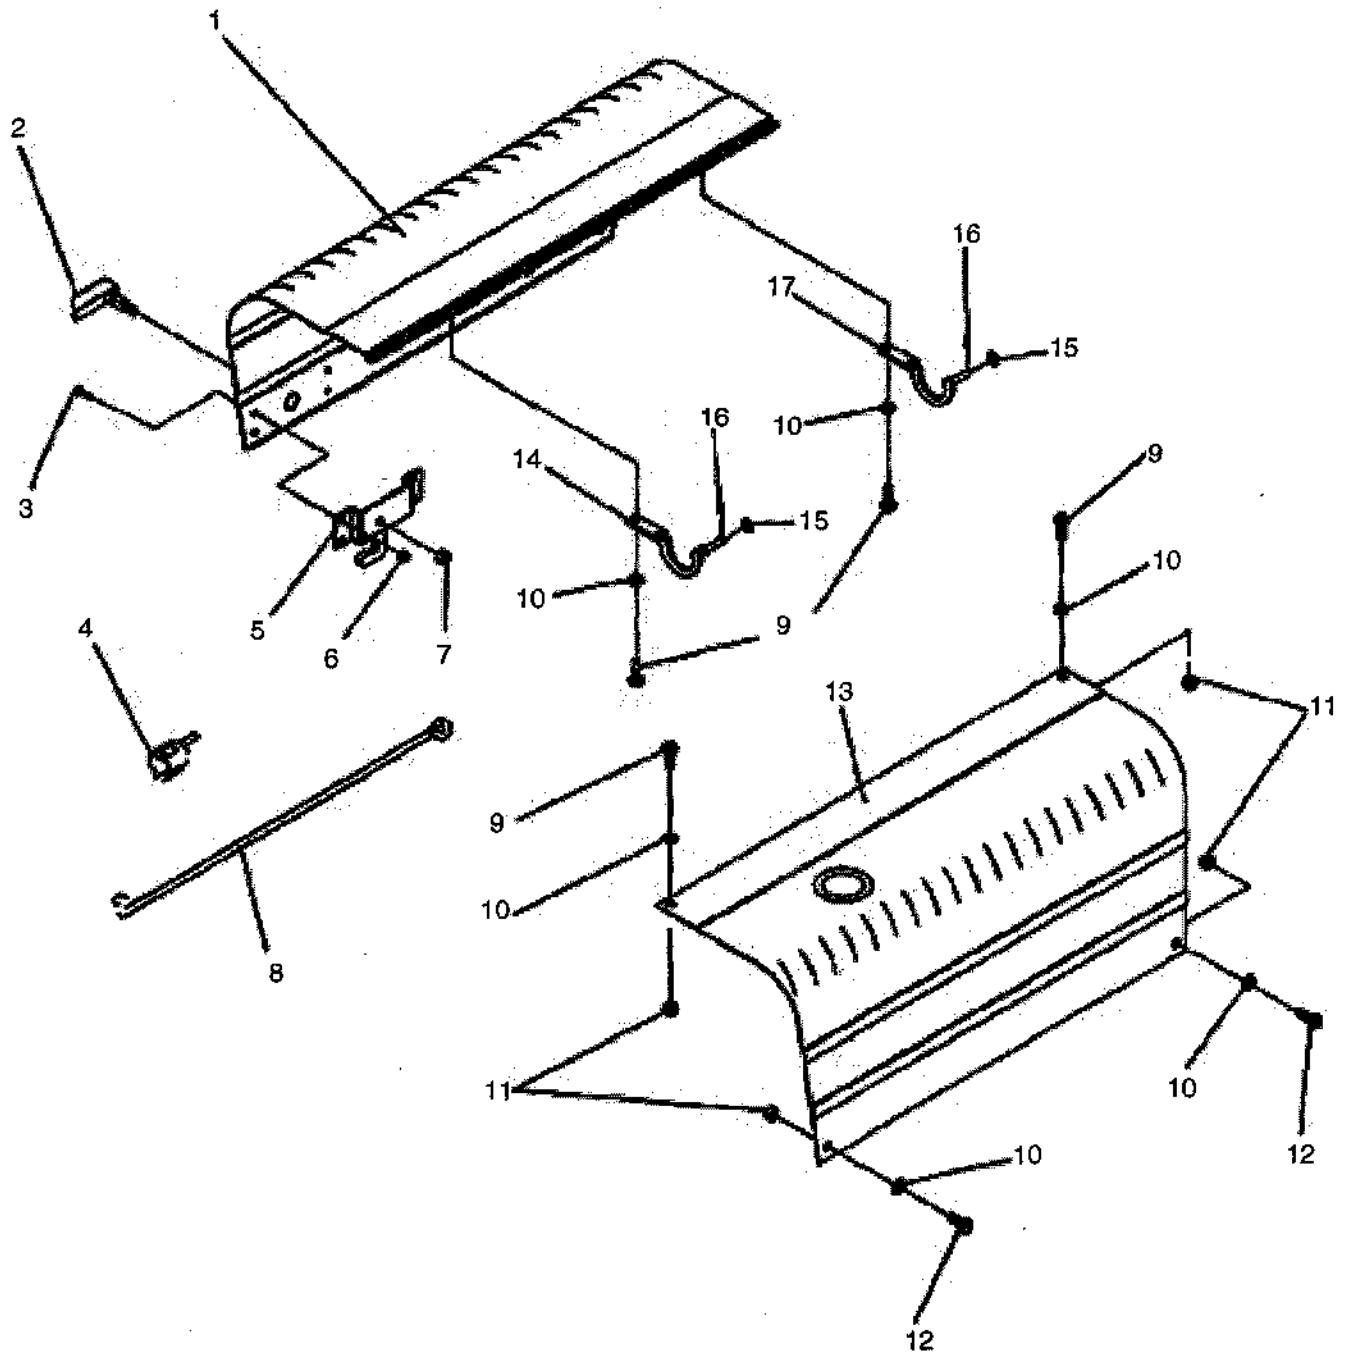


SIDE PANEL

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL11524	Panel Assembly, Hood RH	D10018420	1	1
2	ESL11529	Handle Assembly, Hood RH	D10018250	2	2
3	ESL11896	Screw, Pan Head (M4x10)	D10016990	8	8
4	ESL11521	Clip, Hood Support Rod	-	14	14
5	ESL11528	Lock Assembly, Hood RH	D10018560	2	2
6	ESL11827	Nut, Nyloc (M4)	D10017000	8	8
7	55670S8	Nut, Hex Lock (1/4-28)	-	2	2
8	ESL11534	Support Rod Panel	D10018440	1	1
9	50528S8	Screw, Pan Head (1/4-28x0.625)	-	4	4
10	44719S8	Washer, Flat (1/4)	-	6	6
11	ESL11828	Nut, Hood Panel, LH	D10017580	4	4
12	ESL13724	Screw	D10039900	2	2
13	ESL11532	Panel Assembly, Hood LH	D10018480	1	1
14	ESL11526	Hinge Rod	-	1	1
15	ESL11729	Washer, Hinge	D10018260	2	2
16	ESL12679	Pin, Cotter	D10013450	2	2
17	ESL11525	Rod Assembly, Hinge	-	1	1

SIDE PANEL

665 / 665 DTC

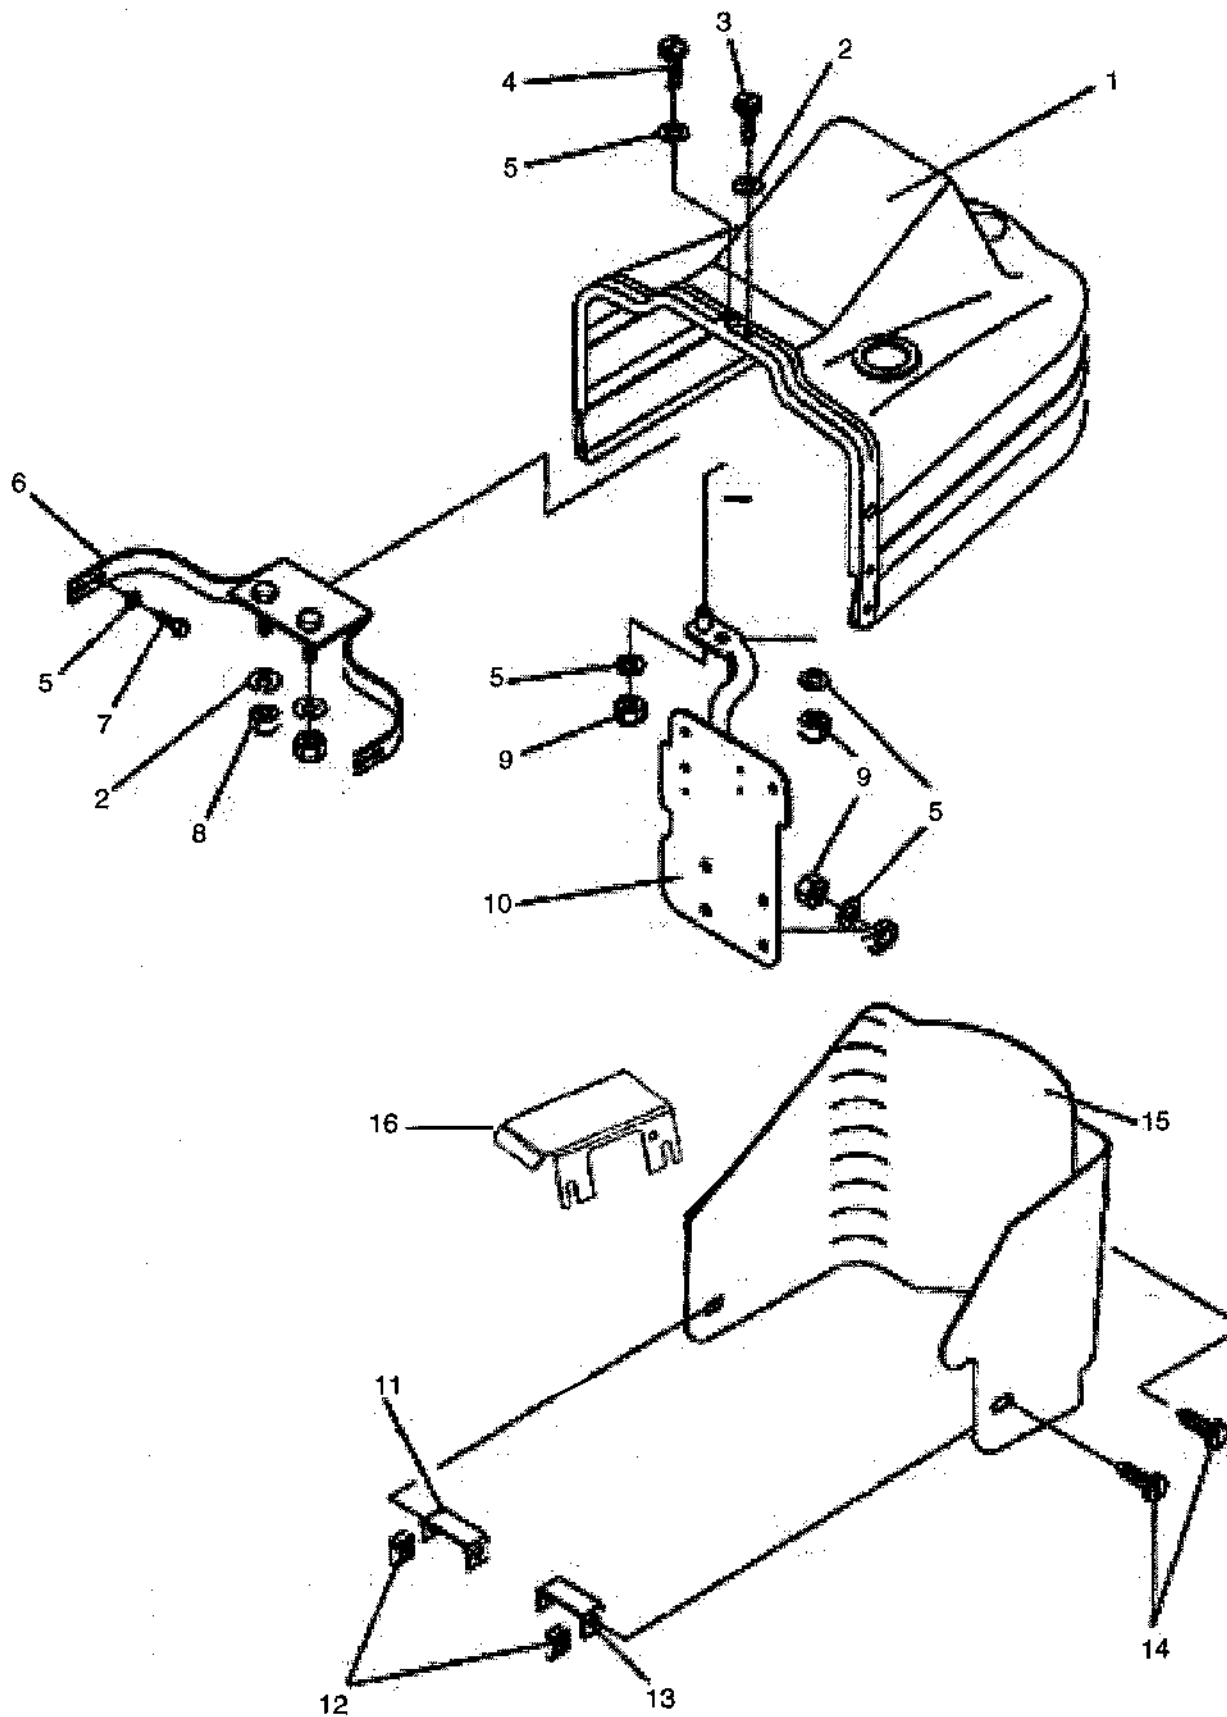


REAR HOOD

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13546	Panel Assembly, Hood Rear	D10045870	1	1
2	44722S8	Washer, Flat (5/16)	-	6	6
3	304665S8	Bolt, Hex Head (5/16-24x0.88)	-	2	2
4	ESL13724	Screw	D10042640	1	1
5	44719S8	Washer, Flat (1/4)	-	3	3
6	ESL11522	Bracket & Support Assembly	-	1	1
7	304632S8	Bolt, Hex Head (1/4-20x0.62)	-	4	4
8	33797S8	Nut, Hex (5/16-18)	-	2	2
9	ESL11828	Nut, Hood LH Panel	-	2	2
10	ESL12582	Support Assembly Hood Rear	-	1	1
11	ESL13541	Bracket, Front RH	D10042230	1	1
12	ESL11824	Nut, U-Type	-	6	6
13	ESL13542	Bracket, Front LH	D10042240	1	1
14	ESL11891	Screw	-	6	6
15	ESL13727	Cover Steering	D10042640	1	1
16	ESL14195	Rain Shield, Fuse Box	-	1	1

REAR HOOD

665 / 665 DTC

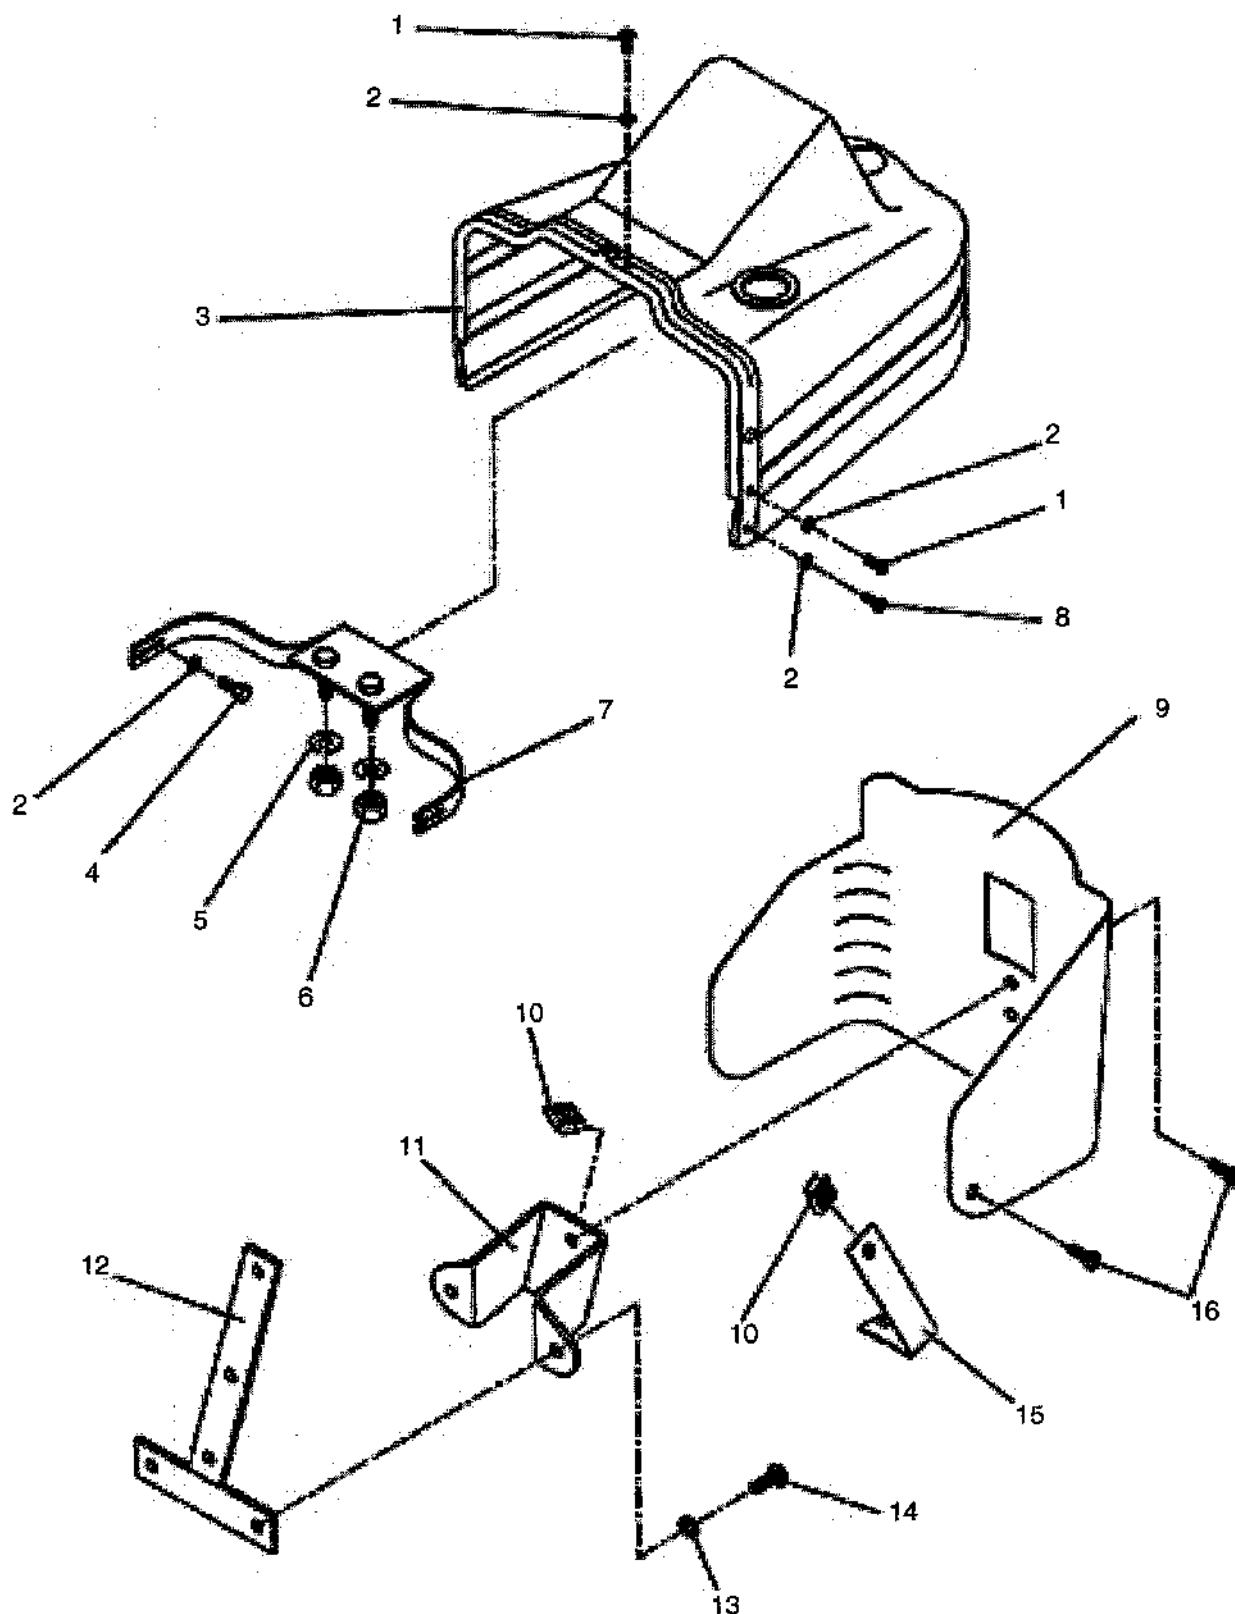

REAR HOOD

12:7

Ⓢ - SERIAL NUMBER BREAK ,




- INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	38207S8	Screw, Pan Head (1/4-28x0.5)	-	3	3
2	44719S8	Washer, Flat (1/4)	D10045870	4	4
3	ESL13536	Panel Assembly, Hood Rear	-	1	1
4	304632S8	Bolt, Hex Head (1/4-20x0.62)	-	4	4
5	44722S8	Washer, Flat (5/16)	-	4	4
6	33797S8	Nut, Hex (5/16-18)	-	2	2
7	ESL11523	Support Assembly, Hood Rear	-	1	1
8	ESL13725	Screw, Pan Head (1/4-28x0.75)	D10043580	1	1
9	ESL13540	Cover, Steering	D10046820	1	1
10	ESL11824	Nut, U-Type	-	3	3
11	ESL13545	Bracket, Rear	D10042190	1	1
12	ESL13502	Bracket Fuse Box Mounting	-	1	1
13	34806S8	Washer, Lock (5/16)	-	2	2
14	304635S8	Bolt, Hex Head (5/16-24x0.625)	-	2	2
15	ESL13543	Bracket, Front LH	D10046650	1	1
16	ESL11891	Screw 3		3	3

REAR HOOD

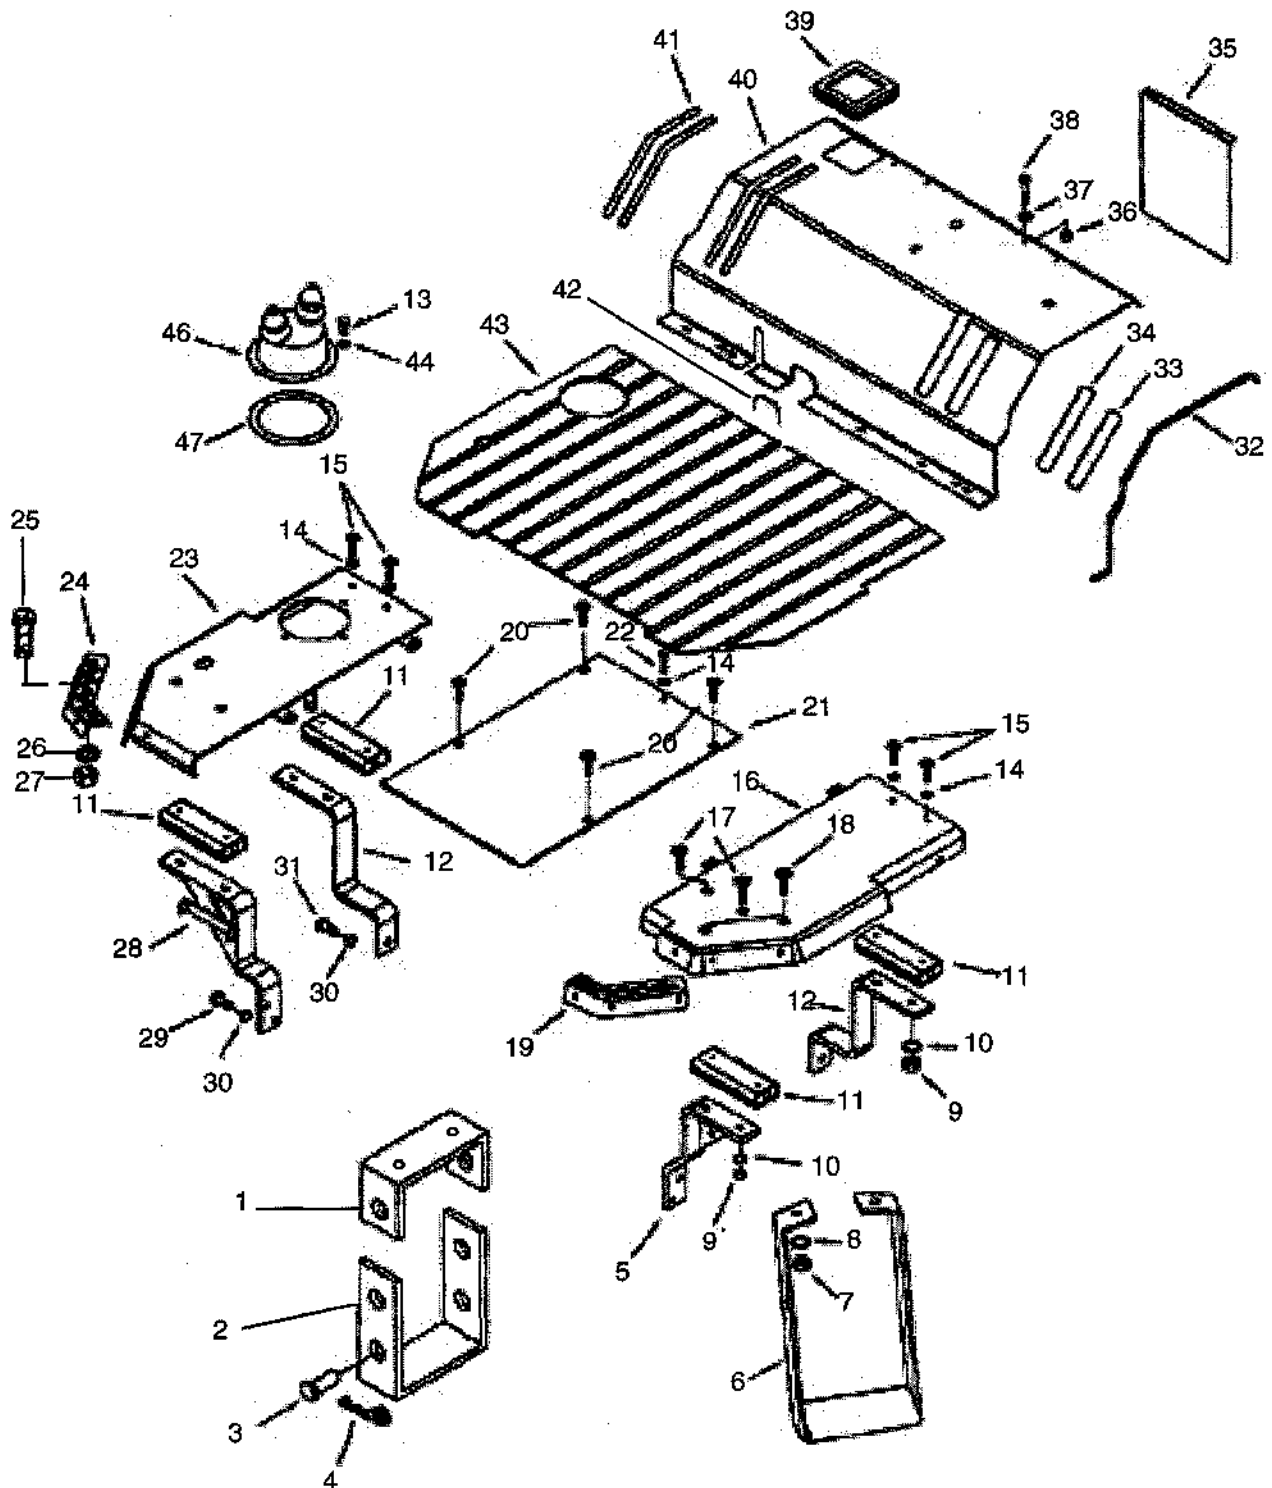

RUNNING BOARD

12:9

Ⓢ - SERIAL NUMBER BREAK ,


✓ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13573	Bracket	D10046710	1	1
2	ESL13571	Step, Platform	D10046720	1	1
3	ESL13574	Pin, Clevis	D10046690	2	2
4	ESL12590	Clip, Pin	-	2	2
5	ESL13556	Bracket, Platform Mounting Front, LH	-	-	-
-	ESL13557	Bracket, Platform Mounting Front, LH	-	1	1
6	ESL13570	Step, Platform	D10039880	-	-
7	N620042S8	Nut (M10)	-	2	2
8	N630174S8	Washer, Lock (M10)	-	2	2
9	N630013S8	Nut (M8)	-	8	8
10	N630068S8	Washer, Lock (M8)	-	8	8
11	ESL13568	Pad Isolator	D10042270	-	-
12	ESL13559	Bracket, Platform Mounting Rear	D10039850	2	2
13	ESL13593	Bracket Cable	-	1	1
14	ESL12829	Washer, Flat (M8)	-	5	5
15	N600213S8	Bolt, Hex Head (M8x1.25x40)	-	4	4
16	ESL13554	Platform Assembly, LH	-	-	-
-	ESL13555	Platform Assembly, LH	D10046070	1	1
17	ESL13563	C.S. Screw (M8x1.25x40)	-	4	4
18	ESL13572	C.S. Screw (M10x1.5x25)	-	2	2
19	ESL13564	Strip, Platform LH	-	-	-
-	ESL13565	Strip, Platform LH	D10046390	1	1
20	ESL13560	C.S. Screw (M8x1.25x20)	-	4	4
21	ESL13561	Plate, Center Platform	D10039840	-	-
-	ESL13562	Plate, Centre Platform	D10046080	1	1
22	N605531S8	Bolt, Hex Head (M8x1.25x20)	-	1	1
23	ESL13550	Platform Assembly, RH	-	-	-
-	ESL13551	Platform Assembly, RH	-	1	1
24	ESL13566	Strip, Platform RH	D10043210	-	-
-	ESL13567	Strip, Platform RH	D10046400	1	1
25	ESL11887	Screw	-	6	6
26	ESL11724	Washer	-	6	6
27	ESL12552	Nut	-	6	6
28	ESL13552	Bracket, Platform Mounting Front RH	-	-	-
-	ESL13553	Bracket, Platform Mounting Front RH	-	1	1
29	304722S8	Bolt, Hex (3/8-16x1.25)	-	-	-
-	N605561S8	Bolt, Hex (M12x1.75x40)	-	2	2
-	N605559S8	Bolt, hex (M12x1.75x30)	-	2	2
30	34807S36	Washer, Lock (3/8)	-	-	-

RUNNING BOARD
Ⓢ - SERIAL NUMBER BREAK ,
⚡ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER
12:10

665 / 665 DTC

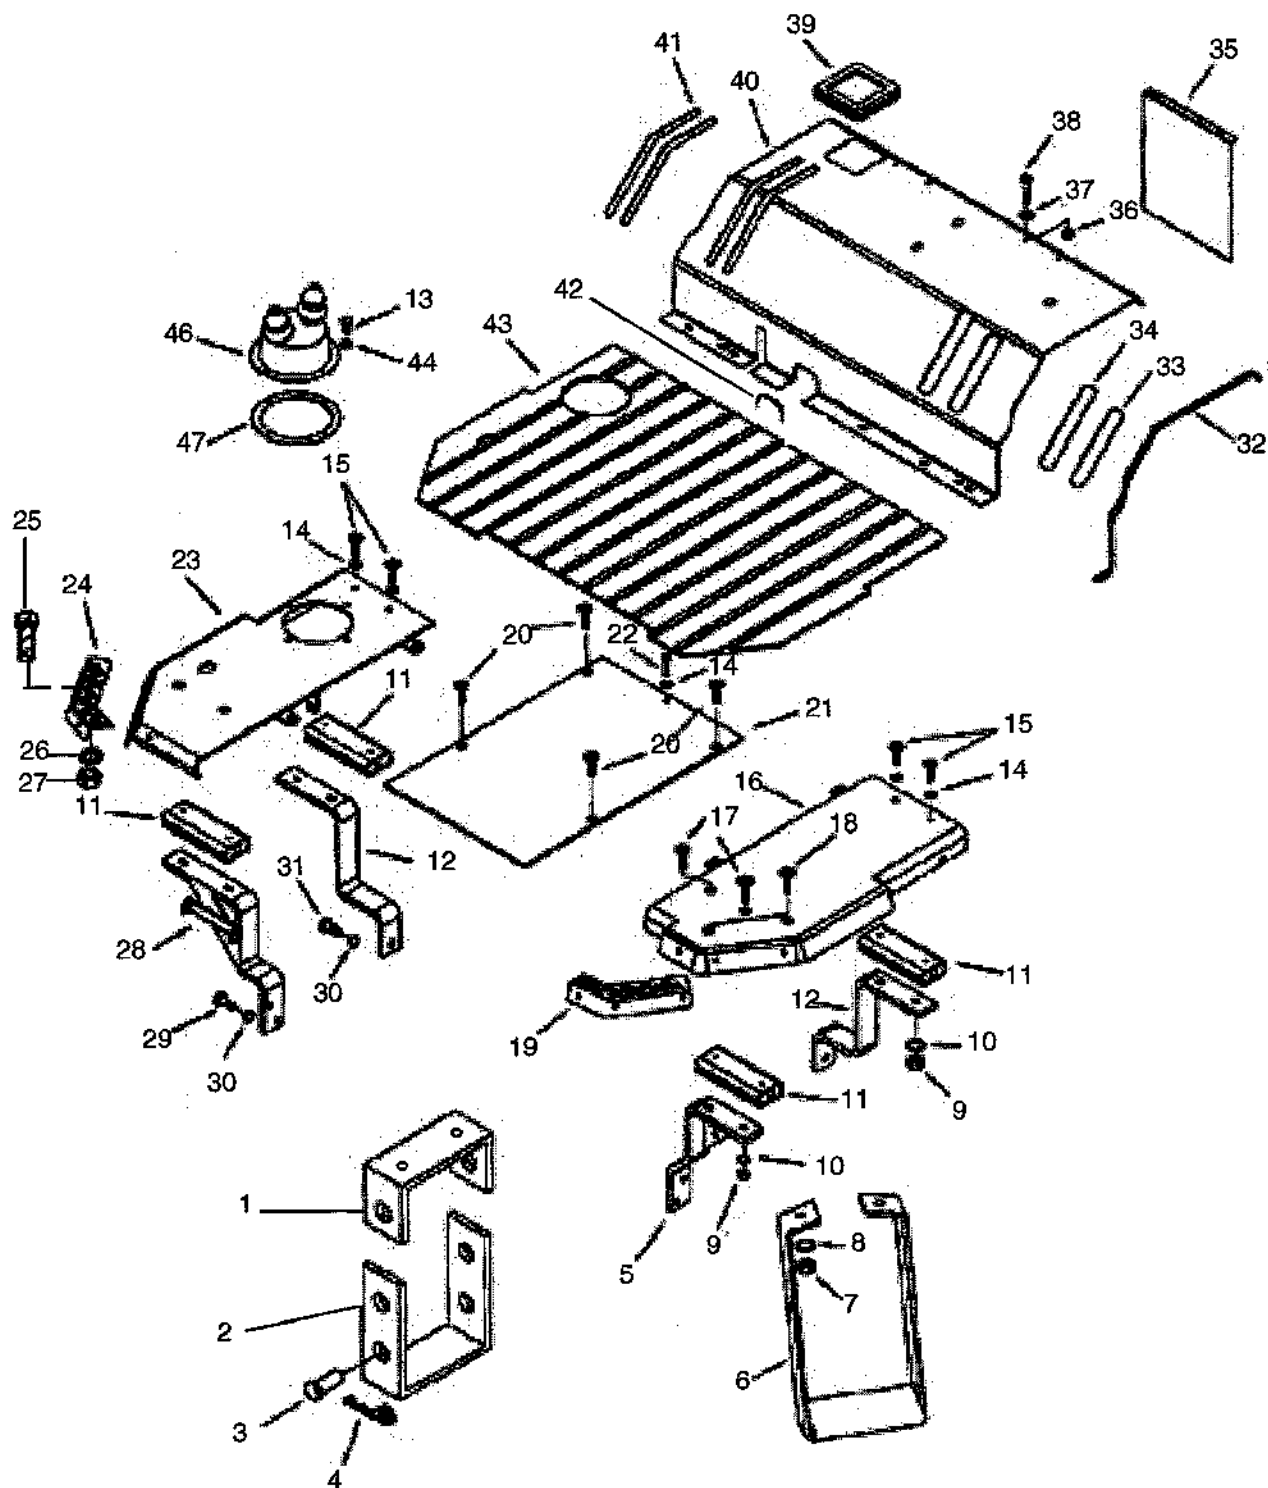

RUNNING BOARD

12:11


Ⓢ - SERIAL NUMBER BREAK,

↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
30	ESL12018	Washer, Lock	D86000060	6	6
31	ESL12653	Bolt (12x1.75x25)	-	2	2
32	ESL13577	Beadring Console, Side	D10042380	2	2
33	ESL13589	Beadring, Parking Brake	-	1	1
34	ESL13588	Beadring, PTO Clutch Lever	-	1	1
35	ESL13576	Cover, Rear Console	D10042850	1	1
36	33796S8	Nut	-	2	2
37	44719S8	Washer	-	2	2
38	ESL12014	Bolt (1/4-28)	D81000390	2	2
39	ESL13580	Beadring, Spool Control Lever	-	1	1
40	ESL13575	Console Rear	-	1	1
41	ESL13579	Beadring, Hydraulic Control Lever	D10042390	2	2
42	ESL13590	Beadring, Flow Control Valve	-	1	1
43	ESL13591	Foot Mat, Platform	-	-	-
-	ESL13592	Foot Mat, Platform	D10045980	1	1
44	N630067S8	Washer, Flat (M6)	-	4	4
45	ESL13595	Ring Transmission Cover Boot	D10042400	1	1
46	ESL13596	Boot Transmission Cover	D10042860	1	1

RUNNING BOARD

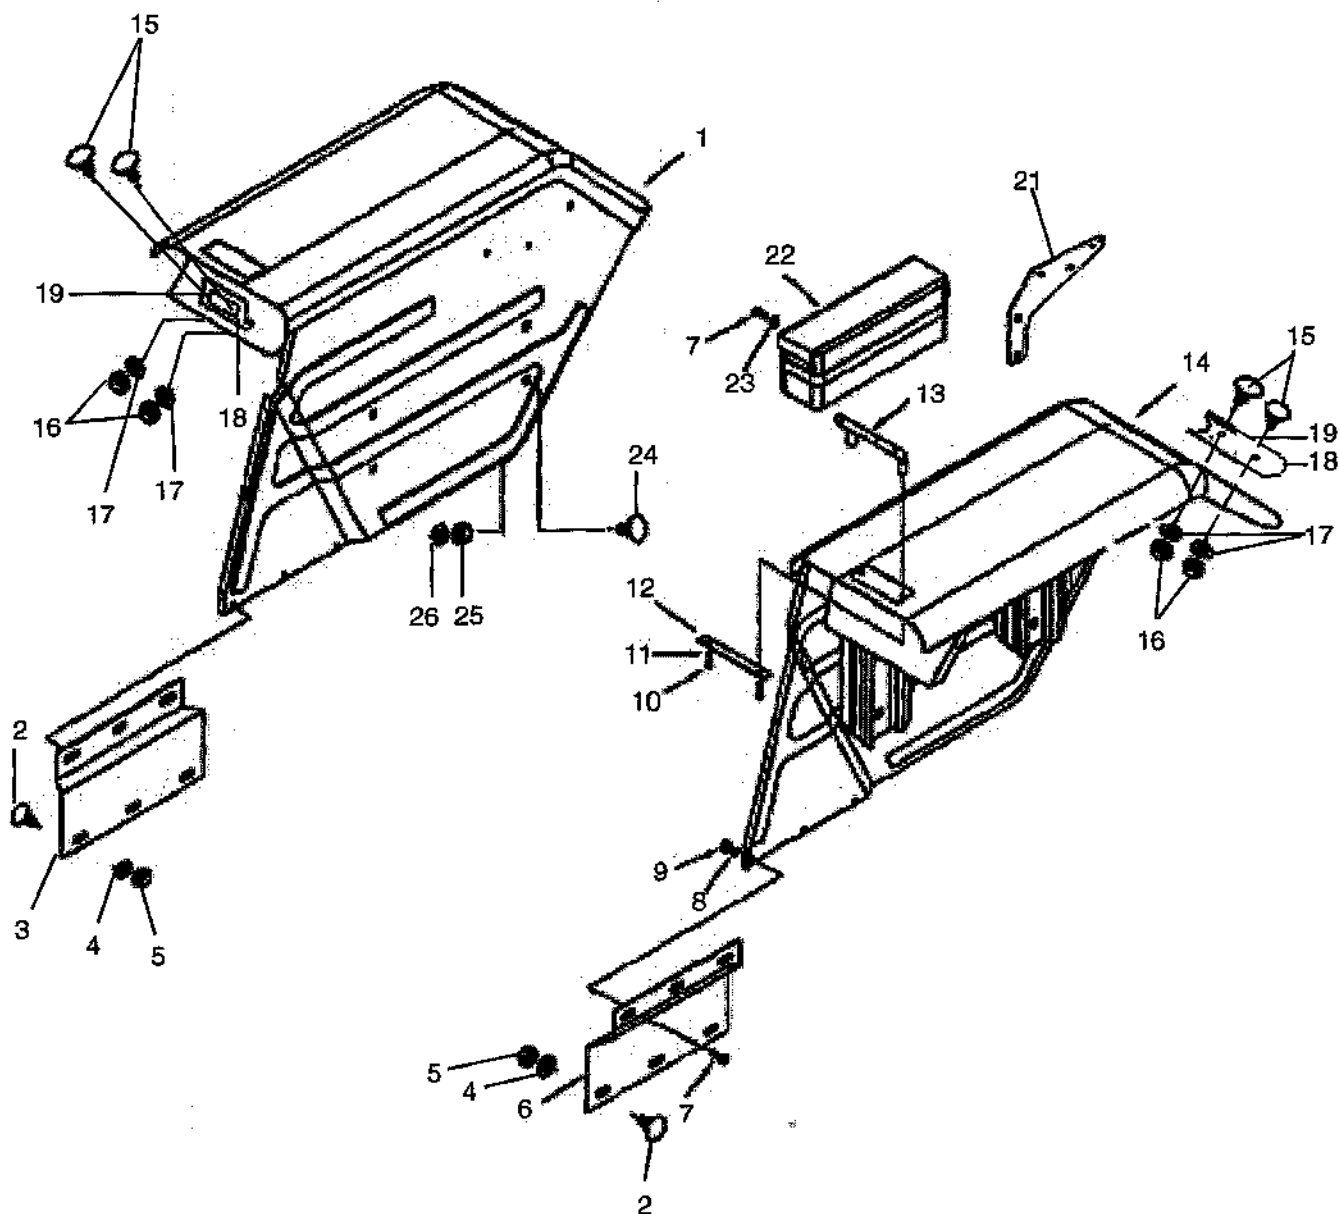


FENDERS

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL13596	Body Assembly, Fender Rear, RH	D10077750	1	1
2	ESL12668	Bolt (M8-1.25x12)	-	4	4
3	ESL13597	Extension, Fender Rear, RH	D10047120	1	1
4	44726S8	Washer, Flat	-	4	4
5	N620013S8	Nut (M8)	-	4	4
6	ESL13599	Extension, Fender Rear, LH	D10047130	1	1
7	ESL12014	Bolt, Hex Head (1/4-28x0.62)	-	9	9
8	44719S8	Washer, Flat (1/4)	-	6	6
9	33796S8	Nut, Flat (1/4-28)	-	6	6
10	304682S8	Bolt, Hex Head (5/16-18x1.00)	-	4	4
11	ESL11975	Washer, Lock (5/16)	-	4	4
12	ESL13602	Plate	-	2	2
13	ESL11555	Hold Down	-	2	2
14	ESL13598	Body Assembly, Fender Rear, LH	-	1	1
15	304647S8	Bolt (1/4-28x3/4)	-	8	8
16	33796S8	Nut, Hex (1/4-28)	-	8	8
17	34805S8	Washer, Lock (1/4)	-	8	8
18	905976	Rear Reflector Bracket	-	4	4
19	906010	Amber Reflector Decal	-	4	4
20	906011	Plug, Hole (3/4) (NI) For Fender Holes	-	4	4
21	ESL13270	Toolbox Mounting Bracket	-	1	1
22	ESL13600	Box Assembly, Tool	-	1	1
23	34941S8	Washer, External Tooth (5/16)	-	3	3
24	58851S8	Bolt, Carriage (1/2-13x1.5)	-	8	8
25	44734S8	Washer, Flat (1/2)	-	8	8
26	33845S8	Nut, Hex (1/2-13)	-	8	8

FENDERS

665 / 665 DTC

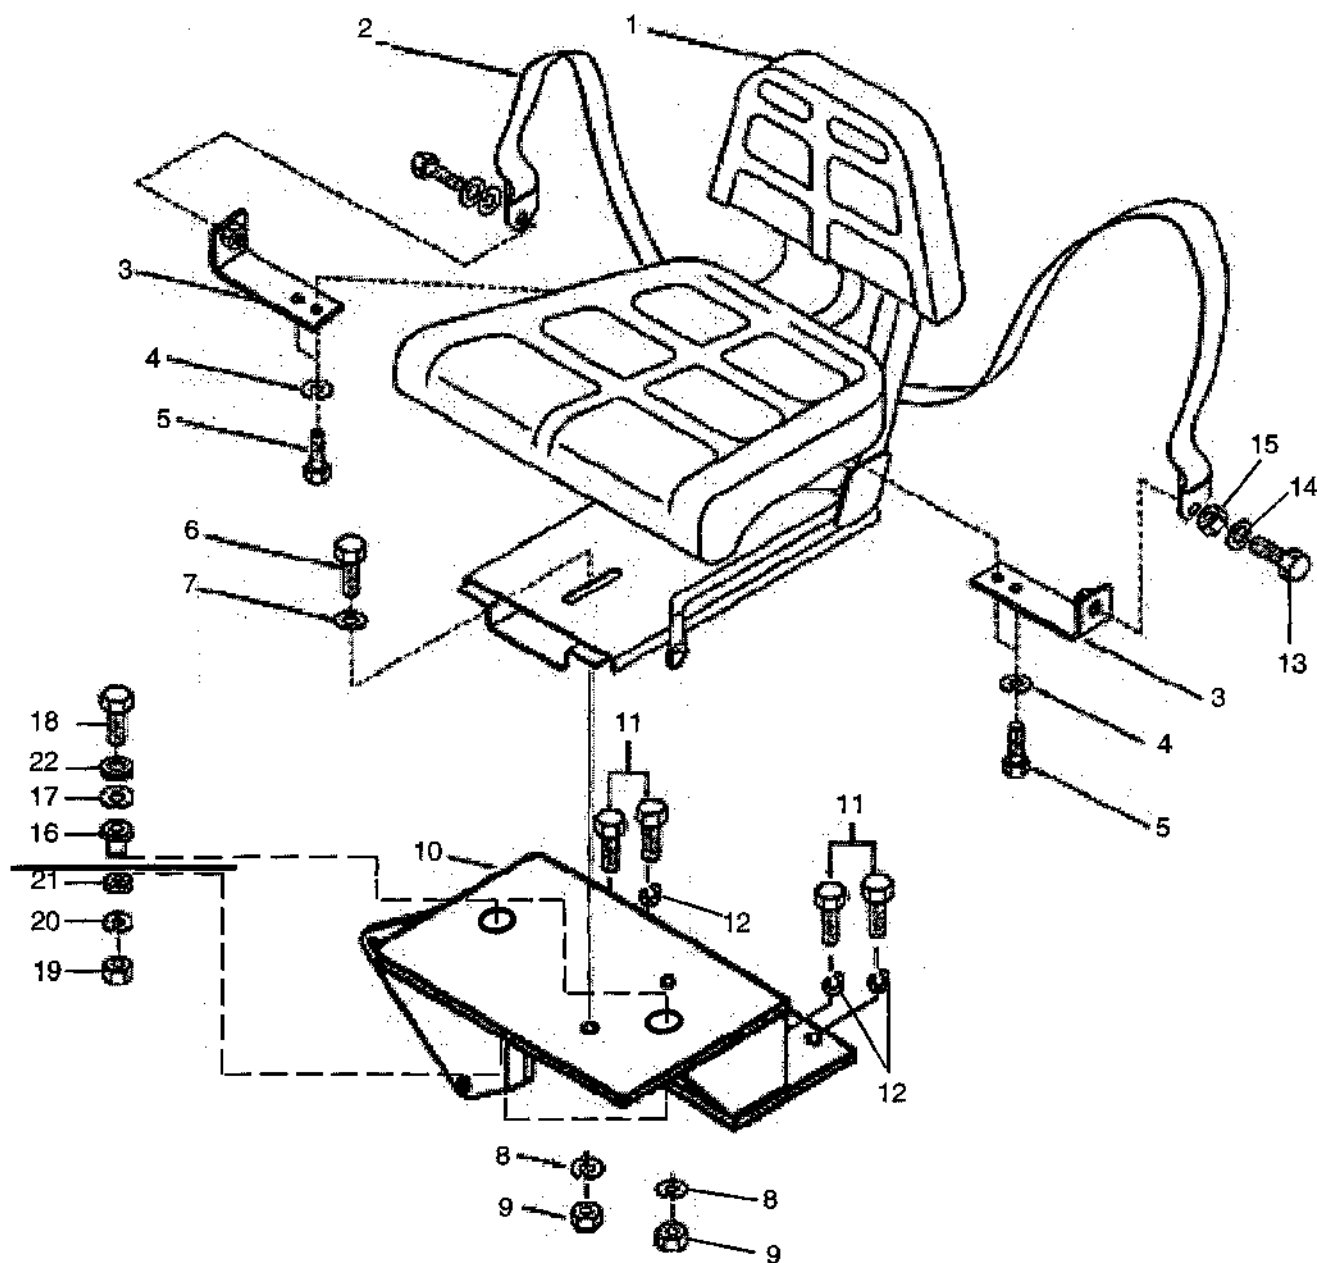

DELUXE SEAT ASSEMBLY

12:15

Ⓢ - SERIAL NUMBER BREAK, ↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	904201	Seat Assembly, Driver	-	1	1
2	ESL11584	Belt, Driver Seat	D10081530	1	1
3	-	Bracket	-	1	1
4	-	Washer	-	1	1
5	-	Bolt	-	1	1
6	304724S8	Bolt, Hex Head (7/16-14x1.25)	-	2	2
7	ESL12074	Washer, Flat (7/16)	D85000090	2	2
8	44722S8	Washer, Lock (7/16)	-	2	2
9	34670S8	Nut, Hex (7/16-14)	-	2	2
10	ESL13603	Support Seat Mounting	-	-	-
-	ESL13604	Support Seat Mounting	-	1	1
11	N601805S8	Bolt (M14x2x25)	-	-	-
12	N630187S8	Washer, Lock (M14)	-	4	4
13	ESL12841	Bolt, Hex (M8x1.25x25)	-	-	-
14	N630068S8	Washer (M8)	-	-	-
15	N620013S8	Nut (M8)	-	-	-
16	905996	Rubber Mount	-	-	-
17	905947	Washer, Rubber Mount, Thrust	-	-	-
18	N600417S8	Bolt	-	1	1
19	N620603S8	Nut	-	1	1
20	34809S8	Washer, Lock	-	1	1
21	905998	Mount Washer, Small	-	1	1
22	788443	Spacer (1.50-0.750-0.500)	-	1	1

DELUXE SEAT ASSEMBLY

665 / 665 DTC


ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665DTC
1	905718	Roll Bar	-	1	1
2	304940S8	Bolt, Hex Head (1/2-13x3 1/2) GR5	-	2	2
3	902480	Pin, Clevis Assembly	-	2	2
4	34979S8	Nut, Prev. Torque (1/2-13) GR5	-	2	2
5	34811S8	Washer, Lock (5/8)	-	8	8
6	33849S8	Nut, Hex (1/4-20) GR5	-	8	8
7	301342S8	Bolt, Hex Head (1/2-13x9) GR5	-	4	4
8	301333S8	Bolt, Hex Head (1/2-13x8 1/2) GR5	-	4	4
9	905732	Link, LH W/A	-	1	1
10	905733	Link, RH W/A	-	1	1
11	905782	Lollipop Signal Light, RH	-	1	1
12	905781	Lollipop Signal Light, LH	-	1	1
13	N600218S8	Bolt (8mmx1.25x65mm)	-	4	4
14	N630173S8	Washer, Lock (8MM)	-	4	4

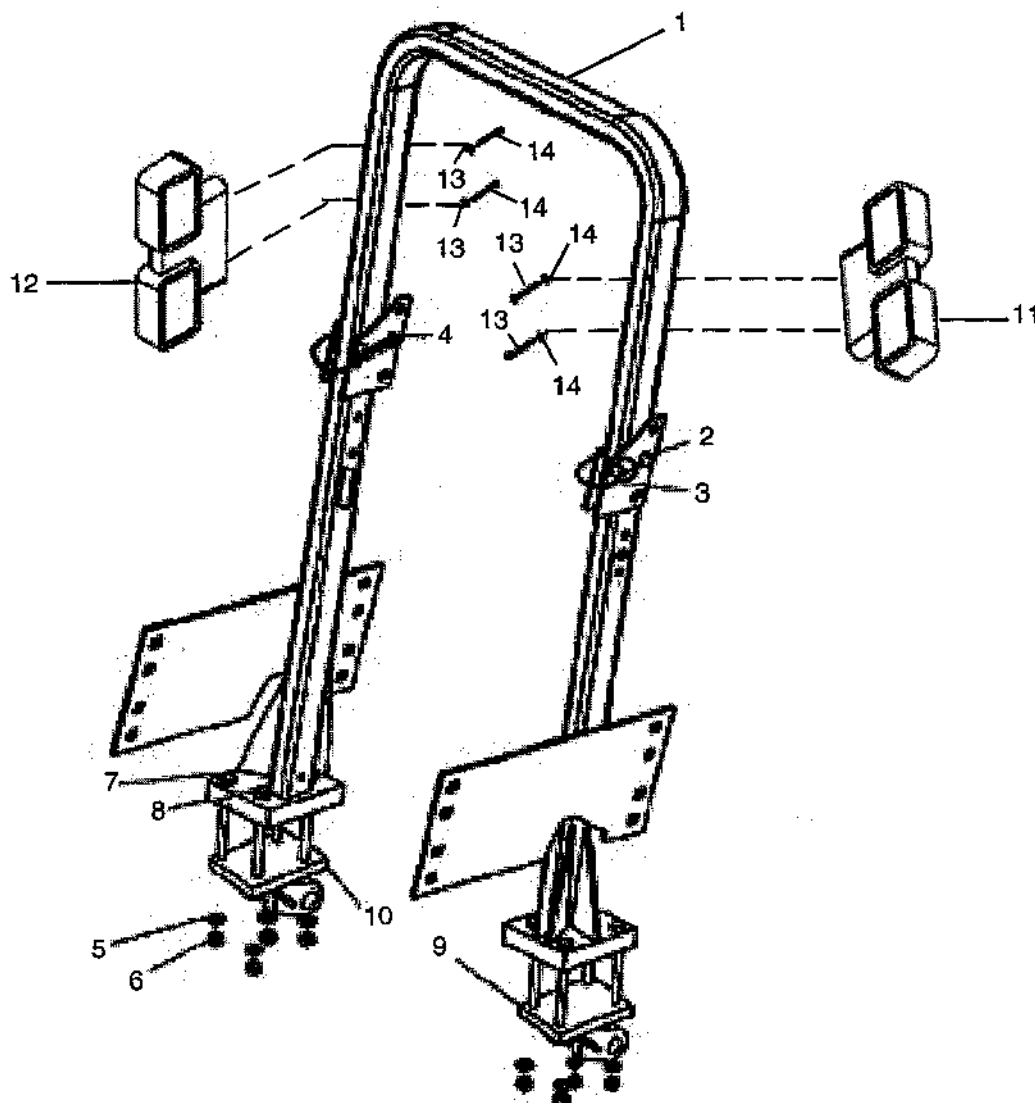

ROPS

DECALS

665 / 665 DTC

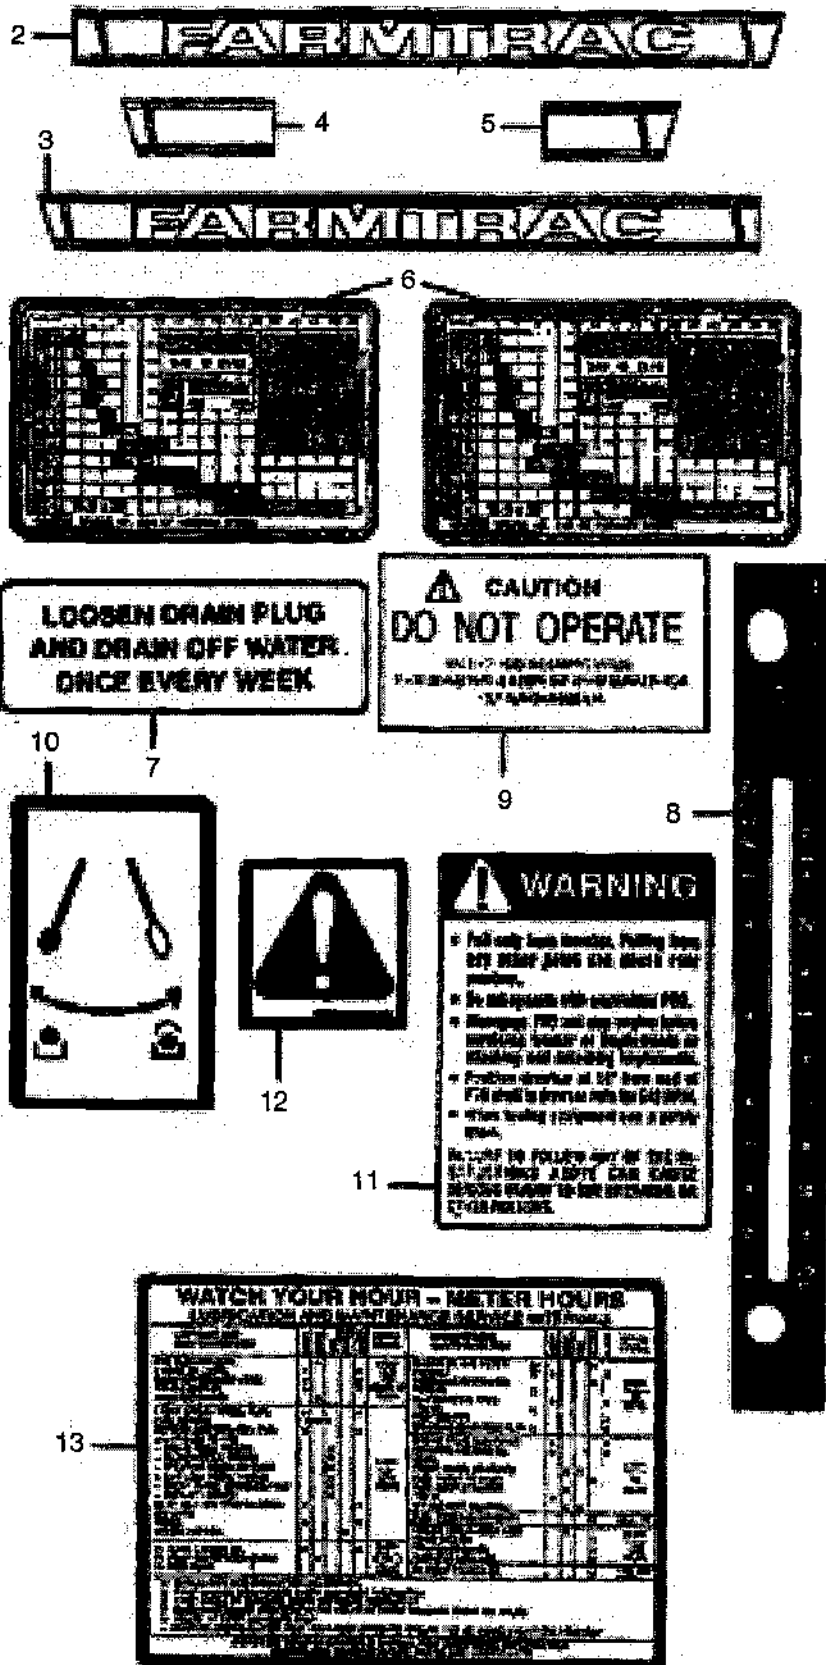

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL15610	Decal, M1 Front 665	-	-	-
-	ESL15607	Decal, M1 Front 665 DTC	-	1	-
2	ESL11611	Decal, Model Identification Center, RH	D10019430	1	1
-	ESL14543	Decal, Model Identification Center, RH	D10035270	-	-
3	ESL11610	Decal, Model Identification Center, LH	D10019440	1	1
-	ESL14544	Decal, Model Identification, Center, LH	D10035280	-	-
4	ESL11613	Decal, Model Identification, Rear, LH	D10019120	1	1
5	ESL11614	Decal, Model Identification, Rear, RH	D10019130	1	1
6	ESL11616	Decal, Transmission Shift Pattern	D10019680	1	1
-	ESL14545	Decal, Transmission Shift Pattern	D10035520	-	-
7	ESL11622	Decal, Filter Cleanliness	D10017640	2	2
8	ESL11618	Decal, Hydraulic Pump & Lift	D10018600	1	1
9	ESL13697	Decal, Caution	D10026810	1	1
10	ESL11628	Decal, PTO Control	D10019220	1	1
11	ESL14546	Decal, PTO Guard (NI)	D10000000	1	1
12	ESL13618	Decal, Warning Sign	D10018580	1	1
13	ESL11621	Decal, Tractor Maintenance Service	D10019110	1	1

DECALS

665 / 665 DTC

14

15

16

17

18

21

23

24

25

665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665	665 DTC
14	ESL11637	Decal, Warning Instructions	D10019210	1	1
15	ESL13696	Decal, Seat Belt	D10026800	1	1
16	ESL13695	Decal, Tractor Warning	D10026790	1	1
17	ESL13694	Decal, Torque	D10026780	1	1
18	ESL13693	Decal, Starting Warning	D10026770	1	1
19	ESL13619	Heat Reflective Tape	D10019190	1	1
20	ESL11617	Decal, Operator Instruction (NI)	D10017890	1	1
21	ESL11623	Decal, Fuse Box	D10039920	1	1
22	ESL11640	Decal, Thermostat (NI)	D10026850	1	1
23	ESL11639	Decal, Battery Warning	D10018620	1	1
24	ESL11632	Decal, Warranty Disclaimer	D10026840	1	1
25	ESL11633	Plate, Vehicle Identification	D10026860	1	1
26	ESL14547	Decal, EPA Engine (NI)	D10035530	-	-
-	ESL14548	Decal, EPA Engine (NI)	-	-	-
-	ESL14549	Decal, EPA Engine (NI)	D10077700	2	2

DECALS


665 / 665 DTC

ITEM NO	PART NO.	DESCRIPTION	QUANTITY
1	904540	Decal Sheet	1 1

[illegible]

OPTIONS

665 / 665 DTC

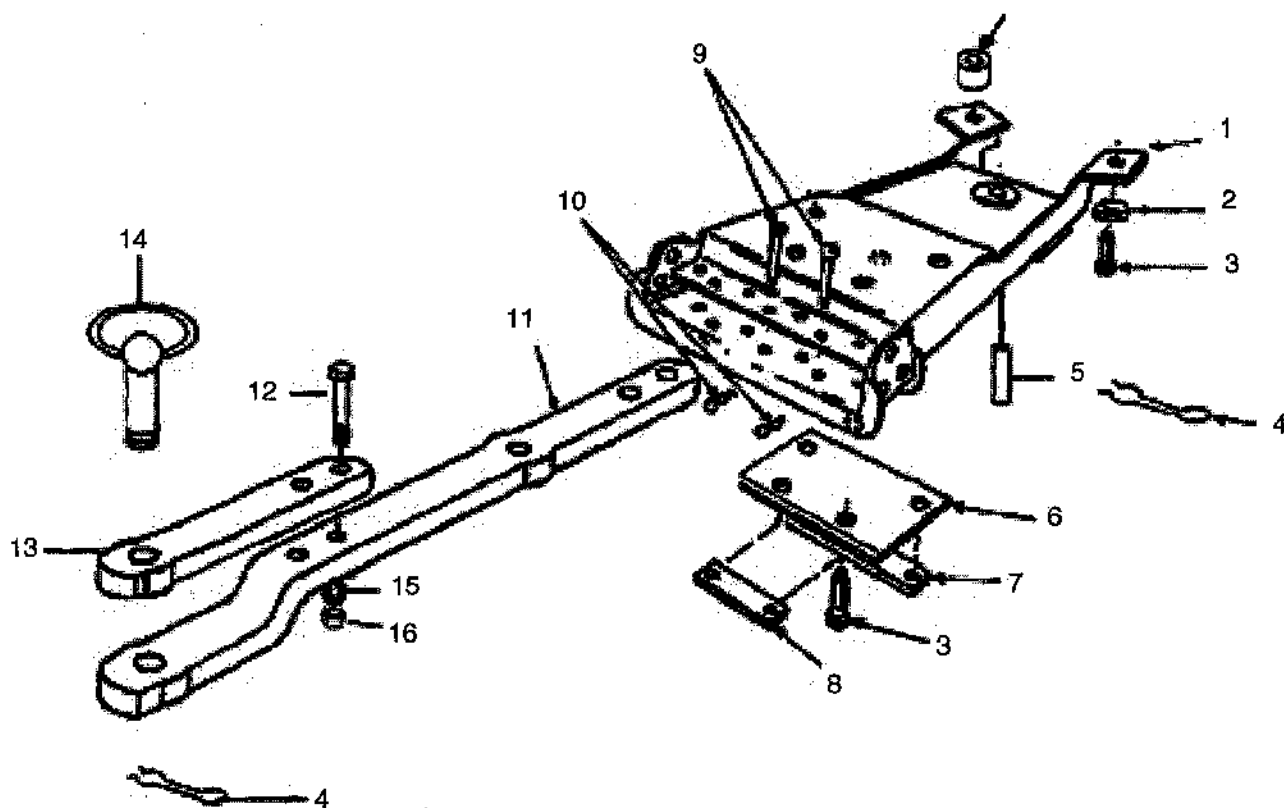

SWINING DRAWBAR

14.1


Ⓢ - SERIAL NUMBER BREAK,

↙ - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER

665 / 665 DTC

<i>ITEM No.</i>	<i>PART No.</i>	<i>DESCRIPTION</i>	<i>VENDOR No.</i>	<i>QUANTITY</i>	
				665 665 DTC	
1	ESL12589	Hanger Assembly, Drawbar	D10027210	1	1
2	ESL11712	Washer, Drawbar Hanger	D10027310	2	2
3	304768S8	Bolt, Hex (5/8-11x1.50)	-	6	6
4	ESL11169	Spring, Drawbar Pin	D10027270	2	2
5	ESL11877	Pin Drawbar	D10027250	1	1
6	ESL11172	Plate, Drawbar Hanger	D10027220	1	1
7	ESL11176	Strap	D10027300	1	1
8	ESL11175	Strap	D10027290	1	1
9	ESL11177	Pin, Drawbar Adjusting	D10027240	2	2
10	ESL12590	Pin, Clip	D10026210	2	2
11	ESL12588	Drawbar Swinging	D10027230	1	1
12	ESL12599	Bolt (5/8-11x3.50)	D81000750	2	2
13	ESL13713	Strap Drawbar Clevis	D10027280	1	1
14	ESL13714	Pin Drawbar Clevis	D10027260	1	1
15	34811S8	Washer, Lock (5/8)	-	2	2
16	33849S8	Nut, Hex (5/8-11)	-	2	2

SWINGING DRAWBAR

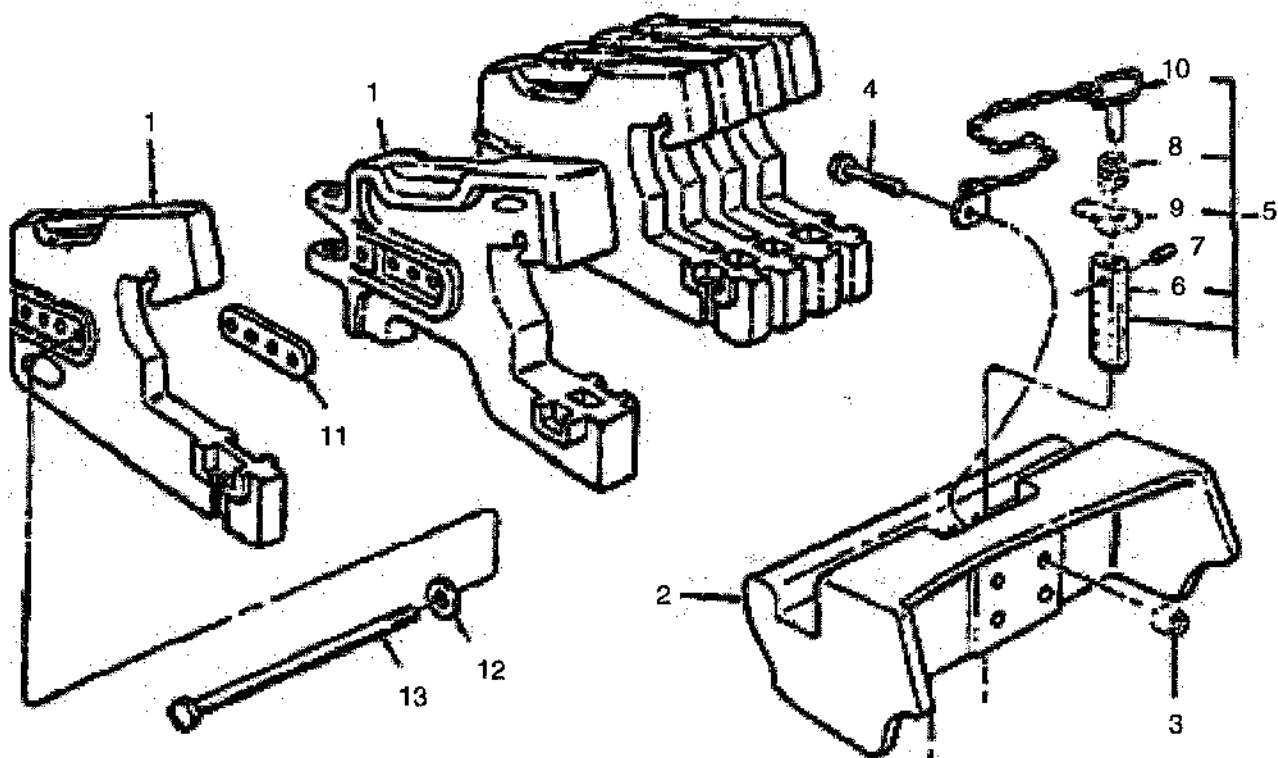

FRONT END WEIGHTS


665 / 665 DTC

ITEM No.	PART No.	DESCRIPTION	VENDOR No.	QUANTITY	
				665 665 DTC	
1	ESL13626	Weight, Front End	D10039410	6	6
2	ESL13627	Carrier, Front End Weight	D10039420	1	1
3	ESL13628	Spacer	-	4	4
4	304946S8	Bolt, Hex Head (3/4-10x3.50)	-	4	4
5	ESL13629	Pin Assembly, Front End Weight Retainer	D10039400	1	1
6	ESL13630	Pin, Front Weight Retainer	-	1	1
7	ESL13631	Pin	-	1	1
8	ESL13632	Spring, Front End Weight Retainer	-	1	1
9	ESL13633	Bracket, Front End Retainer	-	1	1
10	ESL13634	Chain & Clevis Only	D10042800	1	1
11	ESL13635	Plate, Front End Weight Clamp	-	1	1
12	E630038S8	Washer, Flat (M16)	-	4	4
13	82835166	Bolt, Front End Weight	-	4	4

FRONT END WEIGHTS

665 / 665 DTC

ITEM No	PART No.	DESCRIPTION	VENDOR No.	QUANTITY 665 665 DTC	
1	ESL10924	Weight, Rear Wheel Center (NSS)	-	2	2
2	380304S8	Bolt, Square Head (5/8-11x3.00)	-	12	12
3	34811S8	Washer, Lock (5/8)	-	18	18
4	33849S8	Nut, Hex (5/8-11)	-	18	18
5	-	Washer, Weight Bolt Retainer (NSS)	-	12	12
6	ESL10926	Weight, Rear Wheel Auxiliary (NSS)	-	4	4
7	304933S8	Bolt, Hex Head (5/8-11x3.25)	-	6	6
8	ESL10925	Spacer, Rear Wheel Weight (NSS)	-	6	6

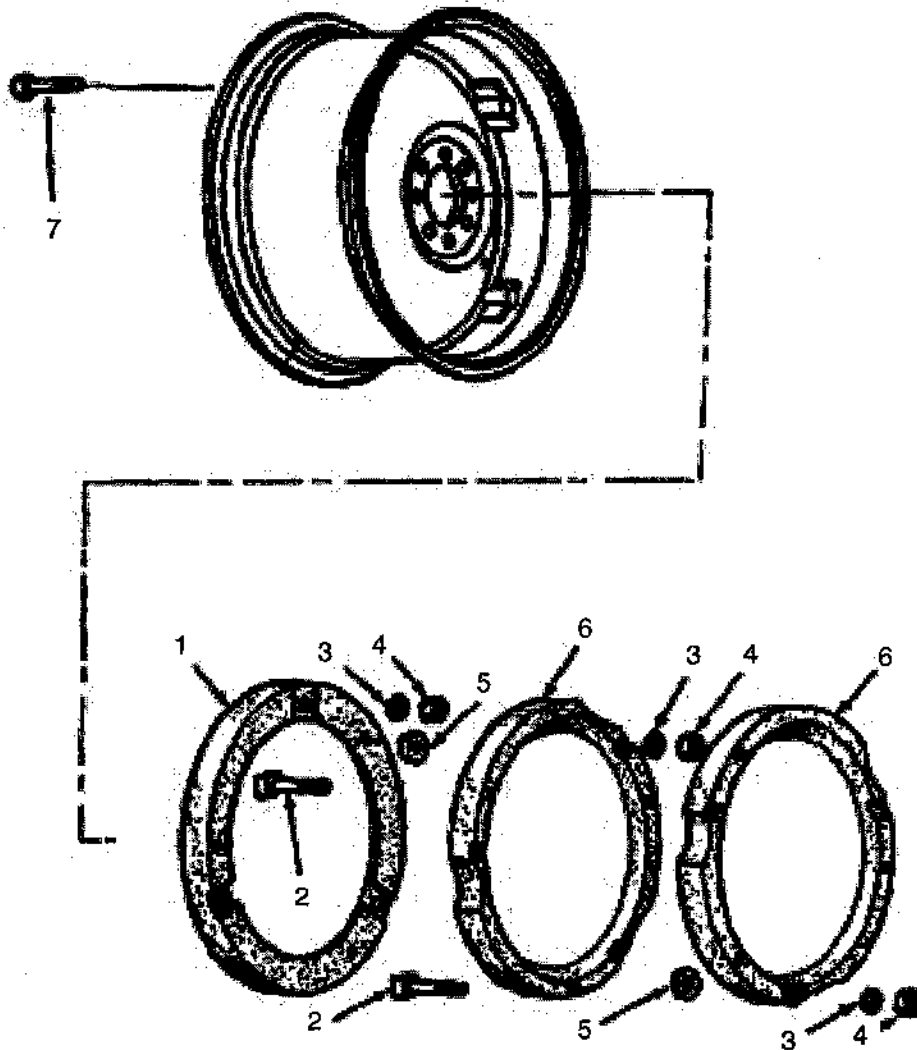

REAR WHEEL WEIGHTS

14:5

Ⓢ - SERIAL NUMBER BREAK, - INDICATES UP TO AND INCLUDING THAT SERIAL NUMBER